

TMS320C6000 DSP/BIOS 5.32 Application Programming Interface (API) Reference Guide

Literature Number: SPRU403O
September 2007



IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

Products		Applications	
Amplifiers	amplifier.ti.com	Audio	www.ti.com/audio
Data Converters	dataconverter.ti.com	Automotive	www.ti.com/automotive
DSP	dsp.ti.com	Broadband	www.ti.com/broadband
Interface	interface.ti.com	Digital Control	www.ti.com/digitalcontrol
Logic	logic.ti.com	Military	www.ti.com/military
Power Mgmt	power.ti.com	Optical Networking	www.ti.com/opticalnetwork
Microcontrollers	microcontroller.ti.com	Security	www.ti.com/security
RFID	www.ti-rfid.com	Telephony	www.ti.com/telephony
Low Power Wireless	www.ti.com/lpw	Video & Imaging	www.ti.com/video
		Wireless	www.ti.com/wireless

Read This First

About This Manual

DSP/BIOS gives developers of mainstream applications on Texas Instruments TMS320C6000™ DSP devices the ability to develop embedded real-time software. DSP/BIOS provides a small firmware real-time library and easy-to-use tools for real-time tracing and analysis.

You should read and become familiar with the *TMS320 DSP/BIOS User's Guide*, a companion volume to this API reference guide.

Before you read this manual, you may use the *Code Composer Studio* online tutorial and the DSP/BIOS section of the online help to get an overview of DSP/BIOS. This manual discusses various aspects of DSP/BIOS in depth and assumes that you have at least a basic understanding of DSP/BIOS.

Notational Conventions

This document uses the following conventions:

- Program listings, program examples, and interactive displays are shown in a special typeface. Examples use a **bold version** of the special typeface for emphasis; interactive displays use a **bold version** of the special typeface to distinguish commands that you enter from items that the system displays (such as prompts, command output, error messages, etc.).

Here is a sample program listing:

```
Void copy(HST_Obj *input, HST_Obj *output)
{
    PIP_Obj      *in, *out;
    Uns          *src, *dst;
    Uns          size;
}
```

- ❑ Square brackets ([and]) identify an optional parameter. If you use an optional parameter, you specify the information within the brackets. Unless the square brackets are in a **bold** typeface, do not enter the brackets themselves.
- ❑ Throughout this manual, 62 represents the two-digit numeric appropriate to your specific DSP platform. For the C64x or C67x DSP platform, substitute either 64 or 67 for each occurrence of 62.
- ❑ Information specific to a particular device is designated with one of the following icons:



Related Documentation From Texas Instruments

The following books describe TMS320 devices and related support tools. To obtain a copy of any of these TI documents, call the Texas Instruments Literature Response Center at (800) 477-8924. When ordering, please identify the book by its title and literature number.

TMS320 DSP/BIOS User's Guide (literature number SPRU423) provides an overview and description of the DSP/BIOS real-time operating system.

TMS320C6000 Optimizing C Compiler User's Guide (literature number SPRU187) describes the c6000 C/C++ compiler and the assembly optimizer. This C/C++ compiler accepts ANSI standard C/C++ source code and produces assembly language source code for the C6000 generation of devices.

TMS320C6000 Programmer's Guide (literature number SPRU189) describes the c6000 CPU architecture, instruction set, pipeline, and interrupts for these digital signal processors.

TMS320c6000 Peripherals Reference Guide (literature number SPRU190) describes common peripherals available on the TMS320C6000 family of digital signal processors. This book includes information on the internal data and program memories, the external memory interface (EMIF), the host port, multichannel buffered serial ports, direct memory access (DMA), clocking and phase-locked loop (PLL), and the power-down modes.

TMS320C6000 Code Composer Studio Tutorial Online Help (literature number SPRH125) introduces the Code Composer Studio integrated development environment and software tools. Of special interest to DSP/BIOS users are the *Using DSP/BIOS* lessons.

TMS320C6000 Chip Support Library API Reference Guide (literature number SPRU401) contains a reference for the Chip Support Library (CSL) application programming interfaces (APIs). The CSL is a set of APIs used to configure and control all on-chip peripherals.

Related Documentation

You can use the following books to supplement this reference guide:

The C Programming Language (second edition), by Brian W. Kernighan and Dennis M. Ritchie, published by Prentice-Hall, Englewood Cliffs, New Jersey, 1988

Programming in C, Kochan, Steve G., Hayden Book Company

Programming Embedded Systems in C and C++, by Michael Barr, Andy Oram (Editor), published by O'Reilly & Associates; ISBN: 1565923545, February 1999

Real-Time Systems, by Jane W. S. Liu, published by Prentice Hall; ISBN: 013099651, June 2000

Principles of Concurrent and Distributed Programming (Prentice Hall International Series in Computer Science), by M. Ben-Ari, published by Prentice Hall; ISBN: 013711821X, May 1990

American National Standard for Information Systems-Programming Language C X3.159-1989, American National Standards Institute (ANSI standard for C); (out of print)

Trademarks

MS-DOS, Windows, and Windows NT are trademarks of Microsoft Corporation.

The Texas Instruments logo and Texas Instruments are registered trademarks of Texas Instruments. Trademarks of Texas Instruments include: TI, XDS, Code Composer, Code Composer Studio, Probe Point, Code Explorer, DSP/BIOS, RTDX, Online DSP Lab, BIOSuite, SPOX, TMS320, TMS320C28x, TMS320C54x, TMS320C55x, TMS320C62x, TMS320C64x, TMS320C67x, TMS320C5000, and TMS320C6000.

All other brand or product names are trademarks or registered trademarks of their respective companies or organizations.



Contents

1	API Functional Overview	1-1
	<i>This chapter provides an overview to the TMS320C6000 DSP/BIOS API functions.</i>	
1.1	DSP/BIOS Modules	1-2
1.2	Naming Conventions	1-4
1.3	Assembly Language Interface Overview	1-4
1.4	DSP/BIOS Tconf Overview	1-4
1.5	List of Operations	1-6
2	Application Program Interface	2-1
	<i>This chapter describes the DSP/BIOS API modules and functions.</i>	
2.1	ATM Module	2-2
2.2	BCACHE Module	2-15
2.3	BUF Module	2-31
2.4	C62 and C64 Modules	2-42
2.5	CLK Module	2-51
2.6	DEV Module	2-71
2.7	ECM Module	2-122
2.8	GBL Module	2-131
2.9	GIO Module	2-146
2.10	HOOK Module	2-165
2.11	HST Module	2-171
2.12	HWI Module	2-176
2.13	IDL Module	2-205
2.14	LCK Module	2-209
2.15	LOG Module	2-216
2.16	MBX Module	2-233
2.17	MEM Module	2-239
2.18	MPC Module	2-263
2.19	MSGQ Module	2-273
2.20	PIP Module	2-309
2.21	POOL Module	2-329
2.22	PRD Module	2-334
2.23	QUE Module	2-342
2.24	RTDX Module	2-359
2.25	SEM Module	2-375
2.26	SIO Module	2-388

2.27	STS Module	2-418
2.28	SWI Module	2-428
2.29	SYS Module	2-457
2.30	TRC Module	2-473
2.31	TSK Module	2-478
2.32	std.h and stdlib.h functions	2-516
A	Function Callability and Error Tables	A-1
	<i>This appendix provides tables describing TMS320C6000 errors and function callability.</i>	
A.1	Function Callability Table	A-2
A.2	DSP/BIOS Error Codes	A-11
B	C6000 DSP/BIOS Register Usage	B-1
	<i>This appendix provides tables describing the TMS320C6000TM register conventions in terms of preservation across multi-threaded context switching and preconditions.</i>	
B.1	Overview	B-2
B.2	Register Conventions	B-2
C	C64x+ Exception Support	C-1
	<i>This appendix provides describes support for C64x+ exception handling.</i>	
C.1	C64x+ Exception Support	C-2
C.2	Using the DSP/BIOS EXC Module	C-3
C.3	Data Types and Macros	C-6
C.4	EXC Module	C-7
C.5	_MPC Module	C-16

Figures

2-1	Writers and Reader of a Message Queue	2-276
2-2	Components of the MSGQ Architecture	2-277
2-3	MSGQ Function Calling Sequence	2-277
2-4	Pipe Schematic	2-311
2-5	Allocators and Message Pools.....	2-330
2-6	Buffer Layout as Defined by STATICPOOL_Params	2-332
2-7	PRD Tick Cycles	2-339
2-8	Statistics Accumulation on the Host.....	2-421

Tables

1-1	DSP/BIOS Modules	1-2
1-2	DSP/BIOS Operations	1-6
2-1	Timer Counter Rates, Targets, and Resets	2-53
2-2	High-Resolution Time Determination	2-54
2-4	HWI interrupts for the TMS320C6000	2-185
2-5	Conversion Characters for LOG_printf	2-227
2-6	Typical Memory Segments for c6x EVM Boards.....	2-251
2-7	Typical Memory Segment for c6711 DSK Boards	2-251
2-8	Statistics Units for HWI, PIP, PRD, and SWI Modules	2-419
2-9	Conversion Characters Recognized by SYS_printf	2-464
2-10	Conversion Characters Recognized by SYS_sprintf	2-466
2-11	Conversion Characters Recognized by SYS_vprintf	2-468
2-12	Conversion Characters Recognized by SYS_vsprintf	2-470
2-13	Events and Statistics Traced by TRC.....	2-473
A-1	Function Callability.....	A-2
A-2	RTS Function Calls	A-10
A-3	Error Codes.....	A-11
B-1	Register and Status Bit Handling	B-2

API Functional Overview

This chapter provides an overview to the TMS320C6000 DSP/BIOS API functions.

Topic	Page
1.1 DSP/BIOS Modules	1-2
1.2 Naming Conventions	1-4
1.3 Assembly Language Interface Overview	1-4
1.4 DSP/BIOS Tconf Overview	1-4
1.5 List of Operations	1-6

1.1 DSP/BIOS Modules

Table 1-1. DSP/BIOS Modules

Module	Description
ATM Module	Atomic functions written in assembly language
BCACHE Module	Cache operation manager (C64x+ only)
BUF Module	Maintains buffer pools of fixed size buffers
C62 and C64 Modules	Target-specific functions
CLK Module	System clock manager
DEV Module	Device driver interface
ECM Module	Event combiner manager (C64x+ only)
EXC Module	Exception manager (C64x+ only)
GBL Module	Global setting manager
GIO Module	I/O module used with IOM mini-drivers
HOOK Module	Hook function manager
HST Module	Host channel manager
HWI Module	Hardware interrupt manager
IDL Module	Idle function and processing loop manager
LCK Module	Resource lock manager
LOG Module	Event Log manager
MBX Module	Mailboxes manager
MEM Module	Memory manager
MPC Module	Memory protection manager (C64x+ only)
MSGQ Module	Variable-length message manager
PIP Module	Buffered pipe manager
POOL Module	Allocator interface module
PRD Module	Periodic function manager
QUE Module	Queue manager
RTDX Module	Real-time data exchange manager
SEM Module	Semaphores manager
SIO Module	Stream I/O manager
STS Module	Statistics object manager
SWI Module	Software interrupt manager
SYS Module	System services manager

Module	Description
TRC Module	Trace manager
TSK Module	Multitasking manager
std.h and stdlib.h functions	Standard C library I/O functions

1.2 Naming Conventions

The format for a DSP/BIOS operation name is a 3- or 4-letter prefix for the module that contains the operation, an underscore, and the action.

1.3 Assembly Language Interface Overview

The assembly interface that was provided for some of the DSP/BIOS APIs has been deprecated. They are no longer documented.

Assembly functions can call C functions. Remember that the C compiler adds an underscore prefix to function names, so when calling a C function from assembly, add an underscore to the beginning of the C function name. For example, call `_myfunction` instead of `myfunction`. See the *TMS320C6000 Optimizing Compiler User's Guide* for more details.

When you are using the DSP/BIOS Configuration Tool, use a leading underscore before the name of any C function you configure. (The DSP/BIOS Configuration Tool generates assembly code, but does not add the underscore automatically.) If you are using `Tconf`, do not add an underscore before the function name; `Tconf` internally adds the underscore needed to call a C function from assembly.

All DSP/BIOS APIs follow standard C calling conventions as documented in the C programmer's guide for the device you are using.

DSP/BIOS APIs save and restore context for each thread during a context switch. Your code should simply follow standard C register usage conventions. Code written in assembly language should be written to conform to the register usage model specified in the C compiler manual for your device. When writing assembly language, take special care to make sure the C context is preserved. For example, if you change the AMR register on the 'C6000, you should be sure to change it back before returning from your assembly language routine. See the Register Usage appendix in this book to see how DSP/BIOS uses specific registers.

1.4 DSP/BIOS Tconf Overview

The section describing each modules in this manual lists properties that can be configured in `Tconf` scripts, along with their types and default values. The sections on manager properties and instance properties also provide `Tconf` examples that set each property.

For details on `Tconf` scripts, see the *DSP/BIOS Tconf User's Guide* (SPRU007). The language used is JavaScript with an object model specific to the needs of DSP/BIOS configuration.

In general, property names of Module objects are in all uppercase letters. For example, "STACKSIZE". Property names of Instance objects begin with a lowercase word. Subsequent words have their first letter capitalized. For example, "stackSize".

Default values for many properties are dependent on the values of other properties. The defaults shown are those that apply if related property values have not been modified. The defaults shown are for 'C62x and 'C67x. Memory segment defaults are different for 'C64x. Default values for many HWI properties are different for each instance.

The data types shown for the properties are not used as syntax in Tconf scripts. However, they do indicate the type of values that are valid for each property. The types used are as follows:

- ❑ **Arg.** Arg properties hold arguments to pass to program functions. They may be strings, integers, labels, or other types as needed by the program function.
- ❑ **Bool.** You may assign a value of either true or 1 to set a Boolean property to true. You may assign a value of either false or 0 (zero) to set a Boolean property to false. Do not set a Boolean property to the quoted string "true" or "false".
- ❑ **EnumInt.** Enumerated integer properties accept a set of valid integer values. These values are displayed in a drop-down list in the DSP/BIOS Configuration Tool.
- ❑ **EnumString.** Enumerated string properties accept certain string values. These values are displayed in a drop-down list in the DSP/BIOS Configuration Tool.
- ❑ **Extern.** Properties that hold function names use the Extern type. In order to specify a function Extern, use the prog.extern() method as shown in the examples to refer to objects defined as asm, C, or C++ language symbols. The default language is C.
- ❑ **Int16.** Integer properties hold 16-bit unsigned integer values. The value range accepted for a property may have additional limits.
- ❑ **Int32.** Long integer properties hold 32-bit unsigned integer values. The value range accepted for a property may have additional limits.
- ❑ **Numeric.** Numeric properties hold either 32-bit signed or unsigned values or decimal values, as appropriate for the property.
- ❑ **Reference.** Properties that reference other configured objects contain an object reference. Use the prog.get() method to specify a reference to another object.
- ❑ **String.** String properties hold text strings.

1.5 List of Operations

Table 1-2. DSP/BIOS Operations

ATM module operations

Function	Operation
ATM_andi, ATM_andu	Atomically AND memory location with mask and return previous value
ATM_cleari, ATM_clearu	Atomically clear memory location and return previous value
ATM_deci, ATM_decu	Atomically decrement memory and return new value
ATM_inci, ATM_incu	Atomically increment memory and return new value
ATM_ori, ATM_oru	Atomically OR memory location with mask and return previous value
ATM_seti, ATM_setu	Atomically set memory and return previous value

BCACHE module operations (C64x+ only)

Function	Operation
BCACHE_getMar	Get a MAR register value
BCACHE_getMode	Get L1D, L1P, or L2 cache operating mode
BCACHE_getSize	Get the L1D, L1P, and L2 cache sizes
BCACHE_inv	Invalidate the specified memory range in caches
BCACHE_invL1pAll	Invalidates all lines in L1P cache
BCACHE_setMar	Set a MAR register value
BCACHE_setMode	Set L1D, L1P, or L2 cache operating mode
BCACHE_setSize	Set the L1D, L1P, and L2 cache sizes
BCACHE_wait	Waits for a previous cache operation to complete
BCACHE_wb	Writes back a range of memory from caches
BCACHE_wbAll	Performs a global write back from caches
BCACHE_wbInv	Writes back and invalidates a range of memory
BCACHE_wbInvAll	Performs a global write back and invalidate

BUF module operations

Function	Operation
BUF_alloc	Allocate a fixed memory buffer out of the buffer pool
BUF_create	Dynamically create a buffer pool
BUF_delete	Delete a dynamically created buffer pool
BUF_free	Free a fixed memory buffer into the buffer pool
BUF_maxbuff	Check the maximum number of buffers used from the buffer pool
BUF_stat	Determine the status of a buffer pool (buffer size, number of free buffers, total number of buffers in the pool)

C62 operations

Function	Operation
	Disable certain maskable interrupts
	Enable certain maskable interrupts
	C function to plug an interrupt vector

CLK module operations

Function	Operation
CLK_countspms	Number of hardware timer counts per millisecond
CLK_cpuCyclesPerHtime	Return multiplier for converting high-res time to CPU cycles
CLK_cpuCyclesPerLtime	Return multiplier for converting low-res time to CPU cycles
CLK_gethtime	Get high-resolution time
CLK_getltime	Get low-resolution time
CLK_getprd	Get period register value
CLK_reconfig	Reset timer period and registers
CLK_start	Restart the low-resolution timer
CLK_stop	Halt the low-resolution timer

DEV module operations

Function	Operation
DEV_createDevice	Dynamically creates device with user-defined parameters
DEV_deleteDevice	Deletes the dynamically created device
DEV_match	Match a device name with a driver
Dxx_close	Close device
Dxx_ctrl	Device control operation
Dxx_idle	Idle device
Dxx_init	Initialize device
Dxx_issue	Send a buffer to the device
Dxx_open	Open device
Dxx_ready	Check if device is ready for I/O
Dxx_reclaim	Retrieve a buffer from a device
DGN Driver	Software generator driver
DGS Driver	Stackable gather/scatter driver
DHL Driver	Host link driver
DIO Driver	Class driver
DNL Driver	Null driver
DOV Driver	Stackable overlap driver
DPI Driver	Pipe driver
DST Driver	Stackable split driver
DTR Driver	Stackable streaming transformer driver

ECM module operations (C64x+ only)

Function	Operation
ECM_disableEvent	Disable a system event in its event combiner mask
ECM_dispatch	Run functions for a combined event
ECM_dispatchPlug	Specify function and attributes for a system event
ECM_enableEvent	Enable a system event in its event combiner mask

EXC module operations (C64x+ only)

Function	Operation
EXC_clearLastStatus	Clears latest exception status values
EXC_dispatch	Function run by HWI_NMI to process exceptions
EXC_evtEvtClear	Clears an event from the event flag register
EXC_evtExpEnable	Enables an event type to an exception
EXC_exceptionHandler	Services non-software exceptions
EXC_exceptionHook	Hook fxn called by EXC_exceptionHandler
EXC_external	Handles exceptions external to the CPU
EXC_externalHook	Hook fxn called by EXC_external
EXC_getLastStatus	Gets latest exception status values
EXC_internal	Handles exceptions internal to the CPU
EXC_internalHook	Hook fxn called by EXC_internal
EXC_nmi	Handles legacy NMI exceptions
EXC_nmiHook	Hook fxn called by EXC_nmi

GBL module operations

Function	Operation
GBL_getClkin	Get configured value of board input clock in KHz
GBL_getFrequency	Get current frequency of the CPU in KHz
GBL_getProclId	Get configured processor ID used by MSGQ

Function	Operation
GBL_getVersion	Get DSP/BIOS version information
GBL_setFrequency	Set frequency of CPU in KHz for DSP/BIOS
GBL_setProcid	Set configured value of processor ID used by MSGQ

GIO module operations

Function	Operation
GIO_abort	Abort all pending input and output
GIO_control	Device-specific control call
GIO_create	Allocate and initialize a GIO object
GIO_delete	Delete underlying IOM mini-drivers and free GIO object and its structure
GIO_flush	Drain output buffers and discard any pending input
GIO_new	Initialize a pre-allocated GIO object
GIO_read	Synchronous read command
GIO_submit	Submit a GIO packet to the mini-driver
GIO_write	Synchronous write command

HOOK module operations

Function	Operation
HOOK_getenv	Get environment pointer for a given HOOK and TSK combination
HOOK_setenv	Set environment pointer for a given HOOK and TSK combination

HST module operations

Function	Operation
HST_getpipe	Get corresponding pipe object

HWI module operations

Function	Operation
HWI_applyWugenMasks	Apply specified masks to WUGEN interrupt mask registers
HWI_disable	Globally disable hardware interrupts
HWI_disableWugen	Disable an event in the WUGEN interrupt mask registers
HWI_dispatchPlug	Plug the HWI dispatcher
HWI_enable	Globally enable hardware interrupts
HWI_enableWugen	Enable an event in the WUGEN interrupt mask registers
HWI_enter	Hardware interrupt service routine prolog
HWI_eventMap	Assign interrupt selection number to HWI object
HWI_exit	Hardware interrupt service routine epilog
HWI_getWugenMasks	Get masks from WUGEN interrupt mask registers
HWI_ierToWugenMasks	Compute WUGEN masks from IER register
HWI_isHWI	Check to see if called in the context of an HWI
HWI_restore	Restore global interrupt enable state

IDL module operations

Function	Operation
IDL_run	Make one pass through idle functions

LCK module operations

Function	Operation
LCK_create	Create a resource lock
LCK_delete	Delete a resource lock
LCK_pend	Acquire ownership of a resource lock
LCK_post	Relinquish ownership of a resource lock

LOG module operations

Function	Operation
LOG_disable	Disable a log
LOG_enable	Enable a log
LOG_error/LOG_message	Write a message to the system log
LOG_event	Append an unformatted message to a log
LOG_event5	Append a 5-argument unformatted message to a log
LOG_printf	Append a formatted message to a message log
LOG_printf4	Append a 4-argument formatted message to a message log
LOG_reset	Reset a log

MBX module operations

Function	Operation
MBX_create	Create a mailbox
MBX_delete	Delete a mailbox
MBX_pend	Wait for a message from mailbox
MBX_post	Post a message to mailbox

MEM module operations

Function	Operation
MEM_alloc, MEM_valloc, MEM_calloc	Allocate from a memory heap
MEM_define	Define a new memory heap
MEM_free	Free a block of memory
MEM_getBaseAddress	Get base address of a memory heap
MEM_increaseTableSize	Increase the internal MEM table size

Function	Operation
MEM_redefine	Redefine an existing memory heap
MEM_stat	Return the status of a memory heap
MEM_undefine	Undefine an existing memory segment

MPC module operations (C64x+ only)

Function	Operation
MPC_getPA	Get permission attributes of address
MPC_getPageSize	Get size of page containing address
MPC_getPrivMode	Get current CPU privilege mode
MPC_setBufferPA	Set permission attributes for a buffer
MPC_setPA	Set permission attributes for an address
MPC_setPrivMode	Set CPU privilege mode

_MPC module operations (C64x+ only)

Function	Operation
_MPC_getLastMPFAR	Gets MPFAR for a memory controller
_MPC_getLastMPFSR	Gets MPFSR for a memory controller
_MPC_exceptionHandler	Assigned to EXC_exceptionHook.
_MPC_externalHandler	Assigned to EXC_externalHook
_MPC_internalHandler	Assigned to EXC_internalHook
_MPC_userHook	Hook for user-defined function

MSGQ module operations

Function	Operation
MSGQ_alloc	Allocate a message. Performed by writer.
MSGQ_close	Closes a message queue. Performed by reader.
MSGQ_count	Return the number of messages in a message queue

Function	Operation
MSGQ_free	Free a message. Performed by reader.
MSGQ_get	Receive a message from the message queue. Performed by reader.
MSGQ_getAttr	Get attributes of a message queue.
MSGQ_getDstQueue	Get destination message queue field in a message.
MSGQ_getMsgId	Return the message ID from a message.
MSGQ_getMsgSize	Return the message size from a message.
MSGQ_getSrcQueue	Extract the reply destination from a message.
MSGQ_isLocalQueue	Return whether queue is local.
MSGQ_locate	Synchronously find a message queue. Performed by writer.
MSGQ_locateAsync	Asynchronously find a message queue. Performed by writer.
MSGQ_open	Opens a message queue. Performed by reader.
MSGQ_put	Place a message on a message queue. Performed by writer.
MSGQ_release	Release a located message queue. Performed by writer.
MSGQ_setErrorHandler	Set up handling of internal MSGQ errors.
MSGQ_setMsgId	Sets the message ID in a message.
MSGQ_setSrcQueue	Sets the reply destination in a message.

PIP module operations

Function	Operation
PIP_alloc	Get an empty frame from a pipe
PIP_free	Recycle a frame that has been read back into a pipe
PIP_get	Get a full frame from a pipe
PIP_getReaderAddr	Get the value of the readerAddr pointer of the pipe
PIP_getReaderNumFrames	Get the number of pipe frames available for reading
PIP_getReaderSize	Get the number of words of data in a pipe frame
PIP_getWriterAddr	Get the value of the writerAddr pointer of the pipe
PIP_getWriterNumFrames	Get the number of pipe frames available to be written to
PIP_getWriterSize	Get the number of words that can be written to a pipe frame

Function	Operation
PIP_peek	Get the pipe frame size and address without actually claiming the pipe frame
PIP_put	Put a full frame into a pipe
PIP_reset	Reset all fields of a pipe object to their original values
PIP_setWriterSize	Set the number of valid words written to a pipe frame

PRD module operations

Function	Operation
PRD_getticks	Get the current tick counter
PRD_start	Arm a periodic function for one-time execution
PRD_stop	Stop a periodic function from execution
PRD_tick	Advance tick counter, dispatch periodic functions

QUE module operations

Function	Operation
QUE_create	Create an empty queue
QUE_delete	Delete an empty queue
QUE_dequeue	Remove from front of queue (non-atomically)
QUE_empty	Test for an empty queue
QUE_enqueue	Insert at end of queue (non-atomically)
QUE_get	Get element from front of queue (atomically)
QUE_head	Return element at front of queue
QUE_insert	Insert in middle of queue (non-atomically)
QUE_new	Set a queue to be empty
QUE_next	Return next element in queue (non-atomically)
QUE_prev	Return previous element in queue (non-atomically)
QUE_put	Put element at end of queue (atomically)
QUE_remove	Remove from middle of queue (non-atomically)

RTDX module operations

Function	Operation
RTDX_channelBusy	Return status indicating whether a channel is busy
RTDX_CreateInputChannel	Declare input channel structure
RTDX_CreateOutputChannel	Declare output channel structure
RTDX_disableInput	Disable an input channel
RTDX_disableOutput	Disable an output channel
RTDX_enableInput	Enable an input channel
RTDX_enableOutput	Enable an output channel
RTDX_isInputEnabled	Return status of the input data channel
RTDX_isOutputEnabled	Return status of the output data channel
RTDX_read	Read from an input channel
RTDX_readNB	Read from an input channel without blocking
RTDX_sizeofInput	Return the number of bytes read from an input channel
RTDX_write	Write to an output channel

SEM module operations

Function	Operation
SEM_count	Get current semaphore count
SEM_create	Create a semaphore
SEM_delete	Delete a semaphore
SEM_new	Initialize a semaphore
SEM_pend	Wait for a counting semaphore
SEM_pendBinary	Wait for a binary semaphore
SEM_post	Signal a counting semaphore
SEM_postBinary	Signal a binary semaphore
SEM_reset	Reset semaphore

SIO module operations

Function	Operation
SIO_bufsize	Size of the buffers used by a stream
SIO_create	Create stream
SIO_ctrl	Perform a device-dependent control operation
SIO_delete	Delete stream
SIO_flush	Idle a stream by flushing buffers
SIO_get	Get buffer from stream
SIO_idle	Idle a stream
SIO_issue	Send a buffer to a stream
SIO_put	Put buffer to a stream
SIO_ready	Determine if device for stream is ready
SIO_reclaim	Request a buffer back from a stream
SIO_reclaimx	Request a buffer and frame status back from a stream
SIO_segid	Memory section used by a stream
SIO_select	Select a ready device
SIO_staticbuf	Acquire static buffer from stream

STS module operations

Function	Operation
STS_add	Add a value to a statistics object
STS_delta	Add computed value of an interval to object
STS_reset	Reset the values stored in an STS object
STS_set	Store initial value of an interval to object

SWI module operations

Function	Operation
SWI_andn	Clear bits from SWI's mailbox and post if becomes 0
SWI_andnHook	Specialized version of SWI_andn
SWI_create	Create a software interrupt
SWI_dec	Decrement SWI's mailbox and post if becomes 0
SWI_delete	Delete a software interrupt
SWI_disable	Disable software interrupts
SWI_enable	Enable software interrupts
SWI_getattrs	Get attributes of a software interrupt
SWI_getmbx	Return SWI's mailbox value
SWI_getpri	Return an SWI's priority mask
SWI_inc	Increment SWI's mailbox and post
SWI_isSWI	Check to see if called in the context of a SWI
SWI_or	Set or mask in an SWI's mailbox and post
SWI_orHook	Specialized version of SWI_or
SWI_post	Post a software interrupt
SWI_raisepri	Raise an SWI's priority
SWI_restorepri	Restore an SWI's priority
SWI_self	Return address of currently executing SWI object
SWI_setattrs	Set attributes of a software interrupt

SYS module operations

Function	Operation
SYS_abort	Abort program execution
SYS_atexit	Stack an exit handler
SYS_error	Flag error condition

Function	Operation
SYS_exit	Terminate program execution
SYS_printf, SYS_sprintf, SYS_vprintf, SYS_vsprintf	Formatted output
SYS_putchar	Output a single character

TRC module operations

Function	Operation
TRC_disable	Disable a set of trace controls
TRC_enable	Enable a set of trace controls
TRC_query	Test whether a set of trace controls is enabled

TSK module operations

Function	Operation
TSK_checkstacks	Check for stack overflow
TSK_create	Create a task ready for execution
TSK_delete	Delete a task
TSK_deltatime	Update task STS with time difference
TSK_disable	Disable DSP/BIOS task scheduler
TSK_enable	Enable DSP/BIOS task scheduler
TSK_exit	Terminate execution of the current task
TSK_getenv	Get task environment
TSK_geterr	Get task error number
TSK_getname	Get task name
TSK_getpri	Get task priority
TSK_getsts	Get task STS object
TSK_isTSK	Check to see if called in the context of a TSK
TSK_itick	Advance system alarm clock (interrupt only)
TSK_self	Returns a handle to the current task
TSK_setenv	Set task environment
TSK_seterr	Set task error number
TSK_setpri	Set a task execution priority

Function	Operation
TSK_settime	Set task STS previous time
TSK_sleep	Delay execution of the current task
TSK_stat	Retrieve the status of a task
TSK_tick	Advance system alarm clock
TSK_time	Return current value of system clock
TSK_yield	Yield processor to equal priority task

C library stdlib.h

Function	Operation
atexit	Registers one or more exit functions used by exit
calloc	Allocates memory block initialized with zeros
exit	Calls the exit functions registered in atexit
free	Frees memory block
getenv	Searches for a matching environment string
malloc	Allocates memory block
realloc	Resizes previously allocated memory block

DSP/BIOS std.h special utility C macros

Function	Operation
ArgToInt(arg)	Casting to treat Arg type parameter as integer (Int) type on the given target
ArgToPtr(arg)	Casting to treat Arg type parameter as pointer (Ptr) type on the given target

Application Program Interface

This chapter describes the DSP/BIOS API modules and functions.

Topic	Page
2.1 ATM Module	2-2
2.2 BCACHE Module	2-15
2.3 BUF Module	2-31
2.4 C62 and C64 Modules	2-42
2.5 CLK Module	2-51
2.6 DEV Module	2-71
2.7 ECM Module	2-122
2.8 GBL Module	2-131
2.9 GIO Module	2-146
2.10 HOOK Module	2-165
2.11 HST Module	2-171
2.12 HWI Module	2-176
2.13 IDL Module	2-205
2.14 LCK Module	2-209
2.15 LOG Module	2-216
2.16 MBX Module	2-233
2.17 MEM Module	2-239
2.18 MPC Module	2-263
2.19 MSGQ Module	2-273
2.20 PIP Module	2-309
2.21 POOL Module	2-329
2.22 PRD Module	2-334
2.23 QUE Module	2-342
2.24 RTDX Module	2-359
2.25 SEM Module	2-375
2.26 SIO Module	2-388
2.27 STS Module	2-418
2.28 SWI Module	2-428
2.29 SYS Module	2-457
2.30 TRC Module	2-473
2.31 TSK Module	2-478
2.32 std.h and stdlib.h functions	2-516

2.1 ATM Module

The ATM module includes assembly language functions.

Functions

- ❑ ATM_andi, ATM_andu. AND memory and return previous value
- ❑ ATM_cleari, ATM_clearu. Clear memory and return previous value
- ❑ ATM_deci, ATM_decu. Decrement memory and return new value
- ❑ ATM_inci, ATM_incu. Increment memory and return new value
- ❑ ATM_ori, ATM_oru. OR memory and return previous value
- ❑ ATM_seti, ATM_setu. Set memory and return previous value

Description

ATM provides a set of assembly language functions that are used to manipulate variables with interrupts disabled. These functions can therefore be used on data shared between tasks, and on data shared between tasks and interrupt routines.

ATM_andi*Atomically AND Int memory location and return previous value***C Interface**

Syntax	<code>ival = ATM_andi(idst, isrc);</code>		
Parameters	<code>volatile Int</code>	<code>*idst;</code>	<code>/* pointer to integer */</code>
	<code>Int</code>	<code>isrc;</code>	<code>/* integer mask */</code>
Return Value	<code>Int</code>	<code>ival;</code>	<code>/* previous value of *idst */</code>

Description

ATM_andi atomically ANDs the mask contained in isrc with a destination memory location and overwrites the destination value *idst with the result as follows:

```

`interrupt disable`
ival = *idst;
*idst = ival & isrc;
`interrupt enable`
return(ival);

```

ATM_andi is written in assembly language, efficiently disabling interrupts on the target processor during the call.

See Also

ATM_andu
ATM_ori

ATM_andu*Atomically AND Uns memory location and return previous value***C Interface**

Syntax `uval = ATM_andu(udst, usrc);`

Parameters `volatile Uns *udst; /* pointer to unsigned */`
`Uns usrc; /* unsigned mask */`

Return Value `Uns uval; /* previous value of *udst */`

Description

ATM_andu atomically ANDs the mask contained in usrc with a destination memory location and overwrites the destination value *udst with the result as follows:

```
`interrupt disable`  
uval = *udst;  
*udst = uval & usrc;  
`interrupt enable`  
return(uval);
```

ATM_andu is written in assembly language, efficiently disabling interrupts on the target processor during the call.

See Also

ATM_andi
ATM_oru

ATM_cleari*Atomically clear Int memory location and return previous value***C Interface**

Syntax ival = ATM_cleari(idst);

Parameters volatile Int *idst; /* pointer to integer */

Return Value Int ival; /* previous value of *idst */

Description ATM_cleari atomically clears an Int memory location and returns its previous value as follows:

```
`interrupt disable`  
ival = *idst;  
*dst = 0;  
`interrupt enable`  
return (ival);
```

ATM_cleari is written in assembly language, efficiently disabling interrupts on the target processor during the call.

See Also ATM_clearu
 ATM_seti

ATM_clearu*Atomically clear Uns memory location and return previous value***C Interface**

Syntax uval = ATM_clearu(udst);

Parameters volatile Uns *udst; /* pointer to unsigned */

Return Value Uns uval; /* previous value of *udst */

Description

ATM_clearu atomically clears an Uns memory location and returns its previous value as follows:

```
`interrupt disable`  
uval = *udst;  
*udst = 0;  
`interrupt enable`  
return (uval);
```

ATM_clearu is written in assembly language, efficiently disabling interrupts on the target processor during the call.

See Also

ATM_cleari
ATM_setu

ATM_deci*Atomically decrement Int memory and return new value***C Interface**

Syntax ival = ATM_deci(idst);

Parameters volatile Int *idst; /* pointer to integer */

Return Value Int ival; /* new value after decrement */

Description

ATM_deci atomically decrements an Int memory location and returns its new value as follows:

```
`interrupt disable`  
ival = *idst - 1;  
*idst = ival;  
`interrupt enable`  
return (ival);
```

ATM_deci is written in assembly language, efficiently disabling interrupts on the target processor during the call.

Decrementing a value equal to the minimum signed integer results in a value equal to the maximum signed integer.

See Also

ATM_decu
ATM_inci

ATM_decu*Atomically decrement Uns memory and return new value***C Interface****Syntax**`uval = ATM_decu(udst);`**Parameters**`volatile Uns *udst; /* pointer to unsigned */`**Return Value**`Uns uval; /* new value after decrement */`**Description**

ATM_decu atomically decrements a Uns memory location and returns its new value as follows:

```
`interrupt disable`  
uval = *udst - 1;  
*udst = uval;  
`interrupt enable`  
return (uval);
```

ATM_decu is written in assembly language, efficiently disabling interrupts on the target processor during the call.

Decrementing a value equal to the minimum unsigned integer results in a value equal to the maximum unsigned integer.

See Also

ATM_deci
ATM_incu

ATM_inci*Atomically increment Int memory and return new value***C Interface**

Syntax	<code>ival = ATM_inci(idst);</code>
Parameters	<code>volatile Int *idst; /* pointer to integer */</code>
Return Value	<code>Int ival; /* new value after increment */</code>

Description

ATM_inci atomically increments an Int memory location and returns its new value as follows:

```
`interrupt disable`  
ival = *idst + 1;  
*idst = ival;  
`interrupt enable`  
return (ival);
```

ATM_inci is written in assembly language, efficiently disabling interrupts on the target processor during the call.

Incrementing a value equal to the maximum signed integer results in a value equal to the minimum signed integer.

See Also

ATM_deci
ATM_incu

ATM_incu*Atomically increment Uns memory and return new value***C Interface**

Syntax `uval = ATM_incu(udst);`

Parameters `volatile Uns *udst; /* pointer to unsigned */`

Return Value `Uns uval; /* new value after increment */`

Description

ATM_incu atomically increments an Uns memory location and returns its new value as follows:

```
`interrupt disable`  
uval = *udst + 1;  
*udst = uval;  
`interrupt enable`  
return (uval);
```

ATM_incu is written in assembly language, efficiently disabling interrupts on the target processor during the call.

Incrementing a value equal to the maximum unsigned integer results in a value equal to the minimum unsigned integer.

See Also

ATM_decu
ATM_inci

ATM_ori*Atomically OR Int memory location and return previous value***C Interface****Syntax**`ival = ATM_ori(idst, isrc);`**Parameters**`volatile Int *idst; /* pointer to integer */
Int isrc; /* integer mask */`**Return Value**`Int ival; /* previous value of *idst */`**Description**

ATM_ori atomically ORs the mask contained in isrc with a destination memory location and overwrites the destination value *idst with the result as follows:

```
`interrupt disable`  
ival = *idst;  
*idst = ival | isrc;  
`interrupt enable`  
return(ival);
```

ATM_ori is written in assembly language, efficiently disabling interrupts on the target processor during the call.

See Also

ATM_andi
ATM_oru

ATM_oru*Atomically OR Uns memory location and return previous value***C Interface**

Syntax `uval = ATM_oru(udst, usrc);`

Parameters `volatile Uns *udst; /* pointer to unsigned */`
`Uns usrc; /* unsigned mask */`

Return Value `Uns uva; /* previous value of *udst */`

Description

ATM_oru atomically ORs the mask contained in usrc with a destination memory location and overwrites the destination value *udst with the result as follows:

```
`interrupt disable`  
uval = *udst;  
*udst = uval | usrc;  
`interrupt enable`  
return(uval);
```

ATM_oru is written in assembly language, efficiently disabling interrupts on the target processor during the call.

See Also

ATM_andu
ATM_ori

ATM_seti*Atomically set Int memory and return previous value***C Interface**

Syntax	<code>iold = ATM_seti(idst, inew);</code>
Parameters	<code>volatile Int *idst; /* pointer to integer */</code> <code>Int inew; /* new integer value */</code>
Return Value	<code>Int iold; /* previous value of *idst */</code>

Description

ATM_seti atomically sets an Int memory location to a new value and returns its previous value as follows:

```

`interrupt disable`
ival = *idst;
*idst = inew;
`interrupt enable`
return (ival);

```

ATM_seti is written in assembly language, efficiently disabling interrupts on the target processor during the call.

See Also

ATM_setu
ATM_cleari

ATM_setu*Atomically set Uns memory and return previous value***C Interface**

Syntax `uold = ATM_setu(udst, unew);`

Parameters `volatile Uns *udst; /* pointer to unsigned */`
`Uns unew; /* new unsigned value */`

Return Value `Uns uold; /* previous value of *udst */`

Description

ATM_setu atomically sets an Uns memory location to a new value and returns its previous value as follows:

```
`interrupt disable`  
uval = *udst;  
*udst = unew;  
`interrupt enable`  
return (uval);
```

ATM_setu is written in assembly language, efficiently disabling interrupts on the target processor during the call.

See Also

ATM_clearu
ATM_seti

2.2 BCACHE Module

The BCACHE module provides DSP/BIOS support for the C64x+ L1/L2 cache. This module is available only for C64x+ devices.

Functions

- ❑ BCACHE_getMar. Get a MAR register value.
- ❑ BCACHE_getMode. Get L1D, L1P, or L2 cache operating mode
- ❑ BCACHE_getSize. Get the L1D, L1P, and L2 cache sizes
- ❑ BCACHE_inv. Invalidate the specified memory range in caches
- ❑ BCACHE_invL1pAll. Invalidates all lines in L1P cache
- ❑ BCACHE_setMar. Set a MAR register value
- ❑ BCACHE_setMode. Set L1D, L1P, or L2 cache operating mode
- ❑ BCACHE_setSize. Set the L1D, L1P, and L2 cache sizes
- ❑ BCACHE_wait. Waits for a previous cache operation to complete
- ❑ BCACHE_wb. Writes back a range of memory from caches
- ❑ BCACHE_wbAll. Performs a global write back from caches
- ❑ BCACHE_wbInv. Writes back and invalidates a range of memory
- ❑ BCACHE_wbInvAll. Performs a global write back and invalidate

Constants, Types, and Structures

```

/* Enumerated list of L1 cache sizes */
typedef enum {
    BCACHE_L1_0K = 0,
    BCACHE_L1_4K = 1,
    BCACHE_L1_8K = 2,
    BCACHE_L1_16K = 3,
    BCACHE_L1_32K = 4
} BCACHE_L1_Size;

/* Enumerated list of L2 cache sizes */
typedef enum {
    BCACHE_L2_0K = 0,
    BCACHE_L2_32K = 1,
    BCACHE_L2_64K = 2,
    BCACHE_L2_128K = 3,
    BCACHE_L2_256K = 4
} BCACHE_L2_Size;

/* Enumerated list of cache modes for L1/L2 caches */
typedef enum {
    BCACHE_NORMAL,
    BCACHE_FREEZE,
    BCACHE_BYPASS
} BCACHE_Mode;

```

```
/* Enumerated list of caches */
typedef enum {
    BCACHE_L1D,
    BCACHE_L1P,
    BCACHE_L2
} BCACHE_Level;

/* Enumerated list of MAR values */
typedef enum {
    BCACHE_MAR_DISABLE = 0,
    BCACHE_MAR_ENABLE = 1,
} BCACHE_Mar;

/* L1 and L2 cache size structure */
typedef struct BCACHE_Size {
    BCACHE_L1_Size l1psize;
    BCACHE_L1_Size l1dsize;
    BCACHE_L2_Size l2size;
} BCACHE_Size;
```

Description

The BCACHE module supports the C64x+ caches. The caches on these devices are Level 1 Program (L1P), Level 1 Data (L1D), and Level 2 (L2). See the *TMS320C64x+ DSP Megamodule Reference Guide* (SPRU871) for information about the L1P, L1D, and L2 caches.

This module provides API functions that perform cache coherency operations at the cache line level or globally. The cache coherency operations are:

- ❑ **Invalidate.** Makes valid cache lines invalid and discards the content of the affected cache lines.
- ❑ **Writeback.** Writes the contents of cache lines to a lower-level memory, such as the L2 cache and/or external memory, without discarding the lines in the original cache.
- ❑ **Writeback-Invalidation.** Writes the contents of cache lines to lower-level memory, and then discards the contents of the lines in the original cache.

This module also provides API functions that get and set the size and mode of the caches. You can also get and set registers that indicate whether a particular memory range is cacheable.

This module has no configuration interface.

BCACHE_getMar*Get a MAR register value***C Interface****Syntax**

```
marVal = BCACHE_getMar(baseAddr)
```

Parameters

```
Ptr          baseAddr; /* address of memory range */
```

Return Value

```
BCACHE_Mar marVal; /* value of specified MAR register */
```

Description

This function is available only for C64x+ devices.

BCACHE_getMar gets the value of the specified MAR register.

The C64x+ L2 memory includes a set of registers that define the cacheability of external memory ranges. The registers, referred to as MARs (Memory Attribute Registers), are defined as shown in Table 4-33.

For baseAddr parameter, specify the base address of the memory range for which you want to know the cacheability of the memory. Do not use the base address of the MAR register itself.

This function returns the value of the MAR bit that indicates whether the corresponding memory range is cacheable. The value is 0 for non-cacheable memory and 1 for cacheable memory. The BCACHE_Mar type provides the following constants for testing this bit:

```
/* Enumerated list of MAR values */
typedef enum {
    BCACHE_MAR_DISABLE = 0,
    BCACHE_MAR_ENABLE = 1,
} BCACHE_Mar;
```

You can use the BCACHE_setMar function to set the value of a MAR.

Constraints and Calling Context

❑ none

See Also

BCACHE_setMar

BCACHE_getMode Get L1D, L1P, or L2 cache operating mode**C Interface**

Syntax cacheMode = BCACHE_getMode(level)

Parameters BCACHE_Level level; /* cache to use */

Return Value BCACHE_Mode cacheMode; /* current mode */

Description

This function is available only for C64x+ devices.

BCACHE_getMode gets the cache operating mode for the specified L1D, L1P, or L2 cache.

The level parameter specifies which cache to use. The BCACHE_Level type provides the following constants for specifying a cache:

```
/* Enumerated list of caches */
typedef enum {
    BCACHE_L1D,
    BCACHE_L1P,
    BCACHE_L2
} BCACHE_Level;
```

This function returns the current cache mode for the specified cache. See the *TMS320C64x+ DSP Megamodule Reference Guide (SPRU871)* for information about cache modes. The BCACHE_Mode type provides the following constants for cache modes:

```
/* Enumerated list of cache modes for L1/L2 caches */
typedef enum {
    BCACHE_NORMAL,
    BCACHE_FREEZE,
    BCACHE_BYPASS
} BCACHE_Mode;
```

Freeze mode is supported for all caches. Bypass mode is supported only for the L2 cache.

You can use the BCACHE_setMode function to set the mode of a cache.

Constraints and Calling Context

□ none

See Also

BCACHE_setMode

BCACHE_getSize *Get the L1D, L1P, and L2 cache sizes***C Interface**

Syntax	BCACHE_getSize(*size)
Parameters	BCACHE_Size *size; /* sizes of caches */
Return Value	Void

Description This function is available only for C64x+ devices.

BCACHE_getSize gets the size of the L1D, L1P, and L2 caches.

The size parameter is a pointer to a structure that returns the size of the caches. The structure is defined as follows:

```
/* L1 and L2 cache size structure */
typedef struct BCACHE_Size {
    BCACHE_L1_Size l1psize;
    BCACHE_L1_Size l1dsize;
    BCACHE_L2_Size l2size;
} BCACHE_Size;
```

You can use the BCACHE_setSize function to set the cache sizes.

Constraints and Calling Context none

See Also BCACHE_setSize

BCACHE_inv*Invalidate the specified memory range in caches***C Interface**

Syntax	BCACHE_inv(blockPtr, byteCnt, wait)		
Parameters	Ptr	blockPtr;	/* start address of range to be invalidated */
	size_t	byteCnt;	/* number of bytes to be invalidated */
	Bool	wait;	/* wait until the operation is completed */
Return Value	Void		

Description

This function is available only for C64x+ devices.

BCACHE_inv invalidates a range of memory from all caches. When you invalidate a cache line, its contents are discarded and the cache tags the line as "dirty" so that next time that particular address is read, it is obtained from external memory.

The blockPtr points to an address in non-cache memory that may be cached in L1P, L1D, L2, or not at all. If the blockPtr does not correspond to the start of a cache line, the start of that cache line is used.

If the byteCnt is not equal to a whole number of cache lines, the byteCnt is rounded up to the next size that equals a whole number of cache lines. L1P cache lines are 32 bytes. L1D cache lines are 64 bytes. L2 cache lines are 128 bytes.

If the wait parameter is true, then this function waits until the invalidation operation is complete to return. If the wait parameter is false, this function returns immediately. You can use BCACHE_wait later to ensure that this operation is complete.

This function always waits for other cache operations to finish before performing its actions.

All lines in the specified range are invalidated in any cache location where that address is cached. See the *TMS320C64x+ DSP Megamodule Reference Guide* (SPRU871) for more on cache line invalidation.

Constraints and Calling Context

□ none

See Also

BCACHE_invL1pAll
 BCACHE_wait
 BCACHE_wbInv
 BCACHE_wbInvAll

BCACHE_invL1pAll *Invalidates all lines in L1P cache***C Interface****Syntax** BCACHE_invL1pAll()**Parameters** Void**Return Value** Void**Description** This function is available only for C64x+ devices.

BCACHE_invL1pAll invalidates the L1P cache completely. This discards the entire contents of the L1P cache.

This function always waits for other cache operations to finish before performing its actions. This function always waits until its invalidation operation is complete to return.

See the *TMS320C64x+ DSP Megamodule Reference Guide* (SPRU871) for more on cache invalidation.

Constraints and Calling Context

□ none

See Also

BCACHE_inv
BCACHE_wbInv
BCACHE_wbInvAll

BCACHE_setMar*Set a MAR register value***C Interface**

Syntax `BCACHE_setMar(baseAddr, byteSize, value)`

Parameters

<code>Ptr</code>	<code>baseAddr;</code>	<i>/* base address of the range */</i>
<code>size_t</code>	<code>byteSize;</code>	<i>/* size in bytes used to determine range */</i>
<code>BCACHE_MAR</code>	<code>value;</code>	<i>/* the value to which MARs should be set */</i>

Return Value `Void`

Description

This function is available only for C64x+ devices.

`BCACHE_setMar` sets the value of the specified MAR register or registers.

The C64x+ L2 memory includes a set of registers that define the cacheability of external memory ranges. The registers, referred to as MARs (Memory Attribute Registers), are defined as shown in Table 4-33.

For `baseAddr` parameter, specify the base address of the memory range for which you want to set the cacheability of the memory. Do not use the base address of the MAR register itself.

The `byteSize` allows you to specify the size of the memory range. Together, the `baseAddr` and `byteSize` are used to determine the number of MAR registers to set. For example, suppose you have the following values:

```
baseAddr = 0x80000000
byteSize = 0x10000000
```

This would mean `BCACHE_setMar` should set MAR128 through MAR144 because:

```
MAR128 corresponds to 0x80000000-0x80FFFFFF
MAR129 corresponds to 0x81000000-0x81FFFFFF
. . .
MAR144 corresponds to 0x90000000-0x90FFFFFF
```

However if `byteSize` were `0x00001000`, this function would set only MAR128.

This function sets the value of the MAR bit that indicates whether the corresponding memory range is cacheable. The value is 0 for non-cacheable memory and 1 for cacheable memory. The `BCACHE_Mar` type provides the following constants for setting this bit:

```
/* Enumerated list of MAR values */
typedef enum {
    BCACHE_MAR_DISABLE = 0,
    BCACHE_MAR_ENABLE = 1,
} BCACHE_Mar;
```

You can use the `BCACHE_getMar` function to get the value of a MAR.

Constraints and Calling Context

❑ none

See Also

`BCACHE_getMar`

BCACHE_setMode

Set L1D, L1P, or L2 cache operating mode

C Interface

Syntax `oldCacheMode = BCACHE_setMode(level, newCacheMode)`

Parameters `BCACHE_Level level;` /* cache to use */
`BCACHE_Mode newCacheMode;` /* the new mode to be applied */

Return Value `BCACHE_Mode oldCacheMode;` /* the previous mode */

Description

This function is available only for C64x+ devices.

`BCACHE_setMode` sets the cache operating mode for the specified L1D, L1P, or L2 cache.

The `level` parameter specifies which cache to set. The `BCACHE_Level` type provides the following constants for specifying a cache:

```
/* Enumerated list of caches */
typedef enum {
    BCACHE_L1D,
    BCACHE_L1P,
    BCACHE_L2
} BCACHE_Level;
```

The `newCacheMode` parameter indicates the new mode to use for the specified cache. See the *TMS320C64x+ DSP Megamodule Reference Guide* (SPRU871) for information about cache modes. The `BCACHE_Mode` type provides the following constants for cache modes:

```
/* Enumerated list of cache modes for L1/L2 caches */
typedef enum {
    BCACHE_NORMAL,
    BCACHE_FREEZE,
    BCACHE_BYPASS
} BCACHE_Mode;
```

Freeze mode is supported for all caches. Bypass mode is supported only for the L2 cache.

This function returns the previous cache mode using the same constants as for the `newCacheMode` parameter.

You can use the `BCACHE_getMode` function to get the mode of a cache.

Constraints and Calling Context

□ none

See Also

`BCACHE_getMode`

BCACHE_setSize

Set the L1D, L1P, and L2 cache sizes

C Interface

Syntax	BCACHE_setSize(*size)
Parameters	BCACHE_Size *size; /* sizes of caches */
Return Value	Void

Description

This function is available only for C64x+ devices.

BCACHE_setSize sets the size of the L1D, L1P, and L2 caches.

The size parameter is a pointer to a structure that specifies the new sizes of the caches. The structure is defined as follows:

```
/* L1 and L2 cache size structure */
typedef struct BCACHE_Size {
    BCACHE_L1_Size l1psize;
    BCACHE_L1_Size l1dsize;
    BCACHE_L2_Size l2size;
} BCACHE_Size;
```

The size of the L1D and L1P cache may be 0 KB, 4 KB, 8 KB, 16 KB, or 32 KB. The size of the L2 cache may be 0 KB, 32 KB, 64 KB, 128 KB, or 256 KB.

When you change the L1D or L2 cache size, that cache writes-back and invalidates its current contents. When you change the L1P cache size, the L1P cache invalidates its current contents. See the *TMS320C64x+ DSP Megamodule Reference Guide* (SPRU871) for information about data loss issues when changing the cache size.

You can use the BCACHE_getSize function to get the cache sizes.

Constraints and Calling Context

□ none

See Also

BCACHE_getSize

BCACHE_wait*Waits for a previous cache operation to complete***C Interface****Syntax** BCACHE_wait()**Parameters** Void**Return Value** Void**Description**

This function is available only for C64x+ devices.

BCACHE_wait will wait for a previously issued cache operation (invalidate, writeback, or writeback with invalidate) to complete. If no cache operation is pending, the function simply returns.

You can use this function if you set the wait parameter to false in the previous BCACHE function and, at some later point, want to make sure that operation is complete.

The BCACHE APIs use this function internally check to see if all cache operations are complete before performing their own operations. Thus, you would only need to use this function before statements that may affect a cache but that do not use the BCACHE APIs.

For the OMAP 2430/3430, BCACHE_wait reads the addresses specified by the GBL.BCACHEREADADDR0 to GBL.BCACHEREADADDR2 parameters described in the GBL Module Properties section. Reading a non-cached address is necessary to ensure that the writeback has fully completed.

You do not need to call this function for global cache operations such as BCACHE_wbAll. Those functions always wait for the operation to finish before returning.

Constraints and Calling Context

none

See Also

BCACHE_inv
BCACHE_wb
BCACHE_wbInv

BCACHE_wb*Writes back a range of memory from caches***C Interface****Syntax**

BCACHE_wb(blockPtr, byteCnt, wait)

Parameters

Ptr	blockPtr;	/* start address of range to writeback */
size_t	byteCnt;	/* number of bytes to writeback */
Bool	wait;	/* wait until the operation is completed */

Return Value

Void

Description

This function is available only for C64x+ devices.

BCACHE_wb writes back the range of memory from all caches that can be written back. When you perform a writeback, the contents of the cache lines are written to lower-level memory.

The blockPtr points to an address in non-cache memory that may be cached in L1P, L1D, L2, or not at all. If the blockPtr does not correspond to the start of a cache line, the start of that cache line is used.

If the byteCnt is not equal to a whole number of cache lines, the byteCnt is rounded up to the next size that equals a whole number of cache lines. L1D cache lines are 64 bytes. L2 cache lines are 128 bytes.

If the wait parameter is true, then this function waits until the invalidation operation is complete to return. If the wait parameter is false, this function returns immediately. You can use BCACHE_wait later to ensure that this operation is complete.

- ❑ In L1P no changes are made.
- ❑ In L1D all lines in the range are left valid in the L1D cache and data in the range is written back to L2 and/or external memory.
- ❑ In L2 all lines in the range are left valid in the L2 cache and data in the range is written back to external memory.

This function always waits for other cache operations to finish before performing its actions.

Constraints and Calling Context

- ❑ none

See Also

BCACHE_inv
 BCACHE_wbAll
 BCACHE_wbInv
 BCACHE_wbInvAll

BCACHE_wbAll*Performs a global write back from caches***C Interface****Syntax** BCACHE_wbAll()**Parameters** Void**Return Value** Void**Description**

This function is available only for C64x+ devices.

BCACHE_wbAll performs a global writeback.

- There is no effect on the L1P cache.
- All lines are left valid in the L1D cache and the data in the L1D cache is written back to L2 or external.
- All lines are left valid in the L2 cache and the data in the L2 cache is written back to external.

This function always waits for other cache operations to finish before performing its actions. This function always waits until its writeback operation is complete to return.

See the *TMS320C64x+ DSP Megamodule Reference Guide* (SPRU871) for more on cache writebacks.

Constraints and Calling Context

- none

See Also

BCACHE_wb
BCACHE_wbInv
BCACHE_wbInvAll

BCACHE_wbInv*Writes back and invalidates a range of memory***C Interface****Syntax**

BCACHE_wbInv(blockPtr, byteCnt, wait)

Parameters

Ptr	blockPtr;	/* start address of range to writeback/inv */
size_t	byteCnt;	/* number of bytes to writeback/invalidate */
Bool	wait;	/* wait until the operation is completed */

Return Value

Void

Description

This function is available only for C64x+ devices.

BCACHE_wbInv writes back and invalidates the range of memory in all caches. When you perform a writeback, the contents of the cache lines are written to lower-level memory. When you invalidate a cache line, its contents are discarded.

The blockPtr points to an address in non-cache memory that may be cached in L1P, L1D, L2, or not at all. If the blockPtr does not correspond to the start of a cache line, the start of that cache line is used.

If the byteCnt is not equal to a whole number of cache lines, the byteCnt is rounded up to the next size that equals a whole number of cache lines. L1P cache lines are 32 bytes. L1D cache lines are 64 bytes. L2 cache lines are 128 bytes.

If the wait parameter is true, then this function waits until the writeback and invalidate operation is complete to return. If the wait parameter is false, this function returns immediately. You can use BCACHE_wait later to ensure that this operation is complete.

- In L1P all lines in the range are invalidated but not written back.
- In L1D all lines in the range are invalidated in the L1D cache and data in the range is written back to L2 and/or external memory.
- In L2 all lines in the range are invalidated in the L2 cache and data in the range is written back to external memory.

This function always waits for other cache operations to finish before performing its actions.

Constraints and Calling Context

- none

See Also

BCACHE_inv
 BCACHE_wb
 BCACHE_wbInvAll

BCACHE_wbInvAll *Performs a global write back and invalidate***C Interface****Syntax** BCACHE_wbInvAll()**Parameters** Void**Return Value** Void**Description**

This function is available only for C64x+ devices.

BCACHE_wbInvAll performs a global writeback and invalidate.

- All lines are invalidated in L1P cache.
- All lines are invalidated in the L1D cache and the data in the L1D cache is written back to L2 and/or external.
- All lines are invalidated in the L2 cache and the data in the L2 cache is written back to external.

This function always waits for other cache operations to finish before performing its actions. This function always waits until its writeback and invalidation operations are complete to return.

See the *TMS320C64x+ DSP Megamodule Reference Guide* (SPRU871) for more on cache writebacks.

Constraints and Calling Context

- none

See Also

BCACHE_invL1pAll
BCACHE_wbAll
BCACHE_wbInv

2.3 BUF Module

The BUF module maintains buffer pools of fixed-size buffers.

Functions

- ❑ `BUF_alloc`. Allocate a fixed-size buffer from the buffer pool
- ❑ `BUF_create`. Dynamically create a buffer pool
- ❑ `BUF_delete`. Delete a dynamically-created buffer pool
- ❑ `BUF_free`. Free a fixed-size buffer back to the buffer pool
- ❑ `BUF_maxbuff`. Get the maximum number of buffers used in a pool
- ❑ `BUF_stat`. Get statistics for the specified buffer pool

Constants, Types, and Structures

```
typedef unsigned int  MEM_sizep;

#define BUF_ALLOCSTAMP 0xcafe
#define BUF_FREESTAMP 0xbeef

typedef struct BUF_Obj {
    Ptr startaddr; /* Start addr of buffer pool */
    MEM_sizep size; /* Size before alignment */
    MEM_sizep postalignsize; /* Size after align */
    Ptr nextfree; /* Ptr to next free buffer */
    Uns totalbuffers; /* # of buffers in pool*/
    Uns freebuffers; /* # of free buffers in pool */
    Int segid; /* Mem seg for buffer pool */
} BUF_Obj, *BUF_Handle;

typedef struct BUF_Attrs {
    Int segid; /* segment for element allocation */
} BUF_Attrs;

BUF_Attrs BUF_ATTRS = { /* default attributes */
    0,
};

typedef struct BUF_Stat {
    MEM_sizep postalignsize; /* Size after align */
    MEM_sizep size; /* Original size of buffer */
    Uns totalbuffers; /* Total buffers in pool */
    Uns freebuffers; /* # of free buffers in pool */
} BUF_Stat;
```

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the BUF Manager Properties and BUF Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default (Enum Options)
OBJMEMSEG	Reference	prog.get("IDRAM")

Instance Configuration Parameters

Name	Type	Default (Enum Options)
comment	String	"<add comments here>"
bufSeg	Reference	prog.get("IDRAM")
bufCount	Int32	1
size	Int32	8
align	Int32	4
len	Int32	8
postalignsize	Int32	8

Description

The BUF module maintains pools of fixed-size buffers. These buffer pools can be created statically or dynamically. Dynamically-created buffer pools are allocated from a dynamic memory heap managed by the MEM module. Applications typically allocate buffer pools statically when size and alignment constraints are known at design time. Run-time allocation is used when these constraints vary during execution.

Within a buffer pool, all buffers have the same size and alignment. Although each frame has a fixed length, the application can put a variable amount of data in each frame, up to the length of the frame. You can create multiple buffer pools, each with a different buffer size.

Buffers can be allocated and freed from a pool as needed at run-time using the BUF_alloc and BUF_free functions.

The advantages of allocating memory from a buffer pool instead of from the dynamic memory heaps provided by the MEM module include:

- ❑ **Deterministic allocation times.** The BUF_alloc and BUF_free functions require a constant amount of time. Allocating and freeing memory through a heap is not deterministic.
- ❑ **Callable from all thread types.** Allocating and freeing buffers is atomic and non-blocking. As a result, BUF_alloc and BUF_free can be called from all types of DSP/BIOS threads: HWI, SWI, TSK, and IDL. In contrast, HWI and SWI threads cannot call MEM_alloc.
- ❑ **Optimized for fixed-length allocation.** In contrast MEM_alloc is optimized for variable-length allocation.

BUF Manager Properties

- Less fragmentation.** Since the buffers are of fixed-size, the pool does not become fragmented.

The following global properties can be set for the BUF module in the BUF Manager Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- Object Memory.** The memory segment to contain all BUF objects. (A BUF object may be stored in a different location than the buffer pool memory itself.)

Tconf Name: OBJMEMSEG Type: Reference

Example: `bios.BUF.OBJMEMSEG = prog.get("myMEM");`

BUF Object Properties

The following properties can be set for a buffer pool object in the BUF Object Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script. To create an BUF object in a configuration script, use the following syntax:

```
var myBuf = bios.BUF.create("myBUF");
```

The Tconf examples that follow assume the object has been created as shown.

- comment.** Type a comment to identify this BUF object.

Tconf Name: comment Type: String

Example: `myBuf.comment = "my BUF";`

- Memory segment for buffer pool.** Select the memory segment in which the buffer pool is to be created. The linker decides where in the segment the buffer pool starts.

Tconf Name: bufSeg Type: Reference

Example: `myBuf.bufSeg = prog.get("myMEM");`

- Buffer count.** Specify the number of fixed-length buffers to create in this pool.

Tconf Name: bufCount Type: Int32

Example: `myBuf.bufCount = 128;`

- Buffer size.** Specify the size (in MADUs) of each fixed-length buffer inside this buffer pool. The default size shown is the minimum valid value for that platform. This size may be adjusted to accommodate the alignment in the "Buffer size after alignment" property.

Tconf Name: size Type: Int32

Example: `myBuf.size = 8;`

- ❑ **Buffer alignment.** Specify the alignment boundary for fixed-length buffers in the pool. Each buffer is aligned on boundaries with a multiple of this number. The default size shown is the minimum valid value for that platform. The value must be a power of 2.

Tconf Name: align

Type: Int32

Example: `myBuf.align = 4;`

- ❑ **Buffer pool length.** The actual length of the buffer pool (in MADUs) is calculated by multiplying the Buffer count by the Buffer size after alignment. You cannot modify this value directly.

Tconf Name: len

Type: Int32

Example: `myBuf.len = 8;`

- ❑ **Buffer size after alignment.** This property shows the modified Buffer size after applying the alignment. For example, if the Buffer size is 9 and the alignment is 4, the Buffer size after alignment is 12 (the next whole number multiple of 4 after 9).

Tconf Name: postalignsize

Type: Int32

Example: `myBuf.postalignsize = 8;`

BUF_alloc*Allocate a fixed-size buffer from a buffer pool***C Interface**

Syntax bufaddr = BUF_alloc(buf);

Parameters BUF_Handle buf; /* buffer pool object handle */

Return Value Ptr bufaddr; /* pointer to free buffer */

Reentrant yes

Description BUF_alloc allocates a fixed-size buffer from the specified buffer pool and returns a pointer to the buffer. BUF_alloc does not initialize the allocated buffer space.

The buf parameter is a handle to identify the buffer pool object, from which the fixed size buffer is to be allocated. If the buffer pool was created dynamically, the handle is the one returned by the call to BUF_create. If the buffer pool was created statically, the handle can be referenced as shown in the example that follows.

If buffers are available in the specified buffer pool, BUF_alloc returns a pointer to the buffer. If no buffers are available, BUF_alloc returns NULL.

The BUF module manages synchronization so that multiple threads can share the same buffer pool for allocation and free operations.

The time required to successfully execute BUF_alloc is deterministic (constant over multiple calls).

Example

```
extern BUF_Obj bufferPool;
BUF_Handle buffPoolHandle = &bufferPool;

Ptr buffPtr;

/* allocate a buffer */
buffPtr = BUF_alloc(buffPoolHandle);
if (buffPtr == NULL ) {
    SYS_abort("BUF_alloc failed");
}
```

See Also BUF_free
MEM_alloc

BUF_create*Dynamically create a buffer pool***C Interface**

Syntax `buf = BUF_create(numbuff, size, align, attrs);`

Parameters

Uns	numbuff;	/* number of buffers in the pool */
MEM_sizep	size;	/* size of a single buffer in the pool */
Uns	align;	/* alignment for each buffer in the pool */
BUF_Attrs	*attrs;	/* pointer to buffer pool attributes */

Return Value `BUF_Handle buf;` /* buffer pool object handle */

Reentrant no

Description BUF_create creates a buffer pool object dynamically. The parameters correspond to the properties available for statically-created buffer pools, which are described in the BUF Object Properties topic.

The numbuff parameter specifies how many fixed-length buffers the pool should contain. This must be a non-zero number.

The size parameter specifies how long each fixed-length buffer in the pool should be in MADUs. This must be a non-zero number. The size you specify is adjusted as needed to meet the alignment requirements, so the actual buffer size may be larger. The MEM_sizep type is defined as follows:

```
typedef unsigned int MEM_sizep;
```

The align parameter specifies the alignment boundary for buffers in the pool. Each buffer is aligned on a boundary with an address that is a multiple of this number. The value must be a power of 2. The size of buffers created in the pool is automatically increased to accommodate the alignment you specify.

BUF_create ensures that the size and alignment are set to at least the minimum values permitted for the platform. The minimum size permitted is 8 MADUs. The minimum alignment permitted is 4.

The attrs parameter points to a structure of type BUF_Attrs, which is defined as follows:

```
typedef struct BUF_Attrs {
    Int segid; /* segment for element allocation*/
} BUF_Attrs;
```

The `segid` element can be used to specify the memory segment in which buffer pool should be created. If `attrs` is `NULL`, the new buffer pool is created the default attributes specified in `BUF_ATTRS`, which uses the default memory segment.

`BUF_create` calls `MEM_alloc` to dynamically create the `BUF` object's data structure and the buffer pool.

`BUF_create` returns a handle to the buffer pool of type `BUF_Handle`. If the buffer pool cannot be created, `BUF_create` returns `NULL`. The pool may not be created if the `numbuff` or `size` parameter is zero or if the memory available in the specified heap is insufficient.

The time required to successfully execute `BUF_create` is not deterministic (that is, the time varies over multiple calls).

Constraints and Calling Context

- ❑ `BUF_create` cannot be called from a SWI or HWI.
- ❑ The product of the `size` (after adjusting for the alignment) and `numbuff` parameters should not exceed the maximum `Uns` value.
- ❑ The alignment should be greater than the minimum value and must be a power of 2. If it is not, proper creation of buffer pool is not guaranteed.

Example

```
BUF_Handle myBufpool;
BUF_Attrs myAttrs;

myAttrs = BUF_ATTRS;
myBufpool=BUF_create(5, 4, 2, &myAttrs);
if( myBufpool == NULL ){
    LOG_printf(&trace,"BUF_create failed!");
}
```

See Also

`BUF_delete`

BUF_delete*Delete a dynamically-created buffer pool***C Interface**

Syntax status = BUF_delete(buf);

Parameters BUF_Handle buf; /* buffer pool object handle */

Return Value Uns status; /* returned status */

Reentrant no

Description BUF_delete frees the buffer pool object and the buffer pool memory referenced by the handle provided.

The buf parameter is the handle that identifies the buffer pool object. This handle is the one returned by the call to BUF_create. BUF_delete cannot be used to delete statically created buffer pool objects.

BUF_delete returns 1 if it has successfully freed the memory for the buffer object and buffer pool. It returns 0 (zero) if it was unable to delete the buffer pool.

BUF_delete calls MEM_free to delete the BUF object and to free the buffer pool memory. MEM_free must acquire a lock to the memory before proceeding. If another task already holds a lock on the memory, there is a context switch.

The time required to successfully execute BUF_delete is not deterministic (that is, the time varies over multiple calls).

Constraints and Calling Context

- ❑ BUF_delete cannot be called from a SWI or HWI.
- ❑ BUF_delete cannot be used to delete statically created buffer pool objects. No check is performed to ensure that this is the case.
- ❑ BUF_delete assumes that all the buffers allocated from the buffer pool have been freed back to the pool.

Example

```
BUF_Handle myBufpool;  
Uns delstat;  
  
delstat = BUF_delete(myBufpool);  
if( delstat == 0 ) {  
    LOG_printf(&trace, "BUF_delete failed!");  
}
```

See Also BUF_create

BUF_free*Free a fixed memory buffer into the buffer pool***C Interface****Syntax**

```
status = BUF_free(buf, bufaddr);
```

Parameters

```
BUF_Handle buf;      /* buffer pool object handle */
Ptr         bufaddr; /* address of buffer to free */
```

Return Value

```
Bool        status; /* returned status */
```

Reentrant

```
yes
```

Description

BUF_free frees the specified buffer back to the specified buffer pool. The newly freed buffer is then available for further allocation by BUF_alloc.

The buf parameter is the handle that identifies the buffer pool object. This handle is the one returned by the call to BUF_create.

The bufaddr parameter is the pointer returned by the corresponding call to BUF_alloc.

BUF_free always returns TRUE if DSP/BIOS real-time analysis is disabled (in the GBL Module Properties). If real-time analysis is enabled, BUF_free returns TRUE if the bufaddr parameter is within the range of the specified buffer pool; otherwise it returns FALSE.

The BUF module manages synchronization so that multiple threads can share the same buffer pool for allocation and free operations.

The time required to successfully execute BUF_free is deterministic (constant over multiple calls).

Example

```
extern BUF_Obj bufferPool;
BUF_Handle buffPoolHandle = &bufferPool;
Ptr buffPtr;
```

```
...
```

```
BUF_free(buffPoolHandle, buffPtr);
```

See Also

```
BUF_alloc
MEM_free
```

BUF_maxbuff

Check the maximum number of buffers from the buffer pool

C Interface

Syntax `count = BUF_maxbuff(buf);`

Parameters `BUF_Handle buf; /* buffer pool object Handle */`

Return Value `Uns count; /*maximum number of buffers used */`

Reentrant no

Description BUF_maxbuff returns the maximum number of buffers that have been allocated from the specified buffer pool at any time. The count measures the number of buffers in use, not the total number of times buffers have been allocated.

The buf parameter is the handle that identifies the buffer pool object. This handle is the one returned by the call to BUF_create.

BUF_maxbuff distinguishes free and allocated buffers via a stamp mechanism. Allocated buffers are marked with the BUF_ALLOCSTAMP stamp (0xcafe). If the application happens to change this stamp to the BUF_FREESTAMP stamp (0xbeef), the count may be inaccurate. Note that this is not an application error. This stamp is only used for BUF_maxbuff, and changing it does not affect program execution.

The time required to successfully execute BUF_maxbuff is not deterministic (that is, the time varies over multiple calls).

Constraints and Calling Context

- ❑ BUF_maxbuff cannot be called from a SWI or HWI.
- ❑ The application must implement synchronization to ensure that other threads do not perform BUF_alloc during the execution of BUF_maxbuff. Otherwise, the count returned by BUF_maxbuff may be inaccurate.

Example

```
extern BUF_Obj bufferPool;
BUF_Handle buffPoolHandle = &bufferPool;
Int maxbuff;

maxbuff = BUF_maxbuff(buffPoolHandle);
LOG_printf(&trace, "Max buffers used: %d", maxbuff);
```

See Also

BUF_stat*Determine the status of a buffer pool***C Interface**

Syntax BUF_stat(buf,statbuf);

Parameters BUF_Handle buf; /* buffer pool object handle */
 BUF_Stat *statbuf; /* pointer to buffer status structure */

Return Value none

Reentrant yes

Description BUF_stat returns the status of the specified buffer pool.

The buf parameter is the handle that identifies the buffer pool object. This handle is the one returned by the call to BUF_create.

The statbuf parameter must be a structure of type BUF_Stat. The BUF_stat function fills in all the fields of the structure. The BUF_Stat type has the following fields:

```
typedef struct BUF_Stat {
    MEM_sizep postalignsize; /* Size after align */
    MEM_sizep size;         /* Original size of buffer */
    Uns totalbuffers; /* Total # of buffers in pool */
    Uns freebuffers; /* # of free buffers in pool */
} BUF_Stat;
```

Size values are expressed in Minimum Addressable Data Units (MADUs). BUF_stat collects statistics with interrupts disabled to ensure the correctness of the statistics gathered.

The time required to successfully execute BUF_stat is deterministic (constant over multiple calls).

Example

```
extern BUF_Obj bufferPool;
BUF_Handle buffPoolHandle = &bufferPool;
BUF_Stat stat;

BUF_stat(buffPoolHandle, &stat);
LOG_printf(&trace, "Free buffers Available: %d",
           stat.freebuffers);
```

See Also MEM_stat

2.4 C62 and C64 Modules

The C62 and C64 modules include target-specific functions for the TMS320C6000 family. Use the C62 APIs for 'C62x, 'C67x, and 'C67+ devices. Use the 'C64 APIs for 'C64x and 'C64x+ devices.

Functions

- ❑ C62_disableIER. ASM macro to disable selected interrupts in IER
- ❑ C62_enableIER. ASM macro to enable selected interrupts in IER
- ❑ C62_plug. Plug interrupt vector
- ❑ C64_disableIER. ASM macro to disable selected interrupts in IER
- ❑ C64_enableIER. ASM macro to enable selected interrupts in IER
- ❑ C64_plug. Plug interrupt vector

Description

The C62 and C64 modules provide certain target-specific functions and definitions for the TMS320C6000 family of processors.

See the c62.h or c64.h files for a complete list of definitions for hardware flags for C. The c62.h and c64.h files contain C language macros, #defines for various TMS320C6000 registers, and structure definitions. The c62.h62 and c64.h64 files also contain assembly language macros for saving and restoring registers in HWIs.

C62_disableIER*Disable certain maskable interrupts***C Interface****Syntax**

```
oldmask = C62_disableIER(mask);
```

Parameters

```
Uns      mask;    /* disable mask */
```

Return Value

```
Uns      oldmask; /* actual bits cleared by disable mask */
```

Description

C62_disableIER disables interrupts by clearing the bits specified by mask in the Interrupt Enable Register (IER).

C62_disableIER returns a mask of bits actually cleared. This return value should be passed to C62_enableIER to re-enable interrupts.

See C62_enableIER for a description and code examples for safely protecting a critical section of code from interrupts.

See Also

C62_enableIER

C64_disableIER*Disable certain maskable interrupts***C Interface**

Syntax `oldmask = C64_disableIER(mask);`

Parameters `Uns mask; /* disable mask */`

Return Value `Uns oldmask; /* actual bits cleared by disable mask */`

Description

C64_disableIER disables interrupts by clearing the bits specified by mask in the Interrupt Enable Register (IER).

C64_disableIER returns a mask of bits actually cleared. This return value should be passed to C64_enableIER to re-enable interrupts.

See C64_enableIER for a description and code examples for safely protecting a critical section of code from interrupts.

See Also

C64_enableIER

C62_enableIER*Enable certain maskable interrupts***C Interface**

Syntax	C62_enableIER(oldmask);
Parameters	Uns oldmask; /* enable mask */
Return Value	Void

Description

C62_disableIER and C62_enableIER disable and enable specific internal interrupts by modifying the Interrupt Enable Register (IER). C62_disableIER clears the bits specified by the mask parameter in the IER and returns a mask of the bits it cleared. C62_enableIER sets the bits specified by the oldmask parameter in the IER.

C62_disableIER and C62_enableIER are usually used in tandem to protect a critical section of code from interrupts. The following code examples show a region protected from all interrupts:

```
/* C example */
Uns    oldmask;

oldmask = C62_disableIER(~0);
  `do some critical operation; `
  `do not call TSK_sleep, SEM_post, etc.`
C62_enableIER(oldmask);
```

Note:

DSP/BIOS kernel calls that can cause a task switch (for example, SEM_post and TSK_sleep) should be avoided within a C62_disableIER / C62_enableIER block since the interrupts can be disabled for an indeterminate amount of time if a task switch occurs.

Alternatively, you can disable DSP/BIOS task scheduling for this block by enclosing it with TSK_disable / TSK_enable. You can also use C62_disableIER / C62_enableIER to disable selected interrupts, allowing other interrupts to occur. However, if another HWI does occur during this region, it could cause a task switch. You can prevent this by using TSK_disable / TSK_enable around the entire region:

```
Uns    oldmask;

TSK_disable();
oldmask = C62_disableIER(INTMASK);
    `do some critical operation;`
    `NOT OK to call TSK_sleep, SEM_post, etc.`
C62_enableIER(oldmask);
TSK_enable();
```

Note:

If you use C_disableIER / C62_enableIER to disable only some interrupts, you must surround this region with SWI_disable / SWI_enable, to prevent an intervening HWI from causing a SWI or TSK switch.

The second approach is preferable if it is important not to disable all interrupts in your system during the critical operation.

See Also

C62_disableIER

C64_enableIER*Enable certain maskable interrupts***C Interface**

Syntax	C64_enableIER(oldmask);
Parameters	Uns oldmask; /* enable mask */
Return Value	Void

Description

C64_disableIER and C64_enableIER are used to disable and enable specific internal interrupts by modifying the Interrupt Enable Register (IER). C64_disableIER clears the bits specified by the mask parameter in the Interrupt Mask Register and returns a mask of the bits it cleared. C64_enableIER sets the bits specified by the oldmask parameter in the Interrupt Mask Register.

C64_disableIER and C64_enableIER are usually used in tandem to protect a critical section of code from interrupts. The following code examples show a region protected from all maskable interrupts:

```
/* C example */
Uns    oldmask;

oldmask = C64_disableIER(~0);
    `do some critical operation; `
    `do not call TSK_sleep, SEM_post, etc.`
C64_enableIER(oldmask);
```

Note:

DSP/BIOS kernel calls that can cause a task switch (for example, SEM_post and TSK_sleep) should be avoided within a C64_disableIER and C64_enableIER block since the interrupts can be disabled for an indeterminate amount of time if a task switch occurs.

Alternatively, you can disable DSP/BIOS task scheduling for this block by enclosing it with TSK_disable / TSK_enable. You can also use C64_disableIER and C64_enableIER to disable selected interrupts, allowing other interrupts to occur. However, if another HWI does occur during this region, it could cause a task switch. You can prevent this by using TSK_disable / TSK_enable around the entire region:

```
Uns    oldmask;

TSK_disable();
oldmask = C64_disableIER(INTMASK);
    `do some critical operation;`
    `NOT OK to call TSK_sleep, SEM_post, etc.`
C64_enableIER(oldmask);
TSK_enable();
```

Note:

If you use C64_disableIER and C64_enableIER to disable only some interrupts, you must surround this region with SWI_disable / SWI_enable, to prevent an intervening HWI from causing a SWI or TSK switch.

The second approach is preferable if it is important not to disable all interrupts in your system during the critical operation.

See Also

C64_disableIER

C62_plug*C function to plug an interrupt vector***C Interface****Syntax**

C62_plug(vecid, fxn, dmachan);

Parameters

Int vecid; /* interrupt id */
 Fxn fxn; /* pointer to HWI function */
 Int dmachan; /* DMA channel to use for performing plug */

Return Value

Void

Description

C62_plug writes an Interrupt Service Fetch Packet (ISFP) into the Interrupt Service Table (IST), at the address corresponding to vecid. The op-codes written in the ISFP create a branch to the function entry point specified by fxn:

```
stw    b0, *SP-- [1]
mvk    fxn, b0
mvkh   fxn, b0
b      b0
ldw    *++SP [1], b0
nop    4
```

The dmachan necessary depends upon whether the IST is stored in internal or external RAM:

- ❑ **IST is in internal RAM.** If the CPU cannot access internal program RAM, a DMA channel must be used and the dmachan parameter must be a valid DMA channel. For example, 'C6x0x devices cannot access internal program RAM.

If the CPU can access internal program RAM, the dmachan parameter should be set to -1, which causes a CPU copy. For example, 'C6x11 devices can access internal program RAM.

- ❑ **IST is in external RAM.** The dmachan parameter should be set to -1.

If a DMA channel is specified by the dmachan parameter, C62_plug assumes that the DMA channel is available for use, and stops the DMA channel before programming it. If the DMA channel is shared with other code, a semaphore or other DSP/BIOS signaling method should be used to provide mutual exclusion before calling C62_plug.

C62_plug does not enable the interrupt. Use C62_enableIER to enable specific interrupts.

Constraints and Calling Context

- ❑ vecid must be a valid interrupt ID in the range of 0-15.
- ❑ dmachan must be 0, 1, 2, or 3 if the IST is in internal program memory and the device is a 'C6x0x.

See Also

C62_enableIER
 HWI_dispatchPlug

C64_plug*C function to plug an interrupt vector***C Interface****Syntax**

C64_plug(vecid, fxn, dmachan);

Parameters

Int vecid; /* interrupt id */
 Fxn fxn; /* pointer to HWI function */
 Int dmachan; /* DMA channel to use for performing plug */

Return Value

Void

Description

C64_plug writes an Interrupt Service Fetch Packet (ISFP) into the Interrupt Service Table (IST), at the address corresponding to vecid. The op-codes written in the ISFP create a branch to the function entry point specified by fxn:

```
stw    b0, *SP-- [1]
mvk    fxn, b0
mvkh   fxn, b0
b      b0
ldw    *++SP [1], b0
nop    4
```

C64_plug hooks up the specified function as the branch target for a hardware interrupt (fielded by the CPU) at the vector address corresponding to vecid. C64_plug does not enable the interrupt. Use or C64_enableIER to enable specific interrupts.

For C64x devices, you may set dmachan to -1 to specify a CPU copy, regardless of where the IST is stored. Alternately, you may specify a DMA channel. If you use dmachan to specify a DMA channel, C64_plug assumes that the DMA channel is available for use, and stops the DMA channel before programming it. If the DMA channel is shared with other code, use a semaphore or other DSP/BIOS signaling method to provide mutual exclusion before calling C64_plug or HWI_dispatchPlug.

For C64x+ devices, dmachan is ignored. However, there is a case where DMA is automatically used on C64x+ devices. If the vector table location is L1P SRAM, then IDMA1 is used for the vector copy. In this case, the API waits for any activity to finish on IDMA1 before using it. It then waits for the vector copy DMA activity to complete before returning. Since the stack is used for the source location of the DMA copy, C64_plug must be called while a stack from internal memory (L1 or L2) is active (and only when the vector table is in L1P SRAM).

Constraints and Calling Context

- ❑ vecid must be a valid interrupt ID in the range of 0-15.

See Also

C64_enableIER
 HWI_dispatchPlug

2.5 CLK Module

The CLK module is the clock manager.

Functions

- ❑ CLK_countspms. Timer counts per millisecond
- ❑ CLK_cpuCyclesPerHtime. Return high-res time to CPU cycles factor
- ❑ CLK_cpuCyclesPerLtime. Return low-res time to CPU cycles factor
- ❑ CLK_gethtime. Get high-resolution time
- ❑ CLK_gettime. Get low-resolution time
- ❑ CLK_getprd. Get period register value
- ❑ CLK_reconfig. Reset timer period and registers using CPU frequency
- ❑ CLK_start. Restart low-resolution timer
- ❑ CLK_stop. Stop low-resolution timer

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the CLK Manager Properties and CLK Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default
OBJMEMSEG	Reference	prog.get("IDRAM")
TIMERSELECT	String	"Timer 0"
ENABLECLK	Bool	true
HIRESTIME	Bool	true
ENABLEHTIME	Bool	true ('C64x+ only)
SPECIFYRATE	Bool	usually false ('C64x+ only)
INPUTCLK	Numeric	166.6667 (varies by platform)
RESETTIMER	Bool	true ('C64x+ only)
TIMMODE	EnumString	"32-bit unchained" ("32-bit chained", "externally programmed") ('C64x+ only)
MICROSECONDS	Int16	1000
CONFIGURETIMER	Bool	false
PRD	Int16	33250, 37500, or 75000 (varies by platform)

Name	Type	Default
TCRTDDR	EnumInt	0 (0 to 0xffffffff) ('C64x+ only)
POSTINITFXN	Extern	prog.extern("FXN_F_nop") ('C672x only)
CONONDEBUG	Bool	false ('C672x only)
STARTBOTH	Bool	false ('C672x only)

Instance Configuration Parameters

Name	Type	Default
comment	String	"<add comments here>"
fxn	Extern	prog.extern("FXN_F_nop")
order	Int16	0

Description

The CLK module provides methods for gathering timing information and for invoking functions periodically. The CLK module provides real-time clocks with functions to access the low-resolution and high-resolution times. These times can be used to measure the passage of time in conjunction with STS accumulator objects, as well as to add timestamp messages in event logs.

DSP/BIOS provides the following timing methods:

- ❑ **Timer Counter.** This DSP/BIOS counter changes at a relatively fast platform-specific rate. This counter is used only if the Clock Manager is enabled in the CLK Manager Properties.
- ❑ **Low-Resolution Time.** This time is incremented when the timer counter reaches its target value. When this time is incremented, any functions defined for CLK objects are run.
- ❑ **High-Resolution Time.** For some platforms, the timer counter is also used to determine the high-resolution time. For other platforms, a different timer is used for the high-resolution time.
- ❑ **Periodic Rate.** The PRD functions can be run at a multiple of the clock interrupt rate (the low-resolution rate) if you enable the "Use CLK Manager to Drive PRD" in the PRD Manager Properties.
- ❑ **System Clock.** The PRD rate, in turn, can be used to run the system clock, which is used to measure TSK-related timeouts and ticks. If you set the "TSK Tick Driven By" in the TSK Manager Properties to "PRD", the system clock ticks at the specified multiple of the clock interrupt rate (the low-resolution rate).

Timer Counter

The timer counter changes at a relatively fast rate until it reaches a target value. When the target value is reached, the timer counter is reset, a timer interrupt occurs, the low-resolution time is incremented, and any functions defined for CLK objects are run.

Table 2-1 shows the rate at which the timer counter changes, its target value, and how the value is reset once the target value has been reached.

Table 2-1. Timer Counter Rates, Targets, and Resets

Platform	Timer Counter Rate	Target Value	Value Reset
'C6201, 'C6211, 'C6713	Incremented every 4 CPU cycles.	PRD value	Counter reset to 0.
'C672x and devices with Real-Time Interrupt Module (RTI)	Incremented at $\text{SYSCLK} / 4$.	Compare register value (same as PRD)	Counter reset to 0.
'C6416	Incremented every 8 CPU cycles.	PRD value	Counter reset to 0.
'C64x+	Incremented at $\text{CLKOUT} / ((\text{TDDR}+1) * 8)$, where CLKOUT is the DSP clock speed in MHz (see GBL Module Properties) and TDDR is the value in the prescaler register (see CLK Manager Properties).	PRD value	Counter reset to 0.

Low-Resolution Time

When the value of the timer counter is reset to the value in the right-column of Table 2-1, the following actions happen:

- ❑ A timer interrupt occurs
- ❑ As a result of the timer interrupt, the HWI object for the selected timer runs the CLK_F_isr function.
- ❑ The CLK_F_isr function causes the low-resolution time to be incremented by 1.
- ❑ The CLK_F_isr function causes all the CLK Functions to be performed in sequence in the context of that HWI.

Note: Specifying On-device Timer

The configuration allows you to specify which on-device timer you want to use. DSP/BIOS requires the default setting in the Interrupt Selector Register for the selected timer. For example, interrupt 14 must be configured for Timer 0, interrupt 15 must be configured for Timer 1, and interrupt 11 must be configured for Timer 2.

Therefore, the low-resolution clock ticks at the timer interrupt rate and returns the number of timer interrupts that have occurred. You can use the `CLK_gettime` function to get the low-resolution time and the `CLK_getprd` function to get the value of the period register property.

You can use `GBL_setFrequency`, `CLK_stop`, `CLK_reconfig`, and `CLK_start` to change the low-resolution timer rate.

The low-resolution time is stored as a 32-bit value. Its value restarts at 0 when the maximum value is reached.

On C64x+ devices, the low-resolution timer uses the least-significant 32 bits of the 64-bit GP/WD Timer. This time is configured for dual 32-bit unchained timer mode operation (except for some early C64x+ simulators). The upper 32 bits of the timer are available to your application. However, you must observe the following precautions:

- ❑ Do not modify TCR12, which controls the operation of the low-resolution timer.
- ❑ Do not modify PRD1 and PRD2, which determine the period of the low-resolution timer interrupt.
- ❑ Do not modify the TIMMODE nor the TIM12RS_ bits of the Timer Global Control Register (TGCR).

High-Resolution Time

The high-resolution time is determined as follows for your platform:

Table 2-2. High-Resolution Time Determination

Platform	Description
'C6201, 'C6211, 'C6713	Number of times the timer counter has been incremented.
'C672x and devices with RTI module	Number of times the timer counter has been incremented.
'C6416	Number of times the timer counter has been incremented.

Table 2-2. High-Resolution Time Determination

Platform	Description
'C64x+	A separate DSP/BIOS counter for the high-resolution time runs at the CLKOUT rate. This timer counter is stored in 32 bits.

You can use the CLK_gethetime function to get the high-resolution time and the CLK_countspms function to get the number of hardware timer counter register ticks per millisecond.

The high-resolution time is stored as a 32-bit value. For platforms that use the same timer counter as the low-resolution time, the 32-bit high-resolution time is actually calculated by multiplying the low-resolution time by the value of the PRD property and adding number of timer counter increments since the last timer counter reset.

The high-resolution value restarts at 0 when the maximum value is reached.

CLK Functions

The CLK functions performed when a timer interrupt occurs are performed in the context of the hardware interrupt that caused the system clock to tick. Therefore, the amount of processing performed within CLK functions should be minimized and these functions can only invoke DSP/BIOS calls that are allowable from within an HWI.

Note:

CLK functions should not call HWI_enter and HWI_exit as these are called internally by the HWI dispatcher when it runs CLK_F_isr. Additionally, CLK functions should **not** use the *interrupt* keyword or the INTERRUPT pragma in C functions.

The HWI object that runs the CLK_F_isr function is configured to use the HWI dispatcher. You can modify the dispatcher-specific properties of this HWI object. For example, you can change the interrupt mask value and the cache control value. See the HWI Module, page 2–176, for a description of the HWI dispatcher and these HWI properties. *You may not* disable the use of the HWI dispatcher for the HWI object that runs the CLK_F_isr function.

CLK Manager Properties

The following global properties can be set for the CLK module in the CLK Manager Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **Object Memory.** The memory segment that contains the CLK objects created in the configuration.
Tconf Name: OBJMEMSEG Type: Reference
Example: `bios.CLK.OBJMEMSEG = prog.get("myMEM");`
- ❑ **CPU Interrupt.** Shows which HWI interrupt is used to drive the timer services. The value is changed automatically when you change the Timer Selection. This is an informational property only.
Tconf Name: N/A
- ❑ **Timer Selection.** The on-device timer to use. Changing this setting also automatically changes the CPU Interrupt used to drive the timer services and the function property of the relevant HWI objects.
Tconf Name: TIMERSELECT Type: String
Options: "Timer 0", "Timer 1"
Example: `bios.CLK.TIMERSELECT = "Timer 0";`
- ❑ **Enable CLK Manager.** If this property is set to true, the on-device timer hardware is used to drive the high- and low-resolution times and to trigger execution of CLK functions. On platforms where the separate ENABLEHTIME property is available, setting the ENABLECLK property to true and the ENABLEHTIME property to false enables only the low-resolution timer.
Tconf Name: ENABLECLK Type: Bool
Example: `bios.CLK.ENABLECLK = true;`
- ❑ **Use high resolution time for internal timings.** If this property is set to true, the high-resolution timer is used to monitor internal periods. Otherwise the less intrusive, low-resolution timer is used.
Tconf Name: HIRESTIME Type: Bool
Example: `bios.CLK.HIRESTIME = true;`
- ❑ **Enable high resolution timer.** If this property is set to true, this parameter enables the high-resolution timer. This property is available only for the 'C64x+. For platforms that use only one timer, the high-resolution and low-resolution timers are both enabled and disabled by the "Enable CLK Manager" property.
Tconf Name: ENABLEHTIME Type: Bool
Example: `bios.CLK.ENABLEHTIME = true;`

- ❑ **Specify input clock rate.** (C64x+ only) If this property is set to true, you can specify the Input frequency (INPUTCLK) property. Otherwise, the default clock frequency is used. The default is dependant on the platform.

Tconf Name: SPECIFYRATE Type: Bool

Example: `bios.CLK.SPECIFYRATE = true;`
- ❑ **Input frequency (MHz).** Set this property to the low-resolution timer's input clock frequency. This is the timer used by CLK_gettime.

Tconf Name: INPUTCLK Type: Numeric

Example: `bios.CLK.INPUTCLK = 166.6667;`
- ❑ **Reset Timer and TIMMODE.** (C64x+ only) This property is checked by the DSP/BIOS CLK startup code. If it is set to true (the default), DSP/BIOS initializes the timer to the mode specified by the Timer Mode (TIMMODE) property. This property is provided because some applications share the timer with DSP/BIOS and need to assume responsibility for initializing the timer mode. On some DaVinci devices, for example, the ARM operating system and DSP/BIOS share a timer. In this configuration, the ARM is responsible for initializing and resetting the timer, so you should set the RESETTIMER property for DSP/BIOS to false.

Tconf Name: RESETTIMER Type: Bool

Example: `bios.CLK.RESETTIMER = true;`
- ❑ **Timer Mode.** (C64x+ only) This property specifies the timer mode. There is no benefit to selecting either the "32-bit chained" or "externally programmed" mode. These modes are provided only for some early C64x+ simulators that did not support 32-bit unchained mode. See "Low-Resolution Time" on page 2-53 for more about the timer mode.

Tconf Name: TIMMODE Type: EnumString

Options: "32-bit chained", "32-bit unchained", and "externally programmed"

Example: `bios.CLK.TIMMODE = "32-bit unchained";`
- ❑ **Microseconds/Int.** The number of microseconds between timer interrupts. The period register is set to a value that achieves the desired period as closely as possible.

Tconf Name: MICROSECONDS Type: Int16

Example: `bios.CLK.MICROSECONDS = 1000;`

- ❑ **Directly configure on-device timer registers.** If this property is set to true, the period register can be directly set to the desired value. In this case, the Microseconds/Int property is computed based on the value in period register and the CPU clock speed in the GBL Module Properties.

Tconf Name: CONFIGURETIMER Type: Bool

Example: `bios.CLK.CONFIGURETIMER = false;`

- ❑ **TDDR register.** The value of the on-device timer prescaler.

Platform	Options	Size	Registers
'C64x+	00h to 0ffffffh	32 bits	PRD3:PRD4

Tconf Name: TCRTDDR Type: EnumInt

Example: `bios.CLK.TCRTDDR = 2;`

- ❑ **PRD Register.** This value specifies the interrupt period and is used to configure the PRD register. The default value varies depending on the platform. The default value for 'C6201 is 33250, for 'C6211 is 37500, for 'C6416 is 75000, for 'C6713 is 37500, for 'C672x is 75000, and for the 'C64x+ is 125.

Tconf Name: PRD Type: Int16

Example: `bios.CLK.PRD = 33250;`

- ❑ **Timer 1 Init Function.** ('C672x and RTI timer module devices only) This function runs during the DSP/BIOS timer startup process. It is intended to be used to perform Timer 1 setup. This function should set all Timer 1 related registers and should enable the Timer 1 interrupt in the IER. The sequence of events performed during the CLK module startup is as follows:

- a) Perform Timer 0 setup.
- b) Set the COMP1 and CPUC1 registers to the same value as the COMP0 and CPUC0 registers.
- c) Call the Timer 1 Init Function specified by this property.
- d) Enable the Timer 0 interrupt and start Timer 0. If the "Start Both Timer 0 and Timer 1" property is true, Timer 1 is also enabled and started.

Tconf Name: POSTINITFXN Type: Extern

Example: `bios.CLK.POSTINITFXN = prog.extern("FXN_F_nop");`

- ❑ **Continue Counting in Debug Mode.** ('C672x and RTI timer module devices only) If this property is set to true, the timer counter continues to count in debug mode even when the program is halted at a breakpoint.
Tconf Name: CONONDEBUG Type: Bool
Example: `bios.CLK.CONONDEBUG = false;`
- ❑ **Start Both Timer 0 and Timer 1.** ('C672x and RTI timer module devices only) If this property is set to true, DSP/BIOS starts both Timer 0 and timer 1 during the DSP/BIOS CLK module startup. This causes the Timer 0 clock and the Timer 1 clock to be synchronized.
Tconf Name: STARTBOTH Type: Bool
Example: `bios.CLK.STARTBOTH = false;`
- ❑ **Instructions/Int.** The number of instruction cycles represented by the period specified above. This is an informational property only.
Tconf Name: N/A

CLK Object Properties

The Clock Manager allows you to create an arbitrary number of CLK objects. Clock objects have functions, which are executed by the Clock Manager every time a timer interrupt occurs. These functions can invoke any DSP/BIOS operations allowable from within an HWI except HWI_enter or HWI_exit.

To create a CLK object in a configuration script, use the following syntax:

```
var myClk = bios.CLK.create("myClk");
```

The following properties can be set for a clock function object in the CLK Object Properties dialog in the DSP/BIOS Configuration Tool or in a Tconf script. The Tconf examples assume the myClk object has been created as shown.

- ❑ **comment.** Type a comment to identify this CLK object.
Tconf Name: comment Type: String
Example: `myClk.comment = "Runs timeFxn";`
- ❑ **function.** The function to be executed when the timer hardware interrupt occurs. This function must be written like an HWI function; it must be written in C or assembly and must save and restore any registers this function modifies. However, this function can not call HWI_enter or HWI_exit because DSP/BIOS calls them internally before and after this function runs.

These functions should be very short as they are performed frequently.

Since all CLK functions are performed at the same periodic rate, functions that need to run at a multiple of that rate should either count the number of interrupts and perform their activities when the counter reaches the appropriate value or be configured as PRD objects.

If this function is written in C and you are using the DSP/BIOS Configuration Tool, use a leading underscore before the C function name. (The DSP/BIOS Configuration Tool generates assembly code, which must use leading underscores when referencing C functions or labels.) If you are using Tconf, do not add an underscore before the function name; Tconf adds the underscore needed to call a C function from assembly internally.

Tconf Name: `fxn` Type: Extern

Example: `myClk.fxn = prog.extern("timeFxn");`

- **order.** You can change the sequence in which CLK functions are executed by specifying the order property of all the CLK functions.

Tconf Name: `order` Type: Int16

Example: `myClk.order = 2;`

CLK_countspms*Number of hardware timer counts per millisecond***C Interface****Syntax** ncounts = CLK_countspms();**Parameters** Void**Return Value** LgUns ncounts;**Reentrant** yes**Description** CLK_countspms returns the number of high-resolution timer counts per millisecond.

CLK_countspms can be used to compute an absolute length of time from the number of low resolution timer interrupts. For example, the following code computes time in milliseconds.

```
timeAbs = (CLK_getltime() * CLK_getprd()) / CLK_countspms();
```

The equation below computes time in milliseconds since the last wrap of the high-resolution timer counter.

```
timeAbs = CLK_gethtime() / CLK_countspms();
```

See Also

CLK_gethtime
 CLK_getprd
 CLK_cpuCyclesPerHtime
 CLK_cpuCyclesPerLtime
 GBL_getClkin
 STS_delta

CLK_cpuCyclesPerHtime *Return multiplier for converting high-res time to CPU cycles*

C Interface

Syntax `ncycles = CLK_cpuCyclesPerHtime(Void);`

Parameters `Void`

Return Value `Float ncycles;`

Reentrant `yes`

Description CLK_cpuCyclesPerHtime returns the multiplier required to convert from high-resolution time to CPU cycles. High-resolution time is returned by CLK_gethtime.

For example, the following code returns the number of CPU cycles and the absolute time elapsed during processing.

```
time1 = CLK_gethtime();
... processing ...
time2 = CLK_gethtime();
CPUCycles = (time2 - time1) * CLK_cpuCyclesPerHtime();
/* calculate absolute time in milliseconds */
TimeAbsolute = CPUCycles / GBL_getFrequency();
```

See Also CLK_gethtime
CLK_getprd
GBL_getClkin

CLK_cpuCyclesPerLtime *Return multiplier for converting low-res time to CPU cycles*

C Interface

Syntax ncycles = CLK_cpuCyclesPerLtime(Void);

Parameters Void

Return Value Float ncycles;

Reentrant yes

Description CLK_cpuCyclesPerLtime returns the multiplier required to convert from low-resolution time to CPU cycles. Low-resolution time is returned by CLK_gettime.

For example, the following code returns the number of CPU cycles and milliseconds elapsed during processing.

```
time1 = CLK_gettime();
... processing ...
time2 = CLK_gettime();
CPUCycles = (time2 - time1) * CLK_cpuCyclesPerLtime();
/* calculate absolute time in milliseconds */
TimeAbsolute = CPUCycles / GBL_getFrequency();
```

See Also CLK_gettime
CLK_getprd
GBL_getClkin

CLK_gethtime*Get high-resolution time***C Interface**

Syntax `currtime = CLK_gethtime();`

Parameters Void

Return Value LgUns `currtime /* high-resolution time */`

Reentrant no

Description

CLK_gethtime returns the number of high-resolution clock cycles that have occurred as a 32-bit value. When the number of cycles reaches the maximum value that can be stored in 32 bits, the value wraps back to 0.

See “High-Resolution Time” on page 2-54 for information about how this rate is set.

CLK_gethtime provides a value with greater accuracy than CLK_gettime, but which wraps back to 0 more frequently. For example, if the timer tick rate is 200 MHz, then regardless of the period register value, the CLK_gethtime value wraps back to 0 approximately every 86 seconds.

CLK_gethtime can be used in conjunction with STS_set and STS_delta to benchmark code. CLK_gethtime can also be used to add a time stamp to event logs.

Constraints and Calling Context

❑ CLK_gethtime cannot be called from the program’s main() function.

Example

```
/* ===== showTime ===== */  
  
Void showTicks  
{  
    LOG_printf(&trace, "time = %d", CLK_gethtime());  
}
```

See Also

CLK_gettime
PRD_getticks
STS_delta

CLK_gettime*Get low-resolution time***C Interface**

Syntax `currtime = CLK_gettime();`

Parameters Void

Return Value LgUns `currtime /* low-resolution time */`

Reentrant yes

Description CLK_gettime returns the number of timer interrupts that have occurred as a 32-bit time value. When the number of interrupts reaches the maximum value that can be stored in 32 bits, value wraps back to 0 on the next interrupt. See “Low-Resolution Time” on page 2-53 for information about the other 32 bits of this value for C64x+ devices.

The low-resolution time is the number of timer interrupts that have occurred. See “Low-Resolution Time” on page 2-53 for information about how this rate is set.

The default low resolution interrupt rate is 1 millisecond/interrupt. By adjusting the period register, you can set rates from less than 1 microsecond/interrupt to more than 1 second/interrupt.

CLK_gettime provides a value with more accuracy than CLK_gettime, but which wraps back to 0 more frequently. For example, if the timer tick rate is 200 MHz, and you use the default period register value of 50000, the CLK_gettime value wraps back to 0 approximately every 86 seconds, while the CLK_gettime value wraps back to 0 approximately every 49.7 days.

CLK_gettime is often used to add a time stamp to event logs for events that occur over a relatively long period of time.

Constraints and Calling Context

- ❑ CLK_gettime cannot be called from the program's main() function.

Example

```
/* ===== showTicks ===== */

Void showTicks
{
    LOG_printf(&trace, "time = 0x%x", CLK_gettime());
}
```

See Also

CLK_gettime
PRD_getticks
STS_delta

CLK_getprd*Get period register value***C Interface**

Syntax period = CLK_getprd();

Parameters Void

Return Value Uns period /* period register value */

Reentrant yes

Description CLK_getprd returns the number of high-resolution timer counts per low-resolution interrupt.

CLK_getprd can be used to compute an absolute length of time from the number of low-resolution timer interrupts. For example, the following code computes time in milliseconds.

```
timeAbs = (CLK_gettime() * CLK_getprd()) / CLK_countspms();
```

See Also CLK_countspms
 CLK_gettime
 CLK_cpuCyclesPerHtime
 CLK_cpuCyclesPerLtime
 GBL_getClkin
 STS_delta

CLK_reconfig*Reset timer period and registers using current CPU frequency***C Interface**

Syntax status = CLK_reconfig();

Parameters Void

Return Value Bool status /* FALSE if failed */

Reentrant yes

Description This function needs to be called after a call to GBL_setFrequency. It computes values for the timer period and the prescaler registers using the new CPU frequency. The new values for the period and prescaler registers ensure that the CLK interrupt runs at the statically configured interval in microseconds.

The return value is FALSE if the timer registers cannot accommodate the current frequency or if some other internal error occurs.

When calling CLK_reconfig outside of main(), you must also call CLK_stop and CLK_start to stop and restart the timer. Use the following call sequence:

```
/* disable interrupts if an interrupt could lead to
   another call to CLK_reconfig or if interrupt
   processing relies on having a running timer */
HWI_disable() or SWI_disable()
GBL_setFrequency(cpuFreqInKhz);
CLK_stop();
CLK_reconfig();
CLK_start();
HWI_restore() or SWI_enable()
```

When calling CLK_reconfig from main(), the timer has not yet been started. (The timer is started as part of BIOS_startup(), which is called internally after main.) As a result, you can use the following simplified call sequence in main():

```
GBL_setFrequency(cpuFreqInKhz);
CLK_reconfig(Void);
```

Note that GBL_setFrequency does not affect the PLL, and therefore has no effect on the actual frequency at which the DSP is running. It is used only to make DSP/BIOS aware of the DSP frequency you are using.

Constraints and Calling Context

- ❑ When calling CLK_reconfig from anywhere other than main(), you must also use CLK_stop and CLK_start.
- ❑ Call HWI_disable/HWI_restore or SWI_disable/SWI_enable around a block that stops, configures, and restarts the timer as needed to prevent re-entrancy or other problems. That is, you must disable interrupts if an interrupt could lead to another call to CLK_reconfig or if interrupt processing relies on having a running timer to ensure that these non-reentrant functions are not interrupted.
- ❑ If you do not stop and restart the timer, CLK_reconfig can only be called from the program's main() function.
- ❑ If you use CLK_reconfig, you should also use GBL_setFrequency.

See Also

GBL_getFrequency
GBL_setFrequency
CLK_start
CLK_stop

CLK_start*Restart the low-resolution timer***C Interface****Syntax** CLK_start();**Parameters** Void**Return Value** Void**Reentrant** no**Description**

This function starts the low-resolution timer if it has been halted by CLK_stop. The period and prescaler registers are updated to reflect any changes made by a call to CLK_reconfig. This function then resets the timer counters and starts the timer.

CLK_start should only be used in conjunction with CLK_reconfig and CLK_stop. See the section on CLK_reconfig for details and the allowed calling sequence.

Note that all 'C6000 platforms except the 'C64x+ use the same timer to drive low-resolution and high-resolution times. On such platforms, both times are affected by this API.

- ❑ Call HWI_disable/HWI_restore or SWI_disable/SWI_enable around a block that stops, configures, and restarts the timer as needed to prevent re-entrancy or other problems. That is, you must disable interrupts if an interrupt could lead to another call to CLK_start or if interrupt processing relies on having a running timer to ensure that these non-reentrant functions are not interrupted
- ❑ This function cannot be called from main().

See Also

CLK_reconfig
 CLK_stop
 GBL_setFrequency

CLK_stop*Halt the low-resolution timer***C Interface****Syntax** CLK_stop();**Parameters** Void**Return Value** Void**Reentrant** no**Description**

This function stops the low-resolution timer. It can be used in conjunction with CLK_reconfig and CLK_start to reconfigure the timer at run-time.

Note that all 'C6000 platforms except the 'C64x+ use the same timer to drive low-resolution and high-resolution times. On such platforms, both times are affected by this API.

CLK_stop should only be used in conjunction with CLK_reconfig and CLK_start, and only in the required calling sequence. See the section on CLK_reconfig for details.

- ❑ Call HWI_disable/HWI_restore or SWI_disable/SWI_enable around a block that stops, configures, and restarts the timer as needed to prevent re-entrancy or other problems. That is, you must disable interrupts if an interrupt could lead to another call to CLK_stop or if interrupt processing relies on having a running timer to ensure that these non-reentrant functions are not interrupted
- ❑ This function cannot be called from main().

See Also

CLK_reconfig
CLK_start
GBL_setFrequency

2.6 DEV Module

Important Note: The DEV module is being deprecated and will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). The DEV module is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

The DEV module provides the device interface.


Functions

- ❑ DEV_createDevice. Dynamically create device
- ❑ DEV_deleteDevice. Delete dynamically-created device
- ❑ DEV_match. Match device name with driver
- ❑ Dxx_close. Close device
- ❑ Dxx_ctrl. Device control
- ❑ Dxx_idle. Idle device
- ❑ Dxx_init. Initialize device
- ❑ Dxx_issue. Send frame to device
- ❑ Dxx_open. Open device
- ❑ Dxx_ready. Device ready
- ❑ Dxx_reclaim. Retrieve frame from device

Description

DSP/BIOS provides two device driver models that enable applications to communicate with DSP peripherals: IOM and SIO/DEV.

The components of the IOM model are illustrated in the following figure. It separates hardware-independent and hardware-dependent layers. Class drivers are hardware independent; they manage device instances, synchronization and serialization of I/O requests. The lower-level mini-driver is hardware-dependent. See the *DSP/BIOS Driver Developer's Guide* (SPRU616) for more information on the IOM model.

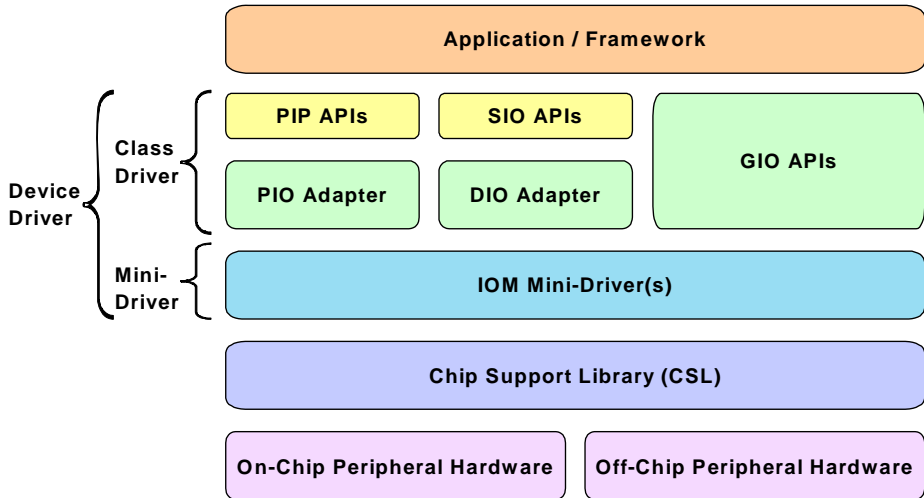

The SIO/DEV model provides a streaming I/O interface. In this model, the application indirectly invokes DEV functions implemented by the driver managing the physical device attached to the stream, using generic functions provided by the SIO module. See the *DSP/BIOS User's Guide* (SPRU423) for more information on the SIO/DEV model.

The model used by a device is identified by its function table type. A type of IOM_Fxns is used with the IOM model. A type of DEV_Fxns is used with the DEV/SIO model.

The DEV module provides the following capabilities:

- ❑ **Device object creation.** You can create device objects through static configuration or dynamically through the DEV_createDevice function. The DEV_deleteDevice and DEV_match functions are also provided for managing device objects.
- ❑ **Driver function templates.** The Dxx functions listed as part of the DEV module are templates for driver functions. These are the functions you create for drivers that use the DEV/SIO model.

Constants, Types, and Structures

```

#define DEV_INPUT      0
#define DEV_OUTPUT     1

typedef struct DEV_Frame { /* frame object */
    QUE_Elem  link; /* queue link */
    Ptr      addr; /* buffer address */
    size_t   size; /* buffer size */
    Arg      misc; /* reserved for driver */
    Arg      arg; /* user argument */
    Uns      cmd; /* mini-driver command */
    Int      status; /* status of command */
} DEV_Frame;

typedef struct DEV_Obj { /* device object */
    QUE_Handle todevice; /* downstream frames here */
    QUE_Handle fromdevice; /* upstream frames here */
    size_t    bufsize; /* buffer size */
    Uns      nbufs; /* number of buffers */
    Int      segid; /* buffer segment ID */
    Int      mode; /* DEV_INPUT/DEV_OUTPUT */
    Int      devid; /* device ID */
    Ptr      params; /* device parameters */
    Ptr      object; /* ptr to dev instance obj */
    DEV_Fxns fxns; /* driver functions */
    Uns      timeout; /* SIO_reclaim timeout value */
    Uns      align; /* buffer alignment */
    DEV_Callback *callback; /* pointer to callback */
} DEV_Obj;

typedef struct DEV_Fxns { /* driver function table */
    Int      (*close)( DEV_Handle );
    Int      (*ctrl)( DEV_Handle, Uns, Arg );
    Int      (*idle)( DEV_Handle, Bool );
    Int      (*issue)( DEV_Handle );
    Int      (*open)( DEV_Handle, String );
    Bool     (*ready)( DEV_Handle, SEM_Handle );
    size_t   (*reclaim)( DEV_Handle );
} DEV_Fxns;

typedef struct DEV_Callback {
    Fxn      fxn; /* function */
    Arg      arg0; /* argument 0 */
    Arg      arg1; /* argument 1 */
} DEV_Callback;

```

```

typedef struct DEV_Device { /* device specifier */
    String    name;        /* device name */
    Void *    fxns;        /* device function table*/
    Int       devid;      /* device ID */
    Ptr       params;     /* device parameters */
    Uns       type;       /* type of the device */
    Ptr       devp;       /* pointer to device handle */
} DEV_Device;

typedef struct DEV_Attrs {
    Int       devid;      /* device id */
    Ptr       params;     /* device parameters */
    Uns       type;       /* type of the device */
    Ptr       devp;       /* device global data ptr */
} DEV_Attrs;

```

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the DEV Manager Properties and DEV Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Instance Configuration Parameters

Name	Type	Default (Enum Options)
comment	String	"<add comments here>"
initFxn	Arg	0x00000000
fxnTable	Arg	0x00000000
fxnTableType	EnumString	"DEV_Fxns" ("IOM_Fxns")
devid	Arg	0x00000000
params	Arg	0x00000000
deviceGlobalDataPtr	Arg	0x00000000

DEV Manager Properties

The default configuration contains managers for the following built-in device drivers:

- DGN Driver (software generator driver).** pseudo-device that generates one of several data streams, such as a sin/cos series or white noise. This driver can be useful for testing applications that require an input stream of data.
- DHL Driver (host link driver).** Driver that uses the HST interface to send data to and from the Host Channel Control Analysis Tool.
- DIO Adapter (class driver).** Driver used with the device driver model.

- ❑ **DPI Driver (pipe driver).** Software device used to stream data between DSP/BIOS tasks.

To configure devices for other drivers, use Tconf to create a User-defined Device (UDEV) object. There are no global properties for the user-defined device manager.

The following additional device drivers are supplied with DSP/BIOS:

- ❑ **DGS Driver.** Stackable gather/scatter driver
- ❑ **DNL Driver.** Null driver
- ❑ **DOV Driver.** Stackable overlap driver
- ❑ **DST Driver.** Stackable “split” driver
- ❑ **DTR Driver.** Stackable streaming transformer driver

DEV Object Properties

The following properties can be set for a user-defined device in the UDEV Object Properties dialog in the DSP/BIOS Configuration Tool or in a Tconf script. To create a user-defined device object in a configuration script, use the following syntax:

```
var myDev = bios.UDEV.create("myDev");
```

The Tconf examples assume the myDev object is created as shown.

- ❑ **comment.** Type a comment to identify this object.
 Tconf Name: comment Type: String
 Example: `myDev.comment = "My device";`
- ❑ **init function.** Specify the function to run to initialize this device.
 Use a leading underscore before the function name if the function is written in C and you are using the DSP/BIOS Configuration Tool. If you are using Tconf, do not add an underscore before the function name; Tconf adds the underscore needed to call a C function from assembly internally.
 Tconf Name: `initFxn` Type: Arg
 Example: `myDev.initFxn = prog.extern("myInit");`
- ❑ **function table ptr.** Specify the name of the device functions table for the driver or mini-driver. This table is of type DEV_Fxns or IOM_Fxns depending on the setting for the function table type property.
 Tconf Name: `fxnTable` Type: Arg
 Example: `myDev.fxnTable =
 prog.extern("mydevFxnTable");`
- ❑ **function table type.** Choose the type of function table used by the driver to which this device interfaces. Use the IOM_Fxns option if you are using the DIO class driver to interface to a mini-driver with an IOM_Fxns function table. Otherwise, use the DEV_Fxns option for

other drivers that use a DEV_Fxns function table and Dxx functions. You can create a DIO object only if a UDEV object with the IOM_Fxns function table type exists.

Tconf Name: `fxnTableType` Type: EnumString

Options: `"DEV_Fxns", "IOM_Fxns"`

Example: `myDev.fxnTableType = "DEV_Fxns";`

- ❑ **device id.** Specify the device ID. If the value you provide is non-zero, the value takes the place of a value that would be appended to the device name in a call to `SIO_create`. The purpose of such a value is driver-specific.

Tconf Name: `deviceId` Type: Arg

Example: `myDev.deviceId = prog.extern("devID");`

- ❑ **device params ptr.** If this device uses additional parameters, provide the name of the parameter structure. This structure should have a name with the format `DXX_Params` where `XX` is the two-letter code for the driver used by this device.

Use a leading underscore before the structure name if the structure is declared in C and you are using the DSP/BIOS Configuration Tool.

Tconf Name: `params` Type: Arg

Example: `myDev.params = prog.extern("myParams");`

- ❑ **device global data ptr.** Provide a pointer to any global data to be used by this device. This value can be set only if the function table type is `IOM_Fxns`.

Tconf Name: `deviceGlobalDataPtr` Type: Arg

Example: `myDev.deviceGlobalDataPtr = 0x00000000;`

DEV_createDevice*Dynamically create device*

Important Note: This API will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This API is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
status = DEV_createDevice(name, fxns, initFxn, attrs);
```

Parameters

```
String      name;      /* name of device to be created */
Void        *fxns;     /* pointer to device function table */
Fxn         initFxn;   /* device init function */
DEV_Attrs   *attrs;    /* pointer to device attributes */
```

Return Value

```
Int         status;    /* result of operation */
```

Reentrant

```
no
```

Description

DEV_createDevice allows an application to create a user-defined device object at run-time. The object created has parameters similar to those defined statically for the DEV Object Properties. After being created, the device can be used as with statically-created DEV objects.

The name parameter specifies the name of the device. The device name should begin with a slash (/) for consistency with statically-created devices and to permit stacking drivers. For example "/codec" might be the name. The name must be unique within the application. If the specified device name already exists, this function returns failure.

The fxns parameter points to the device function table. The function table may be of type DEV_Fxns or IOM_Fxns.

The initFxn parameter specifies a device initialization function. The function passed as this parameter is run if the device is created successfully. The initialization function is called with interrupts disabled. If several devices may use the same driver, the initialization function (or a function wrapper) should ensure that one-time initialization actions are performed only once.

The `attrs` parameter points to a structure of type `DEV_Attrs`. This structure is used to pass additional device attributes to `DEV_createDevice`. If `attrs` is `NULL`, the device is created with default attributes. `DEV_Attrs` has the following structure:

```
typedef struct DEV_Attrs {
    Int      devid; /* device id */
    Ptr      params; /* device parameters */
    Uns      type; /* type of the device */
    Ptr      devp; /* device global data ptr */
} DEV_Attrs;
```

The `devid` item specifies the device ID. If the value you provide is non-zero, the value takes the place of a value that would be appended to the device name in a call to `SIO_create`. The purpose of such a value is driver-specific. The default value is `NULL`.

The `params` item specifies the name of a parameter structure that may be used to provide additional parameters. This structure should have a name with the format `DXX_Params` where `XX` is the two-letter code for the driver used by this device. The default value is `NULL`.

The `type` item specifies the type of driver used with this device. The default value is `DEV_IOMTYPE`. The options are:

Type	Use With
<code>DEV_IOMTYPE</code>	Mini-drivers used in the IOM model.
<code>DEV_SIOTYPE</code>	DIO adapter with SIO streams or other DEV/SIO drivers

The `devp` item specifies the device global data pointer, which points to any global data to be used by this device. This value can be set only if the table type is `IOM_Fxns`. The default value is `NULL`.

If an `initFxn` is specified, that function is called as a result of calling `DEV_createDevice`. In addition, if the device type is `DEV_IOMTYPE`, the `mdBindDev` function in the function table pointed to by the `fxns` parameter is called as a result of calling `DEV_createDevice`. Both of these calls are made with interrupts disabled.

`DEV_createDevice` returns one of the following status values:

Constant	Description
<code>SYS_OK</code>	Success.
<code>SYS_EINVAL</code>	A device with the specified name already exists.
<code>SYS_EALLOC</code>	The heap is not large enough to allocate the device.

DEV_createDevice calls SYS_error if mdBindDev returns a failure condition. The device is not created if mdBindDev fails, and DEV_createDevice returns the IOM error returned by the mdBindDev failure.

Constraints and Calling Context

- ❑ This function cannot be called from a SWI or HWI.
- ❑ This function can only be used if dynamic memory allocation is enabled.
- ❑ The device function table must be consistent with the type specified in the attrs structure. DSP/BIOS does not check to ensure that the types are consistent.

Example

```
Int status;

/* Device attributes of device "/pipe0" */
DEV_Attrs dpiAttrs = {
    NULL,
    NULL,
    DEV_SIOTYPE,
    0
};

status = DEV_createDevice("/pipe0", &DPI_FXNS,
    (Fxn)DPI_init, &dpiAttrs);
if (status != SYS_OK) {
    SYS_abort("Unable to create device");
}
```

See Also

SIO_create

DEV_deleteDevice*Delete a dynamically-created device*

Important Note: This API will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This API is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
status = DEV_deleteDevice(name);
```

Parameters

```
String      name;    /* name of device to be deleted */
```

Return Value

```
Int         status;  /* result of operation */
```

Reentrant

```
no
```

Description

DEV_deleteDevice deallocates the specified dynamically-created device and deletes it from the list of devices in the application.

The name parameter specifies the device to delete. This name must match a name used with DEV_createDevice.

Before deleting a device, delete any SIO streams that use the device. SIO_delete cannot be called after the device is deleted.

If the device type is DEV_IOMTYPE, the mdUnBindDev function in the function table pointed to by the fxns parameter of the device is called as a result of calling DEV_deleteDevice. This call is made with interrupts disabled.

DEV_createDevice returns one of the following status values:

Constant	Description
SYS_OK	Success.
SYS_ENODEV	No device with the specified name exists.

DEV_deleteDevice calls SYS_error if mdUnBindDev returns a failure condition. The device is deleted even if mdUnBindDev fails, but DEV_deleteDevice returns the IOM error returned by mdUnBindDev.

Constraints and Calling Context

- ❑ This function cannot be called from a SWI or HWI.

- ❑ This function can be used only if dynamic memory allocation is enabled.
- ❑ The device name must match a dynamically-created device. DSP/BIOS does not check that the device was not created statically.

Example

```
status = DEV_deleteDevice("/pipe0");
```

See Also

SIO_delete

DEV_match*Match a device name with a driver*

Important Note: This API will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This API is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
substr = DEV_match(name, device);
```

Parameters

```
String      name;      /* device name */  
DEV_Device **device; /* pointer to device table entry */
```

Return Value

```
String      substr; /* remaining characters after match */
```

Description

DEV_match searches the device table for the first device name that matches a prefix of name. The output parameter, device, points to the appropriate entry in the device table if successful and is set to NULL on error. The DEV_Device structure is defined in dev.h.

The substr return value contains a pointer to the characters remaining after the match. This string is used by stacking devices to specify the name(s) of underlying devices (for example, /scale10/sine might match /scale10, a stacking device, which would, in turn, use /sine to open the underlying generator device).

See Also

SIO_create

Dxx_close*Close device*

Important Note: This API will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This API is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
status = Dxx_close(device);
```

Parameters

```
DEV_Handle device; /* device handle */
```

Return Value

```
Int          status; /* result of operation */
```

Description

Dxx_close closes the device associated with device and returns an error code indicating success (SYS_OK) or failure. device is bound to the device through a prior call to Dxx_open.

SIO_delete first calls Dxx_idle to idle the device. Then it calls Dxx_close.

Once device has been closed, the underlying device is no longer accessible via this descriptor.

Constraints and Calling Context

- ❑ device must be bound to a device by a prior call to Dxx_open.

See Also

```
Dxx_idle
Dxx_open
SIO_delete
```

Dxx_ctrl*Device control operation*

Important Note: This API will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This API is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
status = Dxx_ctrl(device, cmd, arg);
```

Parameters

```
DEV_Handle device    /* device handle */
Uns         cmd;     /* driver control code */
Arg         arg;     /* control operation argument */
```

Return Value

```
Int         status;  /* result of operation */
```

Description

Dxx_ctrl performs a control operation on the device associated with device and returns an error code indicating success (SYS_OK) or failure. The actual control operation is designated through cmd and arg, which are interpreted in a driver-dependent manner.

Dxx_ctrl is called by SIO_ctrl to send control commands to a device.

Constraints and Calling Context

- ❑ device must be bound to a device by a prior call to Dxx_open.

See Also

SIO_ctrl

Dxx_idle*Idle device*

Important Note: This API will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This API is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
status = Dxx_idle(device, flush);
```

Parameters

```
DEV_Handle device;    /* device handle */
Bool          flush;  /* flush output flag */
```

Return Value

```
Int          status;  /* result of operation */
```

Description

Dxx_idle places the device associated with device into its idle state and returns an error code indicating success (SYS_OK) or failure. Devices are initially in this state after they are opened with Dxx_open.

Dxx_idle returns the device to its initial state. Dxx_idle should move any frames from the device->todevice queue to the device->fromdevice queue. In SIO_ISSUERECLAIM mode, any outstanding buffers issued to the stream must be reclaimed in order to return the device to its true initial state.

Dxx_idle is called by SIO_idle, SIO_flush, and SIO_delete to recycle frames to the appropriate queue.

flush is a boolean parameter that indicates what to do with any pending data of an output stream. If flush is TRUE, all pending data is discarded and Dxx_idle does not block waiting for data to be processed. If flush is FALSE, the Dxx_idle function does not return until all pending output data has been rendered. All pending data in an input stream is always discarded, without waiting.

Constraints and Calling Context

- ❑ device must be bound to a device by a prior call to Dxx_open.

See Also

```
SIO_delete
SIO_idle
SIO_flush
```

Dxx_init

Initialize device

Important Note: This API will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This API is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface

Syntax Dxx_init();

Parameters Void

Return Value Void

Description

Dxx_init is used to initialize the device driver module for a particular device. This initialization often includes resetting the actual device to its initial state.

Dxx_init is called at system startup, before the application's main() function is called.

Dxx_issue*Send a buffer to the device*

Important Note: This API will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This API is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
status = Dxx_issue(device);
```

Parameters

```
DEV_Handle device; /* device handle */
```

Return Value

```
Int          status; /* result of operation */
```

Description

Dxx_issue is used to notify a device that a new frame has been placed on the device->todevice queue. If the device was opened in DEV_INPUT mode, Dxx_issue uses this frame for input. If the device was opened in DEV_OUTPUT mode, Dxx_issue processes the data in the frame, then outputs it. In either mode, Dxx_issue ensures that the device has been started and returns an error code indicating success (SYS_OK) or failure.

Dxx_issue does not block. In output mode it processes the buffer and places it in a queue to be rendered. In input mode, it places a buffer in a queue to be filled with data, then returns.

Dxx_issue is used in conjunction with Dxx_reclaim to operate a stream. The Dxx_issue call sends a buffer to a stream, and the Dxx_reclaim retrieves a buffer from a stream. Dxx_issue performs processing for output streams, and provides empty frames for input streams. The Dxx_reclaim recovers empty frames in output streams, retrieves full frames, and performs processing for input streams.

SIO_issue calls Dxx_issue after placing a new input frame on the device->todevice. If Dxx_issue fails, it should return an error code. Before attempting further I/O through the device, the device should be idled, and all pending buffers should be flushed if the device was opened for DEV_OUTPUT.

In a stacking device, Dxx_issue must preserve all information in the DEV_Frame object except link and misc. On a device opened for DEV_INPUT, Dxx_issue should preserve the size and the arg fields. On a device opened for DEV_OUTPUT, Dxx_issue should preserve the

buffer data (transformed as necessary), the size (adjusted as appropriate by the transform) and the arg field. The DEV_Frame objects themselves do not need to be preserved, only the information they contain.

Dxx_issue must preserve and maintain buffers sent to the device so they can be returned in the order they were received, by a call to Dxx_reclaim.

- ❑ device must be bound to a device by a prior call to Dxx_open.

**Constraints and
Calling Context**

See Also

Dxx_reclaim
SIO_issue

Dxx_open*Open device*

Important Note: This API will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This API is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
status = Dxx_open(device, name);
```

Parameters

```
DEV_Handle device; /* driver handle */
String      name;  /* device name */
```

Return Value

```
Int        status; /* result of operation */
```

Description

Dxx_open is called by SIO_create to open a device. Dxx_open opens a device and returns an error code indicating success (SYS_OK) or failure.

The device parameter points to a DEV_Obj whose fields have been initialized by the calling function (that is, SIO_create). These fields can be referenced by Dxx_open to initialize various device parameters. Dxx_open is often used to attach a device-specific object to device->object. This object typically contains driver-specific fields that can be referenced in subsequent Dxx driver calls.

name is the string remaining after the device name has been matched by SIO_create using DEV_match.

See Also

```
Dxx_close
SIO_create
```

Dxx_ready*Check if device is ready for I/O*

Important Note: This API will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This API is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
status = Dxx_ready(device, sem);
```

Parameters

```
DEV_Handle device;    /* device handle */
SEM_Handle sem;      /* semaphore to post when ready */
```

Return Value

```
Bool          status; /* TRUE if device is ready */
```

Description

`Dxx_ready` is called by `SIO_select` and `SIO_ready` to determine if the device is ready for an I/O operation. In this context, ready means a call that retrieves a buffer from a device does not block. If a frame exists, `Dxx_ready` returns `TRUE`, indicating that the next `SIO_get`, `SIO_put`, or `SIO_reclaim` operation on the device does not cause the calling task to block. If there are no frames available, `Dxx_ready` returns `FALSE`. This informs the calling task that a call to `SIO_get`, `SIO_put`, or `SIO_reclaim` for that device would result in blocking.

`Dxx_ready` registers the device's ready semaphore with the `SIO_select` semaphore `sem`. In cases where `SIO_select` calls `Dxx_ready` for each of several devices, each device registers its own ready semaphore with the unique `SIO_select` semaphore. The first device that becomes ready calls `SEM_post` on the semaphore.

`SIO_select` calls `Dxx_ready` twice; the second time, `sem = NULL`. This results in each device's ready semaphore being set to `NULL`. This information is needed by the `Dxx` HWI that normally calls `SEM_post` on the device's ready semaphore when I/O is completed; if the device ready semaphore is `NULL`, the semaphore should not be posted.

`SIO_ready` calls `Dxx_ready` with `sem = NULL`. This is equivalent to the second `Dxx_ready` call made by `SIO_select`, and the underlying device driver should just return status without registering a semaphore.

See Also

`SIO_select`

Dxx_reclaim*Retrieve a buffer from a device*

Important Note: This API will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This API is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
status = Dxx_reclaim(device);
```

Parameters

```
DEV_Handle device; /* device handle */
```

Return Value

```
Int status; /* result of operation */
```

Description

Dxx_reclaim is used to request a buffer back from a device. Dxx_reclaim does not return until a buffer is available for the client in the device->fromdevice queue. If the device was opened in DEV_INPUT mode then Dxx_reclaim blocks until an input frame has been filled with the number of MADUs requested, then processes the data in the frame and place it on the device->fromdevice queue. If the device was opened in DEV_OUTPUT mode, Dxx_reclaim blocks until an output frame has been emptied, then place the frame on the device->fromdevice queue. In either mode, Dxx_reclaim blocks until it has a frame to place on the device->fromdevice queue, or until the stream's timeout expires, and it returns an error code indicating success (SYS_OK) or failure.

If device->timeout is not equal to SYS_FOREVER or 0, the task suspension time can be up to 1 system clock tick less than timeout due to granularity in system timekeeping.

If device->timeout is SYS_FOREVER, the task remains suspended until a frame is available on the device's fromdevice queue. If timeout is 0, Dxx_reclaim returns immediately.

If timeout expires before a buffer is available on the device's fromdevice queue, Dxx_reclaim returns SYS_ETIMEOUT. Otherwise Dxx_reclaim returns SYS_OK for success, or an error code.

If Dxx_reclaim fails due to a time out or any other reason, it does not place a frame on the device->fromdevice queue.

Dxx_reclaim is used in conjunction with Dxx_issue to operate a stream. The Dxx_issue call sends a buffer to a stream, and the Dxx_reclaim retrieves a buffer from a stream. Dxx_issue performs processing for output streams, and provides empty frames for input streams. The Dxx_reclaim recovers empty frames in output streams, and retrieves full frames and performs processing for input streams.

SIO_reclaim calls Dxx_reclaim, then it gets the frame from the device->fromdevice queue.

In a stacking device, Dxx_reclaim must preserve all information in the DEV_Frame object except link and misc. On a device opened for DEV_INPUT, Dxx_reclaim should preserve the buffer data (transformed as necessary), the size (adjusted as appropriate by the transform), and the arg field. On a device opened for DEV_OUTPUT, Dxx_reclaim should preserve the size and the arg field. The DEV_Frame objects themselves do not need to be preserved, only the information they contain.

Dxx_reclaim must preserve buffers sent to the device. Dxx_reclaim should never return a buffer that was not received from the client through the Dxx_issue call. Dxx_reclaim always preserves the ordering of the buffers sent to the device, and returns with the oldest buffer that was issued to the device.

- ❑ device must be bound to a device by a prior call to Dxx_open.

Constraints and Calling Context

See Also

Dxx_issue
SIO_issue
SIO_get
SIO_put

DGN Driver*Software generator driver*

Important Note: This driver will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This driver is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

Description

The DGN driver manages a class of software devices known as generators, which produce an input stream of data through successive application of some arithmetic function. DGN devices are used to generate sequences of constants, sine waves, random noise, or other streams of data defined by a user function. The number of active generator devices in the system is limited only by the availability of memory.

Configuring a DGN Device

To create a DGN device object in a configuration script, use the following syntax:

```
var myDgn = bios.DGN.create("myDgn");
```

See the DGN Object Properties for the device you created.

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the DGN Object Properties heading. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Instance Configuration Parameters

Name	Type	Default (Enum Options)
comment	String	"<add comments here>"
device	EnumString	"user" ("sine", "random", "constant", "printHex", "printInt", "printFloat" ('C67x only))
useDefaultParam	Bool	false
deviceId	Arg	prog.extern("DGN_USER", "asm")
constant	Numeric	1 (1.0 for 'C67x)
seedValue	Int32	1
lowerLimit	Numeric	-32767 (0.0 for 'C67x)
upperLimit	Numeric	32767 (1.0 for 'C67x)
gain	Numeric	32767 (1.0 for 'C67x)

Name	Type	Default (Enum Options)
frequency	Numeric	1 (1000.0 for 'C67x)
phase	Numeric	0 (0.0 for 'C67x)
rate	Int32	256 (44000 for 'C67x)
fxn	Extern	prog.extern("FXN_F_nop")
arg	Arg	0x00000000

Data Streaming

The DGN driver places no inherent restrictions on the size or memory segment of the data buffers used when streaming from a generator device. Since generators are fabricated entirely in software and do not overlap I/O with computation, no more than one buffer is required to attain maximum performance.

Since DGN generates data “on demand,” tasks do not block when calling SIO_get, SIO_put, or SIO_reclaim on a DGN data stream. High-priority tasks must, therefore, be careful when using these streams since lower- or even equal-priority tasks do not get a chance to run until the high-priority task suspends execution for some other reason.

DGN Driver Properties

There are no global properties for the DGN driver manager.

DGN Object Properties

The following properties can be set for a DGN device on the DGN Object Properties dialog in the DSP/BIOS Configuration Tool or in a Tconf script. To create a DGN device object in a script, use the following syntax:

```
var myDgn = bios.DGN.create("myDgn");
```

The Tconf examples assume the myDgn object is created as shown.

- ❑ **comment.** Type a comment to identify this object.
Tconf Name: comment Type: String
Example: `myDgn.comment = "DGN device";`
- ❑ **Device category.** The device category—user, sine, random, constant, printHex, printInt, and printFloat ('C67x only)—determines the type of data stream produced by the device. A sine, random, or constant device can be opened for input data streaming only. A printHex or printInt or printFloat device can be opened for output data streaming only.
 - **user.** Uses a custom function to produce or consume a data stream.
 - **sine.** Produce a stream of sine wave samples.
 - **random.** Produces a stream of random values.
 - **constant.** Produces a constant stream of data.

- **printHex.** Writes the stream data buffers to the trace buffer in hexadecimal format.
- **printInt.** Writes the stream data buffers to the trace buffer in integer format.
- **printFloat.** Writes the stream data buffers to the trace buffer in float format. ('C67x only)

Tconf Name: device Type: EnumString

Options: "user", "sine", "random", "constant", "printHex",
"printInt", "printFloat" ('C67x only)

Example: `myDgn.device = "user";`

- **Use default parameters.** Set this property to true if you want to use the default parameters for the Device category you selected.

Tconf Name: useDefaultParam Type: Bool

Example: `myDgn.useDefaultParam = false;`

- **Device ID.** This property is set automatically when you select a Device category.

Tconf Name: deviceId Type: Arg

Example: `myDgn.deviceId = prog.extern("DGN_USER",
"asm");`

- **Constant value.** The constant value to be generated if the Device category is constant.

Tconf Name: constant Type: Numeric

Example: `myDgn.constant = 1;`

- **Seed value.** The initial seed value used by an internal pseudo-random number generator if the Device category is random. Used to produce a uniformly distributed sequence of numbers ranging between Lower limit and Upper limit.

Tconf Name: seedValue Type: Int32

Example: `myDgn.seedValue = 1;`

- **Lower limit.** The lowest value to be generated if the Device category is random.

Tconf Name: lowerLimit Type: Numeric

Example: `myDgn.lowerLimit = -32767;`

- **Upper limit.** The highest value to be generated if the Device category is random.

Tconf Name: upperLimit Type: Numeric

Example: `myDgn.upperLimit = 32767;`

- ❑ **Gain.** The amplitude scaling factor of the generated sine wave if the Device category is sine. This factor is applied to each data point. To improve performance, the sine wave magnitude (maximum and minimum) value is approximated to the nearest power of two. This is done by computing a shift value by which each entry in the table is right-shifted before being copied into the input buffer. For example, if you set the Gain to 100, the sine wave magnitude is 128, the nearest power of two.

Tconf Name: gain

Type: Numeric

Example: `myDgn.gain = 32767;`

- ❑ **Frequency.** The frequency of the generated sine wave (in cycles per second) if the Device category is sine. DGN uses a static (256 word) sine table to approximate a sine wave. Only frequencies that divide evenly into 256 can be represented exactly with DGN. A “step” value is computed at open time for stepping through this table:

`step = (256 * Frequency / Rate)`

Tconf Name: frequency

Type: Numeric

Example: `myDgn.frequency = 1;`

- ❑ **Phase.** The phase of the generated sine wave (in radians) if the Device category is sine.

Tconf Name: phase

Type: Numeric

Example: `myDgn.phase = 0;`

- ❑ **Sample rate.** The sampling rate of the generated sine wave (in sample points per second) if the Device category is sine.

Tconf Name: rate

Type: Int32

Example: `myDgn.rate = 256;`

- ❑ **User function.** If the Device category is user, specifies the function to be used to compute the successive values of the data sequence in an input device, or to be used to process the data stream, in an output device. If this function is written in C and you are using the DSP/BIOS Configuration Tool, use a leading underscore before the C function name. If you are using Tconf, do not add an underscore before the function name; Tconf adds the underscore needed to call a C function from assembly internally.

Tconf Name: fxn

Type: Extern

Example: `myDgn.fxn = prog.extern("usrFxn");`

- ❑ **User function argument.** An argument to pass to the User function.

A user function must have the following form:

`fxn(Arg arg, Ptr buf, Uns nmadus)`

where buf contains the values generated or to be processed. buf and nmadus correspond to the buffer address and buffer size (in MADUs), respectively, for an SIO_get operation.

Tconf Name: arg Type: Arg

Example: `myDgn.arg = prog.extern("myArg");`

DGS Driver*Stackable gather/scatter driver*

Important Note: This driver will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This driver is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

Description

The DGS driver manages a class of stackable devices which compress or expand a data stream by applying a user-supplied function to each input or output buffer. This driver might be used to pack data buffers before writing them to a disk file or to unpack these same buffers when reading from a disk file. All (un)packing must be completed on frame boundaries as this driver (for efficiency) does not maintain remainders across I/O operations.

On opening a DGS device by name, DGS uses the unmatched portion of the string to recursively open an underlying device.

This driver requires a transform function and a packing/unpacking ratio which are used when packing/unpacking buffers to/from the underlying device.

Configuring a DGS Device

To create a DGS device object in a configuration script, use the following syntax:

```
var myDgs = bios.UDEV.create("myDgs");
```

Modify the myDgs properties as follows.

- init function.** Type 0 (zero).
- function table ptr.** Type `_DGS_FXNS`
- function table type.** `DEV_Fxns`
- device id.** Type 0 (zero).
- device params ptr.** Type 0 (zero) to use the default parameters. To use different values, you must declare a `DGS_Params` structure (as described after this list) containing the values to use for the parameters.

DGS_Params is defined in dgs.h as follows:

```

/* ===== DGS_Params ===== */
typedef struct DGS_Params {      /* device parameters */
    Fxn    createFxn;
    Fxn    deleteFxn;
    Fxn    transFxn;
    Arg    arg;
    Int    num;
    Int    den;
} DGS_Params;

```

The device parameters are:

- ❑ **create function.** Optional, default is NULL. Specifies a function that is called to create and/or initialize a transform specific object. If non-NULL, the create function is called in DGS_open upon creating the stream with argument as its only parameter. The return value of the create function is passed to the transform function.
- ❑ **delete function.** Optional, default is NULL. Specifies a function to be called when the device is closed. It should be used to free the object created by the create function.
- ❑ **transform function.** Required, default is localcopy. Specifies the transform function that is called before calling the underlying device's output function in output mode and after calling the underlying device's input function in input mode. Your transform function should have the following interface:

```
dstsize = myTrans(Arg arg, Void *src, Void *dst, Int srcsize)
```

where arg is an optional argument (either argument or created by the create function), and *src and *dst specify the source and destination buffers, respectively. srcsize specifies the size of the source buffer and dstsize specifies the size of the resulting transformed buffer (srcsize * numerator/denominator).

- ❑ **arg.** Optional argument, default is 0. If the create function is non-NULL, the arg parameter is passed to the create function and the create function's return value is passed as a parameter to the transform function; otherwise, argument is passed to the transform function.
- ❑ **num and den** (numerator and denominator). Required, default is 1 for both parameters. These parameters specify the size of the transformed buffer. For example, a transformation that compresses two 32-bit words into a single 32-bit word would have numerator = 1 and denominator = 2 since the buffer resulting from the transformation is 1/2 the size of the original buffer.

Transform Functions

The following transform functions are already provided with the DGS driver:

- ❑ **u32tou8/u8tou32.** These functions provide conversion to/from packed unsigned 8-bit integers to unsigned 32-bit integers. The buffer must contain a multiple of 4 number of 32-bit/8-bit unsigned values.
- ❑ **u16tou32/u32tou16.** These functions provide conversion to/from packed unsigned 16-bit integers to unsigned 32-bit integers. The buffer must contain an even number of 16-bit/32-bit unsigned values.
- ❑ **i16toi32/i32toi16.** These functions provide conversion to/from packed signed 16-bit integers to signed 32-bit integers. The buffer must contain an even number of 16-bit/32-bit integers.
- ❑ **u8toi16/i16tou8.** These functions provide conversion to/from a packed 8-bit format (two 8-bit words in one 16-bit word) to a one word per 16 bit format.
- ❑ **i16tof32/f32toi16.** These functions provide conversion to/from packed signed 16-bit integers to 32-bit floating point values. The buffer must contain an even number of 16-bit integers/32-bit floats.
- ❑ **localcopy.** This function simply passes the data to the underlying device without packing or compressing it.

Data Streaming

DGS devices can be opened for input or output. DGS_open allocates buffers for use by the underlying device. For input devices, the size of these buffers is (bufsize * numerator) / denominator. For output devices, the size of these buffers is (bufsize * denominator) / numerator. Data is transformed into or out of these buffers before or after calling the underlying device's output or input functions respectively.

You can use the same stacking device in more than one stream, provided that the terminating device underneath it is not the same. For example, if u32tou8 is a DGS device, you can create two streams dynamically as follows:

```
stream = SIO_create("/u32tou8/codec", SIO_INPUT, 128, NULL);
...
stream = SIO_create("/u32tou8/port", SIO_INPUT, 128, NULL);
```

You can also create the streams with Tconf. To do that, add two new SIO objects. Enter /codec (or any other configured terminal device) as the Device Control String for the first stream. Then select the DGS device configured to use u32tou8 in the Device property. For the second stream, enter /port as the Device Control String. Then select the DGS device configured to use u32tou8 in the Device property.

Example

The following code example declares DGS_PRMS as a DGS_Params structure:

```
#include <dgs.h>

DGS_Params DGS_PRMS {
    NULL,          /* optional create function */
    NULL,          /* optional delete function */
    u32tou8,       /* required transform function */
    0,             /* optional argument */
    4,             /* numerator */
    1              /* denominator */
}
```

By typing `_DGS_PRMS` for the Parameters property of a device, the values above are used as the parameters for this device.

See Also

DTR Driver

DHL Driver*Host link driver*

Important Note: This driver will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This driver is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

Description

The DHL driver manages data streaming between the host and the DSP. Each DHL device has an underlying HST object. The DHL device allows the target program to send and receive data from the host through an HST channel using the SIO streaming API rather than using pipes. The DHL driver copies data between the stream's buffers and the frames of the pipe in the underlying HST object.

Configuring a DHL Device

To add a DHL device you must first create an HST object and make it available to the DHL driver. To do this, use the following syntax:

```
var myHst = bios.HST.create("myHst");  
myHst.availableForDHL = true;
```

Also be sure to set the mode property to "output" or "input" as needed by the DHL device. For example:

```
myHst.mode = "output";
```

Once there are HST channels available for DHL, you can create a DHL device object in a configuration script using the following syntax:

```
var myDhl = bios.DHL.create("myDhl");
```

Then, you can set this object's properties to select which HST channel, of those available for DHL, is used by this DHL device. If you plan to use the DHL device for output to the host, be sure to select an HST channel whose mode is output. Otherwise, select an HST channel with input mode.

Note that once you have selected an HST channel to be used by a DHL device, that channel is now owned by the DHL device and is no longer available to other DHL channels.

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the DHL Driver Properties and DHL Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default
OBJMEMSEG	Reference	prog.get("IDRAM")

Instance Configuration Parameters

Name	Type	Default (Enum Options)
comment	String	"<add comments here>"
hstChannel	Reference	prog.get("myHST")
mode	EnumString	"output" ("input")

Data Streaming

DHL devices can be opened for input or output data streaming. A DHL device used by a stream created in output mode must be associated with an output HST channel. A DHL device used by a stream created in input mode must be associated with an input HST channel. If these conditions are not met, a SYS_EBADOBJ error is reported in the system log during startup when the BIOS_start routine calls the DHL_open function for the device.

To use a DHL device in a statically-created stream, set the deviceName property of the SIO object to match the name of the DHL device you configured.

```
mySio.deviceName = prog.get("myDhl");
```

To use a DHL device in a stream created dynamically with SIO_create, use the DHL device name (as it appears in your Tconf script) preceded by "/" (forward slash) as the first parameter of SIO_create:

```
stream = SIO_create("/dh10", SIO_INPUT, 128, NULL);
```

To enable data streaming between the target and the host through streams that use DHL devices, you must bind and start the underlying HST channels of the DHL devices from the Host Channels Control in Code Composer Studio, just as you would with other HST objects.

DHL devices copy the data between the frames in the HST channel's pipe and the stream's buffers. In input mode, it is the size of the frame in the HST channel that drives the data transfer. In other words, when all the data in a frame has been transferred to stream buffers, the DHL device returns the current buffer to the stream's fromdevice queue, making it available to the application. (If the stream buffers can hold more data than the HST channel frames, the stream buffers always come back partially full.) In output mode it is the opposite: the size of the buffers in the stream drives the data transfer so that when all the data in a buffer has been

transferred to HST channel frames, the DHL device returns the current frame to the channel's pipe. In this situation, if the HST channel's frames can hold more data than the stream's buffers, the frames always return to the HST pipe partially full.

The maximum performance in a DHL device is obtained when you configure the frame size of its HST channel to match the buffer size of the stream that uses the device. The second best alternative is to configure the stream buffer (or HST frame) size to be larger than, and a multiple of, the size of the HST frame (or stream buffer) size for input (or output) devices. Other configuration settings also work since DHL does not impose restrictions on the size of the HST frames or the stream buffers, but performance is reduced.

Constraints

- ❑ HST channels used by DHL devices are not available for use with PIP APIs.
- ❑ Multiple streams cannot use the same DHL device. If more than one stream attempts to use the same DHL device, a SYS_EBUSY error is reported in the system LOG during startup when the BIOS_start routing calls the DHL_open function for the device.

DHL Driver Properties

The following global property can be set for the DHL - Host Link Driver on the DHL Properties dialog in the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **Object memory.** Enter the memory segment from which to allocate DHL objects. Note that this does not affect the memory segments from where the underlying HST object or its frames are allocated. The memory segment for HST objects and their frames can be set using HST Manager Properties and HST Object Properties.

Tconf Name: OBJMEMSEG

Type: Reference

Example: `DHL.OBJMEMSEG = prog.get("myMEM");`

DHL Object Properties

The following properties can be set for a DHL device using the DHL Object Properties dialog in the DSP/BIOS Configuration Tool or in a Tconf script. To create a DHL device object in a configuration script, use the following syntax:

```
var myDhl = bios.DHL.create("myDhl");
```

The Tconf examples assume the myDhl object has been created as shown.

- ❑ **comment.** Type a comment to identify this object.

Tconf Name: comment

Type: String

Example: `myDhl.comment = "DHL device";`

- ❑ **Underlying HST Channel.** Select the underlying HST channel from the drop-down list. The "Make this channel available for a new DHL device" property in the HST Object Properties must be set to true for that HST object to be known here.

Tconf Name: hstChannel

Type: Reference

Example: `myDhl.hstChannel = prog.get("myHST");`

- ❑ **Mode.** This informational property shows the mode (input or output) of the underlying HST channel. This becomes the mode of the DHL device.

Tconf Name: mode

Type: EnumString

Options: "input", "output"

Example: `myDhl.mode = "output";`

DIO Adapter*SIO Mini-driver adapter***Description**

The DIO adapter allows GIO-compliant mini-drivers to be used through SIO module functions. Such mini-drivers are described in the *DSP/BIOS Device Driver Developer's Guide* (SPRU616).

Configure Mini-driver

To create a DIO device object in a configuration script, first use the following syntax:

```
var myUdev = bios.UDEV.create("myUdev");
```

Set the DEV Object Properties for the device as follows.

- init function.** Type 0 (zero).
- function table ptr.** Type _DIO_FXNS
- function table type.** IOM_Fxns
- device id.** Type 0 (zero).
- device params ptr.** Type 0 (zero).

Once there is a UDEV object with the IOM_Fxns function table type in the configuration, you can create a DIO object with the following syntax and then set properties for the object:

```
var myDio = bios.Dio.create("myDio");
```

DIO Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the DIO Driver Properties and DIO Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default
OBJMEMSEG	Reference	prog.get("IDRAM")
STATICCREATE	Bool	false


Instance Configuration Parameters

Name	Type	Default
comment	String	"<add comments here>"
useCallBackFxn	Bool	false
deviceName	Reference	prog.get("UDEVO")
chanParams	Arg	0x00000000

Description

The mini-drivers described in the *DSP/BIOS Device Driver Developer's Guide* (SPRU616) are intended for use with the GIO module. However, the DIO driver allows them to be used with the SIO module instead of the GIO module.

The following figure summarizes how modules are related in an application that uses the DIO driver and a mini-driver:

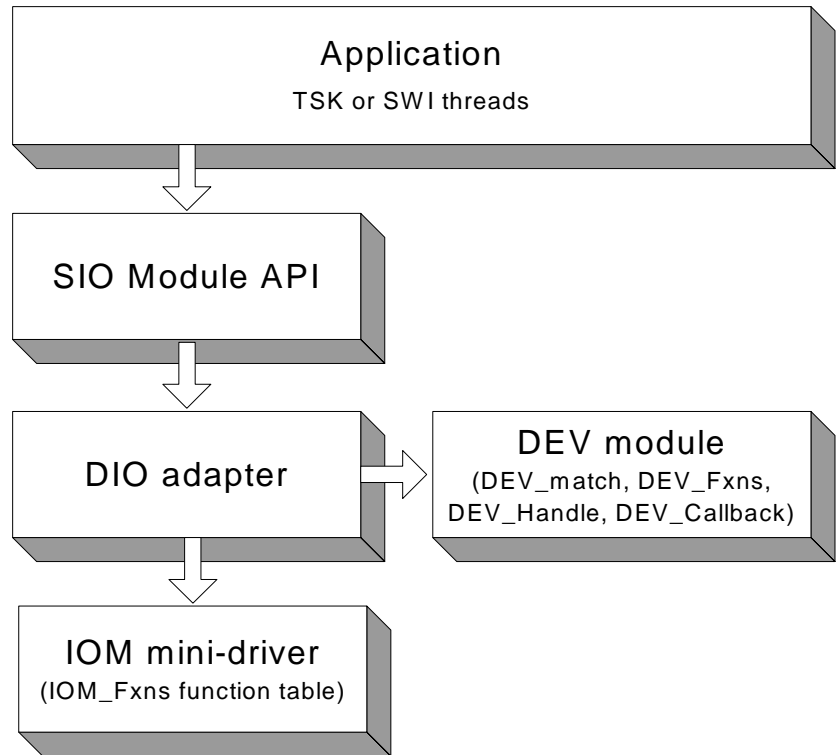

DIO Driver Properties

The following global properties can be set for the DIO - Class Driver on the DIO Properties dialog in the DSP/BIOS Configuration Tool or in a Tconf script:

- Object memory.** Enter the memory segment from which to allocate DIO objects.
 Tconf Name: OBJMEMSEG Type: Reference
 Example: `bios.DIO.OBJMEMSEG = prog.get("myMEM");`
- Create All DIO Objects Statically.** Set this property to true if you want DIO objects to be created completely statically. If this property is false (the default), MEM_calloc is used internally to allocate space for DIO objects. If this property is true, you must create all SIO and DIO objects using the DSP/BIOS Configuration Tool or Tconf. Any

calls to SIO_create fail. Setting this property to true reduces the application's code size (so long as the application does not call MEM_alloc or its related functions elsewhere).

Tconf Name: STATICCREATE Type: Bool

Example: `bios.DIO.STATICCREATE = false;`

DIO Object Properties

The following properties can be set for a DIO device using the DIO Object Properties dialog in the DSP/BIOS Configuration Tool or in a Tconf script. To create a DIO device object in a configuration script, use the following syntax:

```
var myDio = bios.DIO.create("myDio");
```

The Tconf examples assume the myDio object has been created as shown.

- ❑ **comment.** Type a comment to identify this object.

Tconf Name: comment Type: String

Example: `myDio.comment = "DIO device";`

- ❑ **use callback version of DIO function table.** Set this property to true if you want to use DIO with a callback function. Typically, the callback function is SWI_andnHook or a similar function that posts a SWI. Do not set this property to true if you want to use DIO with a TSK thread.

Tconf Name: useCallBackFxn Type: Bool

Example: `myDio.useCallBackFxn = false;`

- ❑ **fxnsTable.** This informational property shows the DIO function table used as a result of the settings in the "use callback version of DIO function table" and "Create ALL DIO Objects Statically" properties. The four possible setting combinations of these two properties correspond to the four function tables: DIO_tskDynamicFxn, DIO_tskStaticFxn, DIO_cbDynamicFxn, and DIO_cbStaticFxn.

Tconf Name: N/A

- ❑ **device name.** Name of the device to use with this DIO object.

Tconf Name: deviceName Type: Reference

Example: `myDio.deviceName = prog.get("UDEVO");`

- ❑ **channel parameters.** This property allows you to pass an optional argument to the mini-driver create function. See the chanParams parameter of the GIO_create function.

Tconf Name: chanParams Type: Arg

Example: `myDio.chanParams = 0x00000000;`

DNL Driver*Null driver*

Important Note: This driver will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This driver is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

Description

The DNL driver manages “empty” devices which nondestructively produce or consume data streams. The number of empty devices in the system is limited only by the availability of memory; DNL instantiates a new object representing an empty device on opening, and frees this object when the device is closed.

The DNL driver does not define device ID values or a params structure which can be associated with the name used when opening an empty device. The driver also ignores any unmatched portion of the name declared in the system configuration file when opening a device.

Configuring a DNL Device

To create a DNL device object in a configuration script, use the following syntax:

```
var myDnl = bios.UDEV.create("myDnl");
```

Set DEV Object Properties for the device you created as follows.

- ❑ **init function.** Type 0 (zero).
- ❑ **function table ptr.** Type `_DNL_FXNS`
- ❑ **function table type.** `DEV_Fxns`
- ❑ **device id.** Type 0 (zero).
- ❑ **device params ptr.** Type 0 (zero).

Data Streaming

DNL devices can be opened for input or output data streaming. Note that these devices return buffers of undefined data when used for input.

The DNL driver places no inherent restrictions on the size or memory segment of the data buffers used when streaming to or from an empty device. Since DNL devices are fabricated entirely in software and do not overlap I/O with computation, no more than one buffer is required to attain maximum performance.

Tasks do not block when using `SIO_get`, `SIO_put`, or `SIO_reclaim` with a DNL data stream.

DOV Driver*Stackable overlap driver*

Important Note: This driver will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This driver is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

Description

The DOV driver manages a class of stackable devices that generate an overlapped stream by retaining the last N minimum addressable data units (MADUs) of each buffer input from an underlying device. These N points become the first N points of the next input buffer. MADUs are equivalent to a 8-bit word in the data address space of the processor on C6x platforms.

Configuring a DOV Device

To create a DOV device object in a configuration script, use the following syntax:

```
var myDov = bios.UDEV.create("myDov");
```

Set the DEV Object Properties for the device you created as follows.

- init function.** Type 0 (zero).
- function table ptr.** Type `_DOV_FXNS`
- function table type.** `DEV_Fxns`
- device id.** Type 0 (zero).
- device params ptr.** Type 0 (zero) or the length of the overlap as described after this list.

If you enter 0 for the Device ID, you need to specify the length of the overlap when you create the stream with `SIO_create` by appending the length of the overlap to the device name. If you statically create the stream (with `Tconf`) instead, enter the length of the overlap in the Device Control String for the stream.

For example, if you statically create a device called `overlap`, and use 0 as its Device ID, you can open a stream with:

```
stream = SIO_create("/overlap16/codec", SIO_INPUT, 128, NULL);
```

This causes SIO to open a stack of two devices. /overlap16 designates the device called overlap, and 16 tells the driver to use the last 16 MADUs of the previous frame as the first 16 MADUs of the next frame. codec specifies the name of the physical device which corresponds to the actual source for the data.

If, on the other hand you add a device called overlap and enter 16 as its Device ID, you can open the stream with:

```
stream = SIO_create("/overlap/codec", SIO_INPUT, 128, NULL);
```

This causes the SIO Module to open a stack of two devices. /overlap designates the device called overlap, which you have configured to use the last 16 MADUs of the previous frame as the first 16 MADUs of the next frame. As in the previous example, codec specifies the name of the physical device that corresponds to the actual source for the data.

If you create the stream statically and enter 16 as the Device ID property, leave the Device Control String blank.

In addition to the configuration properties, you need to specify the value that DOV uses for the first overlap, as in the example:

```
#include <dov.h>

static DOV_Config DOV_CONFIG = {
    (Char) 0
}
DOV_Config *DOV = &DOV_CONFIG;
```

If floating point 0.0 is required, the initial value should be set to (Char) 0.0.

Data Streaming

DOV devices can only be opened for input. The overlap size, specified in the string passed to SIO_create, must be greater than 0 and less than the size of the actual input buffers.

DOV does not support any control calls. All SIO_ctrl calls are passed to the underlying device.

You can use the same stacking device in more than one stream, provided that the terminating device underneath it is not the same. For example, if overlap is a DOV device with a Device ID of 0:

```
stream = SIO_create("/overlap16/codec", SIO_INPUT, 128, NULL);
...
stream = SIO_create("/overlap4/port", SIO_INPUT, 128, NULL);
```

or if overlap is a DOV device with positive Device ID:

```
stream = SIO_create("/overlap/codec", SIO_INPUT, 128, NULL);
...
stream = SIO_create("/overlap/port", SIO_INPUT, 128, NULL);
```

To create the same streams statically (rather than dynamically with SIO_create), add SIO objects with Tconf. Enter the string that identifies the terminating device preceded by "/" (forward slash) in the SIO object's Device Control Strings (for example, /codec, /port). Then select the stacking device (overlap, overlpio) from the Device property.

See Also

DTR Driver
DGS Driver

DPI Driver*Pipe driver*

Important Note: This driver will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This driver is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

Description

The DPI driver is a software device used to stream data between tasks on a single processor. It provides a mechanism similar to that of UNIX named pipes; a reader and a writer task can open a named pipe device and stream data to/from the device. Thus, a pipe simply provides a mechanism by which two tasks can exchange data buffers.

Any stacking driver can be stacked on top of DPI. DPI can have only one reader and one writer task.

It is possible to delete one end of a pipe with SIO_delete and recreate that end with SIO_create without deleting the other end.

Configuring a DPI Device

To add a DPI device, right-click on the DPI - Pipe Driver folder, and select Insert DPI. From the Object menu, choose Rename and type a new name for the DPI device.

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the DPI Object Properties heading. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Instance Configuration Parameters

Name	Type	Default
comment	String	"<add comments here>"
allowVirtual	Bool	false

Data Streaming

After adding a DPI device called pipe0 in the configuration, you can use it to establish a communication pipe between two tasks. You can do this dynamically, by calling in the function for one task:

```
inStr = SIO_create("/pipe0", SIO_INPUT, bufsize, NULL);
...
SIO_get(inStr, bufp);
```

And in the function for the other task:

```
outStr = SIO_create("/pipe0", SIO_OUTPUT, bufsize, NULL);  
...  
SIO_put(outStr, bufp, nmadus);
```

or by adding with Tconf two streams that use pipe0, one in output mode (outStream) and the other one in input mode(inStream). Then, from the reader task call:

```
extern SIO_Obj inStream;  
SIO_handle inStr = &inStream  
...  
SIO_get(inStr, bufp);
```

and from the writer task call:

```
extern SIO_Obj outStream;  
SIO_handle outStr = &outStream  
...  
SIO_put(outStr, bufp, nmadus);
```

The DPI driver places no inherent restrictions on the size or memory segments of the data buffers used when streaming to or from a pipe device, other than the usual requirement that all buffers be the same size.

Tasks block within DPI when using SIO_get, SIO_put, or SIO_reclaim if a buffer is not available. SIO_select can be used to guarantee that a call to one of these functions do not block. SIO_select can be called simultaneously by both the input and the output sides.

DPI and the SIO_ISSUERECLAIM Streaming Model

In the SIO_ISSUERECLAIM streaming model, an application reclaims buffers from a stream in the same order as they were previously issued. To preserve this mechanism of exchanging buffers with the stream, the default implementation of the DPI driver for ISSUERECLAIM copies the full buffers issued by the writer to the empty buffers issued by the reader.

A more efficient version of the driver that exchanges the buffers across both sides of the stream, rather than copying them, is also provided. To use this variant of the pipe driver for ISSUERECLAIM, edit the C source file dpi.c provided in the C:\ti\c6000\bios\src\drivers folder. Comment out the following line:

```
#define COPYBUFS
```

Rebuild dpi.c. Link your application with this version of dpi.obj instead of the default one. To do this, add this version of dpi.obj to your project explicitly. This buffer exchange alters the way in which the streaming

mechanism works. When using this version of the DPI driver, the writer reclaims first the buffers issued by the reader rather than its own issued buffers, and vice versa.

This version of the pipe driver is not suitable for applications in which buffers are broadcasted from a writer to several readers. In this situation it is necessary to preserve the ISSUERECLAIM model original mechanism, so that the buffers reclaimed on each side of a stream are the same that were issued on that side of the stream, and so that they are reclaimed in the same order that they were issued. Otherwise, the writer reclaims two or more different buffers from two or more readers, when the number of buffers it issued was only one.

Converting a Single Processor Application to a Multiprocessor Application

It is trivial to convert a single-processor application using tasks and pipes into a multiprocessor application using tasks and communication devices. If using SIO_create, the calls in the source code would change to use the names of the communication devices instead of pipes. (If the communication devices were given names like /pipe0, there would be no source change at all.) If the streams were created statically with Tconf instead, you would need to change the Device property for the stream in the configuration template, save and rebuild your application for the new configuration. No source change would be necessary.

Constraints

Only one reader and one writer can open the same pipe.

DPI Driver Properties

There are no global properties for the DPI driver manager.

DPI Object Properties

The following property can be set for a DPI device in the DPI Object Properties dialog in the DSP/BIOS Configuration Tool or in a Tconf script. To create a DPI device object in a configuration script, use the following syntax:

```
var myDpi = bios.DPI.create("myDpi");
```

The Tconf examples assume the myDpi object has been created as shown.

- comment.** Type a comment to identify this object.
Tconf Name: comment Type: String
Example: `myDpi.comment = "DPI device";`
- Allow virtual instances of this device.** Set this property to true if you want to be able to use SIO_create to dynamically create multiple streams to use this DPI device. DPI devices are used by SIO stream objects, which you create with Tconf or the SIO_create function.

If this property is set to true, when you use SIO_create, you can create multiple streams that use the same DPI driver by appending numbers to the end of the name. For example, if the DPI object is

named "pipe", you can call `SIO_create` to create `pipe0`, `pipe1`, and `pipe2`. Only integer numbers can be appended to the name.

If this property is set to `false`, when you use `SIO_create`, the name of the SIO object must exactly match the name of the DPI object. As a result, only one open stream can use the DPI object. For example, if the DPI object is named "pipe", an attempt to use `SIO_create` to create `pipe0` fails.

Tconf Name: `allowVirtual`

Type: Bool

Example: `myDpi.allowVirtual = false;`

DST Driver*Stackable split driver*

Important Note: This driver will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This driver is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

Description

This stacking driver can be used to input or output buffers that are larger than the physical device can actually handle. For output, a single (large) buffer is split into multiple smaller buffers which are then sent to the underlying device. For input, multiple (small) input buffers are read from the device and copied into a single (large) buffer.

Configuring a DST Device

To create a DST device object in a configuration script, use the following syntax:

```
var myDst = bios.UDEV.create("myDst");
```

Set the DEV Object Properties for the device you created as follows.

- init function.** Type 0 (zero).
- function table ptr.** Type _DST_FXNS
- function table type.** DEV_Fxns
- device id.** Type 0 (zero) or the number of small buffers corresponding to a large buffer as described after this list.
- device params ptr.** Type 0 (zero).

If you enter 0 for the Device ID, you need to specify the number of small buffers corresponding to a large buffer when you create the stream with SIO_create, by appending it to the device name.

Example 1:

For example, if you create a user-defined device called split with Tconf, and enter 0 as its Device ID property, you can open a stream with:

```
stream = SIO_create("/split4/codec", SIO_INPUT, 1024, NULL);
```

This causes SIO to open a stack of two devices: /split4 designates the device called split, and 4 tells the driver to read four 256-word buffers from the codec device and copy the data into 1024-word buffers for your application. codec specifies the name of the physical device which corresponds to the actual source for the data.

Alternatively, you can create the stream with Tconf (rather than by calling SIO_create at run-time). To do so, first create and configure two user-defined devices called split and codec. Then, create an SIO object. Type 4/codec as the Device Control String. Select split from the Device list.

Example 2:

Conversely, you can open an output stream that accepts 1024-word buffers, but breaks them into 256-word buffers before passing them to /codec, as follows:

```
stream = SIO_create("/split4/codec", SIO_OUTPUT, 1024, NULL);
```

To create this output stream with Tconf, you would follow the steps for example 1, but would select output for the Mode property of the SIO object.

Example 3:

If, on the other hand, you add a device called split and enter 4 as its Device ID, you need to open the stream with:

```
stream = SIO_create("/split/codec", SIO_INPUT, 1024, NULL);
```

This causes SIO to open a stack of two devices: /split designates the device called split, which you have configured to read four buffers from the codec device and copy the data into a larger buffer for your application. As in the previous example, codec specifies the name of the physical device that corresponds to the actual source for the data.

When you type 4 as the Device ID, you do not need to type 4 in the Device Control String for an SIO object created with Tconf. Type only/codec for the Device Control String.

Data Streaming

DST stacking devices can be opened for input or output data streaming.

Constraints

- ❑ The size of the application buffers must be an integer multiple of the size of the underlying buffers.
- ❑ This driver does not support any SIO_ctrl calls.

DTR Driver*Stackable streaming transformer driver*

Important Note: This driver will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the IOM driver interface instead. See the *DSP/BIOS Driver Developer's Guide* (SPRU616). This driver is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

Description

The DTR driver manages a class of stackable devices known as transformers, which modify a data stream by applying a function to each point produced or consumed by an underlying device. The number of active transformer devices in the system is limited only by the availability of memory; DTR instantiates a new transformer on opening a device, and frees this object when the device is closed.

Buffers are read from the device and copied into a single (large) buffer.

Configuring a DTR Device

To create a DTR device object in a configuration script, use the following syntax:

```
var myDtr = bios.UDEV.create("myDtr");
```

Set the DEV Object Properties for the device you created as follows.

- ❑ **init function.** Type 0 (zero).
- ❑ **function table ptr.** Type `_DTR_FXNS`
- ❑ **function table type.** `DEV_Fxns`
- ❑ **device id.** Type 0 (zero), `_DTR_multiply`, or `_DTR_multiplyInt16`.

If you type 0, you need to supply a user function in the device parameters. This function is called by the driver as follows to perform the transformation on the data stream:

```
if (user.fxn != NULL) {
    (*user.fxn)(user.arg, buffer, size);
}
```

If you type `_DTR_multiply`, a built-in data scaling operation is performed on the data stream to multiply the contents of the buffer by the `scale.value` of the device parameters.

If you type `_DTR_multiplyInt16`, a built-in data scaling operation is performed on the data stream to multiply the contents of the buffer by the `scale.value` of the device parameters. The data stream is

assumed to contain values of type `Int16`. This API is provided for fixed-point processors only.

- **device params ptr.** Enter the name of a `DTR_Params` structure declared in your C application code. See the information following this list for details.

The `DTR_Params` structure is defined in `dtr.h` as follows:

```
/* ===== DTR_Params ===== */
typedef struct {          /* device parameters */
    struct {
        DTR_Scale  value; /* scaling factor */
    } scale;
    struct {
        Arg        arg;   /* user-defined argument */
        Fxn        fxn;   /* user-defined function */
    } user;
} DTR_Params;
```

In the following code example, `DTR_PRMS` is declared as a `DTR_Params` structure:

```
#include <dtr.h>
...
struct DTR_Params DTR_PRMS = {
    10.0,
    NULL,
    NULL
};
```

By typing `_DTR_PRMS` as the Parameters property of a DTR device, the values above are used as the parameters for this device.

You can also use the default values that the driver assigns to these parameters by entering `_DTR_PARAMS` for this property. The default values are:

```
DTR_Params DTR_PARAMS = {
    { 1 },          /* scale.value */
    { (Arg)NULL,   /* user.arg */
      (Fxn)NULL }, /* user.fxn */
};
```

`scale.value` is a floating-point quantity multiplied with each data point in the input or output stream.

If you do not configure one of the built-in scaling functions for the device ID, use `user.fxn` and `user.arg` in the `DTR_Params` structure to define a transformation that is applied to inbound or outbound blocks of data, where `buffer` is the address of a data block containing size points; if the value of `user.fxn` is `NULL`, no transformation is performed at all.

```
if (user.fxn != NULL) {
    (*user.fxn)(user.arg, buffer, size);
}
```

Data Streaming

DTR transformer devices can be opened for input or output and use the same mode of I/O with the underlying streaming device. If a transformer is used as a data source, it inputs a buffer from the underlying streaming device and then transforms this data in place. If the transformer is used as a data sink, it outputs a given buffer to the underlying device after transforming this data in place.

The DTR driver places no inherent restrictions on the size or memory segment of the data buffers used when streaming to or from a transformer device; such restrictions, if any, would be imposed by the underlying streaming device.

Tasks do not block within DTR when using the SIO Module. A task can, of course, block as required by the underlying device.

2.7 ECM Module

The ECM module is the Event Combiner Manager for C64x+ devices, which have maskable (customizable) CPU interrupts.

Functions

- ❑ `ECM_disableEvent`. Disable the specified event at run-time.
- ❑ `ECM_dispatch`. Handle events from the event combiner.
- ❑ `ECM_dispatchPlug`. Create an ECM dispatcher table entry.
- ❑ `ECM_enableEvent`. Enable the specified event at run-time.

Constants, Types, and Structures

```
typedef struct ECM_Attrs {
    Arg arg; /* function argument */
    Bool unmask; /* unmask == 1 means enable event */
} ECM_Attrs;
```

```
typedef Void (*ECM_Fxn) (Arg);
```

Configuration Properties

The following list shows the properties that can be configured in a `Tconf` script, along with their types and default values. For details, see the ECM Manager Properties section. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default
ENABLE	Bool	false

Instance Configuration Parameters

Name	Type	Default
comment	String	"<add comments here>"
fxn	Extern	prog.extern("_UTL_halt")
arg	Arg	0x00000000
unmask	Bool	false

Description

The ECM module provides an interface to the C64x+ interrupt controller. This controller supports up to 128 system events. There are 12 maskable CPU interrupts (and their corresponding pins). The "interrupt selector" allows you to route any of the 128 system events to any maskable CPU interrupt. In addition, an "event combiner" allows you to combine up to 32 system events into a single event that is routed to a single CPU interrupt.

DSP/BIOS supports the C64x+ interrupt selector through the HWI Module. You can route one of the 128 system events to a specific HWI object by specifying the event number as the "interrupt selection number" in the HWI Object Properties. This one-to-one mapping supports up to 12 maskable interrupts.

See the "System Event Mapping" table in the *TMS320C64x+ DSP Megamodule Reference Guide* (SPRU871) for information about interrupt selection numbers and their corresponding events. In addition, the device-specific data manual contains information about events listed as "Available events" in the table in SPRU871.

If the 16 HWI objects are sufficient for the number of HWI functions your application needs to run, you need not enable the ECM module. You do not need to know whether your C function will be run by the HWI module or ECM module when you write the function. (The ECM module uses the HWI dispatcher, and so its functions cannot be completely written in assembly.)

DSP/BIOS additionally supports the C64x+ event combiner by adding the ECM module to extend HWI functionality. In the DSP/BIOS Configuration Tool, the ECM manager is nested within the HWI manager. The ECM module allows you to specify the function and argument to be used when one of these system events is triggered.

The first four ECM events (0-3) are used to tie ECM events to HWI objects. The HWI objects that have an interrupt selection number from 0 to 3 run flagged (pending) events in the corresponding event combiner group if the ECM manager is enabled.

To combine events, do the following:

- 1) Set "Enable event combiner manager" in the ECM Manager Properties to true.
- 2) Set "unmask event source" in the ECM Object Properties to true for events you want to run in a combined event. The events are described in the *TMS320C64x+ DSP Megamodule Reference Guide* (SPRU871).
- 3) Specify the function and any argument for each ECM event you unmask. By default, all ECM events run UTL_halt (which runs an infinite loop with all processor interrupts disabled) and pass their event number as an argument.
- 4) Write your ECM functions just as you would if an HWI object were running the function. The HWI dispatcher is used internally to run ECM functions, so your function should be written in C/C++.

- 5) In the HWI Object Properties for a particular object, assign the interrupt selection number for the group of unmasked ECM events you want it to run. For example, if you assign an interrupt selection number of 3 to HWI_INT10, that interrupt runs all unmasked ECM events that have been received (flagged) in the range of 96 to 127. HWI objects that run a combined event call the ECM_dispatch function.

Table 2–3 ECM Events

Interrupt Selection Number	ECM Module Objects	ECM Event Range
0	EVENT4 to EVENT31	4 - 31
1	EVENT32 to EVENT63	32 - 63
2	EVENT64 to EVENT95	64 - 95
3	EVENT96 to EVENT127	96 - 127

- 6) Set "Use Dispatcher" to true for the HWI object that runs the combined event.

You can use the APIs in the ECM module to enable and disable ECM events at run-time and to handle combined events.

See the ECM_dispatch topic description for more about how ECM groups are triggered and run.

ECM Manager Properties

The following global properties can be set for the ECM module in the ECM Manager Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- Enable event combiner manager.** Set this property to true to enable use of the ECM module.

Tconf Name: ENABLE

Type: Bool

Example: `bios.ECM.ENABLE = false;`

ECM Object Properties

The following properties can be set for an ECM object in the ECM Object Properties dialog in the DSP/BIOS Configuration Tool or a Tconf script. You cannot create or delete ECM objects.

- comment.** A comment to identify this ECM object.

Tconf Name: comment

Type: String

Example: `bios.ECM.instance("EVENT4").comment = "event for combiner";`

- ❑ **function.** The function to execute for this system event. This function must be written in C (or be a C function that calls assembly), but must not call the HWI_enter/HWI_exit macro pair. Write this function as if it were an HWI function that used the HWI dispatcher. This function can post a SWI, but the SWI will not run until all the combined events have finished running.

Tconf Name: fxn

Type: Extern

Example: `bios.ECM.instance("EVENT4").fxn =
prog.extern("myEvent4");`

- ❑ **arg.** This argument is passed to the function as its only parameter. You can use either a literal integer or a symbol defined by the application.

Tconf Name: arg

Type: Arg

Example: `bios.ECM.instance("EVENT4").arg = 3;`

- ❑ **unmask event source.** Set this property to true to enable this event within its corresponding combined event (HWI interrupt selection numbers 0 to 3).

Tconf Name: unmask

Type: Bool

Example: `bios.ECM.instance("EVENT4").unmask =
true;`

ECM_disableEvent *Disable a system event in its event combiner mask***C Interface**

Syntax	ECM_disableEvent(eventID);
Parameters	Uns eventID; /* individual event number from 4 to 127 */
Return Value	Void

Description

This function is available only for C64x+ devices, which have an event combiner for CPU interrupts.

This function sets the Event Mask bit that corresponds to the specified eventID to disabled (0). If you use this function, when the combined event that contains this individual event is run, the function for this individual event will not run, even though the event has occurred.

Information about the function and argument assigned to the event is still stored. You can use this function to temporarily disable individual events at run-time.

Constraints and Calling Context

❑ none

Example

```
ECM_disableEvent(42);
```

See Also

ECM_enableEvent
ECM_dispatchPlug

ECM_dispatch*Run functions for a combined event***C Interface**

Syntax	ECM_dispatch(eventID);
Parameters	Uns eventID; /* event number from 0 to 3 */
Return Value	Void

Description

This function is available only for C64x+ devices, which have an event combiner for CPU interrupts.

This function runs a combined event. That is, it runs all enabled and flagged system events within the range that corresponds to the eventID specified. If the ECM manager is enabled, this is the default function used by any HWI objects that have an interrupt selection number from 0 to 3.

Here is an example of the steps that occur when an ECM group is processed:

- 1) Suppose event 14 (an IDMA channel 1 interrupt) occurs. This flags EVENT14 in the Event Flag register so that it is marked pending.
- 2) Suppose that the ECM module is enabled and EVENT14 is unmasked (enabled).
- 3) EVENT14 is in event combiner group 0, which combines EVENT4 through EVENT31.
- 4) The occurrence of EVENT14 causes an interrupt for its associated HWI object. Any unmasked event in the combiner group would also trigger that HWI object.
- 5) The HWI object runs ECM_dispatch with an argument of 0.
- 6) ECM_dispatch makes a copy of the list of unmasked and flagged events in event combiner group 0. There may be more events than EVENT14 that are pending by the time this check is made. (The numeric order of the CPU interrupts from low to high determines the priority for processing HWI interrupts.)
- 7) The ECM manager runs functions for events that are: in the combiner group range, are unmasked, and have been flagged as pending.

The events that meet this criteria have their functions run from left to right (high to low numbers) in the register. There is no way to set priorities amongst combined events. The set of functions run to completion without preemption.

- 8) Since other interrupts for combined events can occur while the ECM manager is running a combined event, the ECM manager next checks to see if any events in the same combiner group have occurred during processing. If so, it processes those events by repeating the previous step.

The ECM_dispatch function uses the HWI dispatcher internally.

**Constraints and
Calling Context**

- ❑ ECM_dispatch should be called only as the function for an HWI object that has an interrupt selection number of 0 through 3. As such, it is always called in the context of an HWI.

Example

```
ECM_dispatch(2);
```

See Also

ECM_dispatchPlug

ECM_dispatchPlug Specify function and attributes for a system event**C Interface**

Syntax ECM_dispatchPlug(eventId, fxn, *attrs);

Parameters Uns eventId; /* event number from 4 to 127 */
 ECM_Fxn fxn; /* function to be plugged */
 ECM_Attrs *attrs /* attributes */

Return Value Void

Description This function is available only for C64x+ devices, which have an event combiner for CPU interrupts.

This function places an entry in a table used by the ECM manager that specifies the function, arg, and unmask properties for a particular ECM object. This allows run-time changes to the values in the static configuration of an ECM object.

The types used in the parameters to this function are defined as follows.

```
typedef Void (*ECM_Fxn) (Arg);

typedef struct ECM_Attrs {
    Arg arg; /* function argument */
    Bool unmask; /* unmask == 1 means enable event */
} ECM_Attrs;
```

The specified system event is enabled by this function only if you set unmask to 1 in the ECM_Attrs structure and if you have performed the other steps to enable the ECM manager and map an eventId from 0 to 3 to an HWI object's interrupt selection number.

Constraints and Calling Context none

Example

```
ECM_Attrs ecmattrs = ECM_ATTRS;
ecmattrs.unmask = 1;

ECM_dispatchPlug(4, (Fxn)isrfunc, &ecmattrs);
C64_enable(0x10);
```

See Also ECM_disableEvent
 ECM_enableEvent

ECM_enableEvent*Enable a system event in its event combiner mask***C Interface**

Syntax	ECM_enableEvent(eventID);
Parameters	Uns eventID; /* event number from 4 to 127 */
Return Value	Void

Description

This function is available only for C64x+ devices, which have an event combiner for CPU interrupts.

This function sets the Event Mask bit that corresponds to the specified eventID to enabled (1). If you previously used ECM_disableEvent for this event, information about the function and argument assigned to the event is still retained. You can use this function to temporarily enable individual events at run-time.

The function for this event does not actually run until this individual event has occurred and its event combiner group is triggered.

Constraints and Calling Context

□ none

Example

```
ECM_enableEvent(42);
```

See Also

ECM_disableEvent
ECM_dispatchPlug

2.8 GBL Module

This module is the global settings manager.

Functions

- ❑ GBL_getClkin. Gets configured value of board input clock in KHz.
- ❑ GBL_getFrequency. Gets current frequency of the CPU in KHz.
- ❑ GBL_getProcid. Gets configured processor ID used by MSGQ.
- ❑ GBL_getVersion. Gets DSP/BIOS version information.
- ❑ GBL_setFrequency. Set frequency of CPU in KHz for DSP/BIOS.
- ❑ GBL_setProcid. Set configured value of processor ID.

Configuration Properties

The following list shows the properties for this module that can be configured in a Tconf script, along with their types and default values. For details, see the GBL Module Properties heading. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default (Enum Options)
BOARDNAME	String	"c6xxx"
PROCID	Int16	0
CLKIN	UInt32	20000 KHz
CLKOUT	Int16	'C6201: 133.00 'C6211: 150 'C64x: 600 'C67x: 300 'C64x+: 1 'C672x: 300
SPECIFYRTSLIB	Bool	false
RTSLIB	String	""
ENDIANMODE	EnumString	"little" ("big")
CALLUSERINITFXN	Bool	false
USERINITFXN	Extern	prog.extern("FXN_F_nop")
ENABLEINST	Bool	true
INSTRUMENTED	Bool	true
ENABLEALLTRC	Bool	true
CSRPPCC	EnumString	"mapped" ("cache enable", "cache freeze", "cache bypass")
C621XCONFIGUREL2	Bool	false

Name	Type	Default (Enum Options)
C641XCONFIGUREL2	Bool	false
C621XCCFGL2MODE	EnumString	"SRAM" ("1-way cache", "2-way cache", "3-way cache", "4-way cache")
C641XCCFGL2MODE	EnumString	"4-way cache (0k)" ("4-way cache (32k)", "4-way cache (64k)", "4-way cache (128k)", "4-way cache (256k)")
C621XMAR	Numeric	0x0000
C641XMAREMIFB	Numeric	0x0000
C641XMARCE0	Numeric	0x0000
C641XMARCE1	Numeric	0x0000
C641XMARCE2	Numeric	0x0000
C641XMARCE3	Numeric	0x0000
C641XCCFGP	EnumString	"urgent" ("high", "medium", "low")
C641XSETL2ALLOC	Bool	false
C641XL2ALLOC0	EnumInt	6
C641XL2ALLOC1	EnumInt	2 (0 to 7)
C641XL2ALLOC2	EnumInt	2 (0 to 7)
C641XL2ALLOC3	EnumInt	2 (0 to 7)
C64PLUSCONFIGURE	Bool	false
C64PLUSL1PCFG	EnumString	32k ("0k", "4k", "8k", "16k", "32k")
C64PLUSL1DCFG	EnumString	32k ("0k", "4k", "8k", "16k", "32k")
C64PLUSL2CFG	EnumString	0k ("0k", "32k", "64k", "128k", "256k")
C64PLUSMAR0to31	Numeric	0x0
C64PLUSMAR32to63	Numeric	0x0
C64PLUSMAR64to95	Numeric	0x0
C64PLUSMAR96to127	Numeric	0x0
C64PLUSMAR128to159	Numeric	0x0
C64PLUSMAR160to191	Numeric	0x0
C64PLUSMAR192to223	Numeric	0x0
C64PLUSMAR224to255	Numeric	0x0

Name	Type	Default (Enum Options)
GEMTRUECOMPEN	Bool	false (OMAP 2430/3430 only)
BCACHEREADADDR0	Numeric	0x0 (OMAP 2430/3430 only)
BCACHEREADADDR1	Numeric	0x0 (OMAP 2430/3430 only)
BCACHEREADADDR2	Numeric	0x0 (OMAP 2430/3430 only)

Description

This module does not manage any individual objects, but rather allows you to control global or system-wide settings used by other modules.

GBL Module Properties

The following Global Settings can be made:

- ❑ **Target Board Name.** The name of the board or board family.
 Tconf Name: BOARDNAME Type: String
 Example: `bios.GBL.BOARDNAME = "c6xxx";`
- ❑ **Processor ID (PROCID).** ID used to communicate with other processors using the MSGQ Module. The proclid is also defined in the MSGQ_TransportObj array that is part of the MSGQ_Config structure. This value can be obtained with GBL_getProclid and modified by GBL_setProclid (but only within the User Init Function).
 Tconf Name: PROCID Type: Int16
 Example: `bios.GBL.PROCID = 0;`
- ❑ **Board Clock In KHz (Informational Only).** Frequency of the input clock in KHz. You should set this property to match the actual board clock rate. This property does not change the rate of the board; it is informational only. The configured value can be obtained at run-time using the GBL_getClkin API. The default value is 20000 KHz.
 Tconf Name: CLKIN Type: Uint32
 Example: `bios.GBL.CLKIN = 20000;`
- ❑ **DSP Speed In MHz (CLKOUT).** This number, times 1000000, is the number of instructions the processor can execute in 1 second. You should set this property to match the actual rate. This property does not change the rate of the board. This value is used by the CLK manager to calculate register settings for the on-device timers.
 Tconf Name: CLKOUT Type: Int16
 Example: `bios.GBL.CLKOUT = 133.0000;`
- ❑ **Specify RTS Library.** Determines whether a user can specify the run-time support library to which the application is linked. The RTS library contains the printf, malloc, and other standard C library

functions. For information about using this library, see “std.h and stdlib.h functions” on page 2-516. If you do not choose to specify a library, the default library for your platform is used.

Tconf Name: SPECIFYRTSLIB Type: Bool

Example: `bios.GBL.SPECIFYRTSLIB = false;`

- ❑ **Run-Time Support Library.** The name of the run-time support (RTS) library to which the application is linked. These libraries are located in the <BIOS_INSTALL_DIR>\xdctools\packages\ti\targets tree. The library you select is used in the linker command file generated from the Tconf script when you build your application.

Tconf Name: RTSLIB Type: String

Example: `bios.GBL.RTSLIB = "";`

- ❑ **DSP Endian Mode.** This setting controls which libraries are used to link the application. If you change this setting, you must set the compiler and linker options to correspond. This property must match the setting in the DSP's CSR register.

Tconf Name: ENDIANMODE Type: EnumString

Options: "little", "big"

Example: `bios.GBL.ENDIANMODE = "little";`

- ❑ **Call User Init Function.** Set this property to true if you want an initialization function to be called early during program initialization, after .cinit processing and before the main() function.

Tconf Name: CALLUSERINITFXN Type: Bool

Example: `bios.GBL.CALLUSERINITFXN = false;`

- ❑ **User Init Function.** Type the name of the initialization function. This function runs early in the initialization process and is intended to be used to perform hardware setup that needs to run before DSP/BIOS is initialized. The code in this function should not use any DSP/BIOS API calls, unless otherwise specified for that API, since a number of DSP/BIOS modules have not been initialized when this function runs. In contrast, the Initialization function that may be specified for HOOK Module objects runs later and is intended for use in setting up data structures used by other functions of the same HOOK object.

Tconf Name: USERINITFXN Type: Extern

Example: `bios.GBL.USERINITFXN =
prog.extern("FXN_F_nop");`

- ❑ **Enable Real Time Analysis.** If this property is true, target-to-host communication is enabled by the addition of IDL objects to run the IDL_cpuLoad, LNK_dataPump, and RTA_dispatch functions. If this property is false, these IDL objects are removed and target-to-host communications are not supported. As a result, support for DSP/BIOS implicit instrumentation is removed.

Tconf Name: ENABLEINST Type: Bool

Example: `bios.GBL.ENABLEINST = true;`

- ❑ **Use Instrumented BIOS Library.** Specifies whether to link with the instrumented or non-instrumented version of the DSP/BIOS library. The non-instrumented versions are somewhat smaller but do not provide support for LOG, STS, and TRC instrumentation. The libraries are located in <BIOS_INSTALL_DIR>\packages\ti\bios\lib. By default, the instrumented version of the library for your platform is used.

Tconf Name: INSTRUMENTED Type: Bool

Example: `bios.GBL.INSTRUMENTED = true;`

- ❑ **Enable All TRC Trace Event Classes.** Set this property to false if you want all types of tracing to be initially disabled when the program is loaded. If you disable tracing, you can still use the RTA Control Panel or the TRC_enable function to enable tracing at run-time.

Tconf Name: ENABLEALLTRC Type: Bool

Example: `bios.GBL.ENABLEALLTRC = true;`

- ❑ **Program Cache Control - CSR(PCC).** This property in the DSP family tab specifies the cache mode for the DSP at program initiation.

Tconf Name: CSRPCC Type: EnumString

Options: "mapped", "cache enable", "cache freeze", "cache bypass"

Example: `bios.GBL.CSRPCC = "mapped";`

621x/671x tab

- ❑ **Configure L2 Memory Settings.** You can set this property to true for DSPs that have a L1/L2 cache (for example, the c6211). The other L2 properties on this tab are available if this property is true.

Tconf Name: C621XCONFIGUREL2 Type: Bool

Example: `bios.GBL.C621XCONFIGUREL2 = false;`

- ❑ **L2 Mode - CCFG(L2MODE).** (621x/671x and 641x tabs) Sets the L2 cache mode. See the *c6000 Peripherals Manual* for details.

Tconf Name: C621XCCFGL2MODE Type: EnumString

Options: "SRAM", "1-way cache", "2-way cache", "3-way cache", "4-way cache"

Example: `bios.GBL.C621XCCFGL2MODE = "4-way cache (0k)";`

- ❑ **MAR 0-15 - bitmask used to initialize MARs.** Only bit 0 of each of these 32-bit registers is modifiable by the user. All other bits are reserved. Specify a bitmask for the 16 modifiable bits in registers MAR0 through MAR15. The lowest bit of the bitmask you specify corresponds to the smallest MAR number in this range. That is, bit 0 corresponds to the 0 bit of MAR0 and bit 15 corresponds to the 0 bit of MAR15.

Tconf Name: C621XMAR Type: Numeric

Example: `bios.GBL.C621XMAR = 0x0000;`

641x tab

- ❑ **Configure L2 Memory Settings.** You can set this property to true for DSPs that have a L1/L2 cache (for example, the c6211). The other L2 properties on this tab are available if this property is true.

Tconf Name: C641XCONFIGUREL2 Type: Bool

Example: `bios.GBL.C641XCONFIGUREL2 = false;`

- ❑ **L2 Mode - CCFG(L2MODE).** Sets the L2 cache mode. See the *c6000 Peripherals Manual* for details.

Tconf Name: C641XCCFGL2MODE Type: EnumString

Options: "4-way cache (0k)", "4-way cache (32k)", "4-way cache (64k)", "4-way cache (128k)", "4-way cache (256k)"

Example: `bios.GBL.C641XCCFGL2MODE = "4-way cache (0k)";`

- ❑ **MAR96-101 - bitmask controls EMIFB CE space.**
MAR128-143 - bitmask controls EMIFA CE0 space.
MAR144-159 - bitmask controls EMIFA CE1 space.
MAR160-175 - bitmask controls EMIFA CE2 space.
MAR176-191 - bitmask controls EMIFA CE3 space.
Only bit 0 of each of these 32-bit registers is modifiable by the user. All other bits are reserved. Specify a bitmask for the modifiable bits in registers MAR96 through MAR101. The lowest bit of the bitmask

you specify corresponds to the smallest MAR number in this range. For example, in C641XMARCE0, bit 0 corresponds to the 0 bit of MAR128 and bit 15 corresponds to the 0 bit of MAR143.

Tconf Name: C641XMAREMIFB Type: Numeric

Tconf Name: C641XMARCE0 Type: Numeric

Tconf Name: C641XMARCE1 Type: Numeric

Tconf Name: C641XMARCE2 Type: Numeric

Tconf Name: C641XMARCE3 Type: Numeric

Example: `bios.GBL.C641XMAREMIFB = 0x0000;`

- ❑ **L2 Requestor Priority - CCFG(P).** Specifies the CPU/DMA cache priority. See the *c6000 Peripherals Manual* for details.

Tconf Name: C641XCCFGP Type: EnumString

Options: "urgent", "high", "medium", "low"

Example: `bios.GBL.C641XCCFGP = "urgent";`

- ❑ **Configure Priority Queues.** Set this property to true if you want to configure the maximum number of transfer requests on the L2 priority queues.

Tconf Name: C641XSETL2ALLOC Type: Bool

Example: `bios.GBL.C641XSETL2ALLOC = false;`

- ❑ **Max L2 Transfer Requests on URGENT Queue (L2ALLOC0).** Select a number from 0 to 7 for the maximum number of L2 transfer requests permitted on the URGENT queue.

Tconf Name: C641XL2ALLOC0 Type: EnumInt

Options: 0 to 7

Example: `bios.GBL.C641XL2ALLOC0 = 6;`

- ❑ **Max L2 Transfer Requests on HIGH Queue (L2ALLOC1).** Select a number from 0 to 7 for the maximum number of L2 transfer requests permitted on the HIGH priority queue.

Tconf Name: C641XL2ALLOC1 Type: EnumInt

Options: 0 to 7

Example: `bios.GBL.C641XL2ALLOC1 = 2;`

- ❑ **Max L2 Transfer Requests on MEDIUM Queue (L2ALLOC2).** Select a number from 0 to 7 for the maximum number of L2 transfer requests permitted on the MEDIUM priority queue.

Tconf Name: C641XL2ALLOC2 Type: EnumInt

Options: 0 to 7

Example: `bios.GBL.C641XL2ALLOC2 = 2;`

- Max L2 Transfer Requests on LOW Queue (L2ALLOC3).** Select a number from 0 to 7 for the maximum number of L2 transfer requests permitted on the LOW priority queue.

Tconf Name: C641XL2ALLOC3 Type: EnumInt

Options: 0 to 7

Example: `bios.GBL.C641XL2ALLOC3 = 2;`

64PLUS tab

- 64P - Configure Memory Cache Settings.** You can set this property to true if you want to configure the cache settings for the 'C64x+' initialization. Checking this box enables the cache size and MAR bitmask properties that follow on this tab.

Tconf Name: C64PLUSCONFIGURE Type: Bool

Example: `bios.GBL.C64PLUSCONFIGURE = false;`

- 64P L1PCFG Mode.** Select the initial size for the L1P cache. See the *c6000 Peripherals Manual* for details.

Tconf Name: C64PLUSL1PCFG Type: EnumString

Options: "0k", "4k", "8k", "16k", "32k"

Example: `bios.GBL.C64PLUSL1PCFG = "32k";`

- 64P L1DCFG Mode.** Select the initial size for the L1D cache.

Tconf Name: C64PLUSL1DCFG Type: EnumString

Options: "0k", "4k", "8k", "16k", "32k"

Example: `bios.GBL.C64PLUSL1DCFG = "32k";`

- 64P L2CFG Mode.** Select the initial size for the L2 cache.

Tconf Name: C64PLUSL2CFG Type: EnumString

Options: "0k", "32k", "64k", "128k", "256k"

Example: `bios.GBL.C64PLUSL2CFG = "32k";`

- MAR - bitmasks.** Only bit 0 of each of these 32-bit registers is modifiable by the user. All other bits are reserved. Specify a bitmask for the 32 modifiable bits in the registers specified for the property. The lowest bit of the bitmask you specify corresponds to the smallest

MAR number in this range. For example, in C64PLUSMAR128to159, bit 0 corresponds to the 0 bit of MAR128 and bit 31 corresponds to the 0 bit of MAR159.

Tconf Name: C64PLUSMAR0to31 Type: Numeric

Tconf Name: C64PLUSMAR32to63 Type: Numeric

Tconf Name: C64PLUSMAR64to95 Type: Numeric

Tconf Name: C64PLUSMAR96to127 Type: Numeric

Tconf Name: C64PLUSMAR128to159 Type: Numeric

Tconf Name: C64PLUSMAR160to191 Type: Numeric

Tconf Name: C64PLUSMAR192to223 Type: Numeric

Tconf Name: C64PLUSMAR224to255 Type: Numeric

Example: `bios.GBL.C64PLUSMAR0to31 = 0x0;`

- GEM True Completion Bit.** Set this property to true to enable the GEM True Completion bit. This controls how cache writeback completion works. See the OMAP2430/3430 cache documentation for more information on how to ensure that a cache writeback is complete. Checking this box enables the BCACHE read address properties that follow. (OMAP 2430/3430 only)

Tconf Name: GEMTRUECOMPEN Type: Bool

Example: `bios.GBL.GEMTRUECOMPEN = false;`

- BCACHE Read Address 0-2.** Specify the first, second, and third addresses to read back during BCACHE_wait. Reading a non-cached address is necessary to ensure that a writeback has fully completed. DSP/BIOS provides properties to specify up to three "read addresses" because there are three memory regions for which you may want to ensure that writebacks are fully complete: SDRAM, flash, and OCM (on chip memory). For example, you can specify an address in SDRAM and an address in OCM for the first two properties and leave the last property at 0x0 if you do not use flash memory. The addresses are not read if the value is zero. See the OMAP2430/3430 cache documentation for more information. (OMAP 2430/3430 only)

Tconf Name: BCACHEREADADDR0 Type: Numeric

Tconf Name: BCACHEREADADDR1 Type: Numeric

Tconf Name: BCACHEREADADDR2 Type: Numeric

Example: `bios.GBL.BCACHEREADADDR0 = 0x0;`

GBL_getClkin

Get configured value of board input clock in KHz

C Interface

Syntax `clkin = GBL_getClkin(Void);`

Parameters Void

Return Value Uint32 clkin; /* CLKIN frequency */

Reentrant yes

Description Returns the configured value of the board input clock (CLKIN) frequency in KHz.

See Also CLK_countspms
CLK_getprd

GBL_getFrequency*Get current frequency of the CPU in KHz***C Interface****Syntax**

```
frequency = GBL_getFrequency(Void);
```

Parameters

Void

Return Value

Uint32 frequency; /* CPU frequency in KHz */

Reentrant

yes

Description

Returns the current frequency of the DSP CPU in an integer number of KHz. This is the frequency set by GBL_setFrequency, which must also be an integer. The default value is the value of the CLKOUT property, which is configured as one of the GBL Module Properties.

See Also

GBL_getClkin
GBL_setFrequency

GBL_getProcid*Get configured value of processor ID***C Interface**

Syntax procid = GBL_getProcid(Void);

Parameters Void

Return Value Uint16 procid; /* processor ID */

Reentrant yes

Description Returns the configured value of the processor ID (PROCID) for this processor. This numeric ID value is used by the MSGQ module when determining which processor to communicate with.

The procid is also defined in the MSGQ_TransportObj array that is part of the MSGQ_Config structure. The same processor ID should be defined for this processor in both locations.

During the User Init Function, the application may modify the statically configured processor ID by calling GBL_setProcid. In this case, the User Init Function may need to call GBL_getProcid first to get the statically configured processor ID.

See Also MSGQ Module: Static Configuration
 GBL_setProcid

GBL_getVersion*Get DSP/BIOS version information***C Interface**

Syntax `version = GBL_getVersion(Void);`

Parameters `Void`

Return Value `Uint16 version; /* version data */`

Reentrant `yes`

Description Returns DSP/BIOS version information as a 4-digit hex number. For example: 0x5100.

When comparing versions, compare the highest digits that are different. The digits in the version information are as follows:

Bits	Compatibility with Older DSP/BIOS Versions
12-15 (first hex digit)	Not compatible. Changes to application C, assembly, or configuration (Tconf) code may be required. For example, moving from 0x5100 to 0x6100 may require code changes.
8-11 (second hex digit)	No code changes required but you should recompile. For example, moving from 0x5100 to 0x5200 requires recompilation.
0-7 (third and fourth hex digits)	No code changes or recompile required. You should re-link if either of these digits are different. For example, moving from 0x5100 to 0x5102 requires re-linking.

Also, the version returned by GBL_getVersion matches the version in the DSP/BIOS header files. (For example, tsk.h.) If the header file version is as follows, GBL_getVersion returns 0x5001. (The last item uses two digits in the returned hex number.)

* @(#) DSP/BIOS_Kernel 5,0,1 05-30-2004 (cuda-106)

GBL_setFrequency*Set frequency of the CPU in KHz***C Interface**

Syntax GBL_setFrequency(frequency);

Parameters Uint32 frequency; /* CPU frequency in KHz */

Return Value Void

Reentrant yes

Description

This function sets the value of the CPU frequency known to DSP/BIOS.

Note that GBL_setFrequency does not affect the PLL, and therefore has no effect on the actual frequency at which the DSP is running. It is used only to make DSP/BIOS aware of the DSP frequency you are using.

If you call GBL_setFrequency to update the CPU frequency known to DSP/BIOS, you should follow the sequence shown in the CLK_reconfig topic to reconfigure the timer.

The frequency must be an integer number of KHz.

Constraints and Calling Context

- ❑ If you change the frequency known to DSP/BIOS, you should also reconfigure the timer (with CLK_reconfig) so that the actual frequency is the same as the frequency known to DSP/BIOS.

See Also

CLK_reconfig
GBL_getClkin
GBL_getFrequency

GBL_setProclD

Set configured value of processor ID

C Interface

Syntax GBL_setProclD(proclD);

Parameters Uint16 proclD; /* processor ID */

Return Value Void

Reentrant no

Description Sets the processor ID (PROCID) for this processor. This numeric ID value is used by the MSGQ module to determine which processor to communicate with.

The proclD is also defined in the MSGQ_TransportObj array that is part of the MSGQ_Config structure.

This function can only be called in the User Init Function configured as part of the GBL Module Properties. That is, this function may only be called at the beginning of DSP/BIOS initialization.

The application may determine the true processor ID for the device during the User Init Function and call GBL_setProclD with the correct processor ID. This is useful in applications that run a single binary image on multiple DSP processors.

How the application determines the correct processor ID is application- or board-specific. For example, you might use GPIO. You can call GBL_getProclD from the User Init Function to get the statically configured processor ID.

Constraints and Calling Context This function can only be called in the User Init Function configured as part of the GBL Module Properties.

See Also MSGQ Manager Properties
 GBL_getProclD

2.9 GIO Module

The GIO module is the Input/Output Module used with IOM mini-drivers as described in *DSP/BIOS Device Driver Developer's Guide* (SPRU616).

Functions

- ❑ `GIO_abort`. Abort all pending input and output.
- ❑ `GIO_control`. Device specific control call.
- ❑ `GIO_create`. Allocate and initialize a GIO object.
- ❑ `GIO_delete`. Delete underlying mini-drivers and free up the GIO object and any associated IOM packet structures.
- ❑ `GIO_flush`. Drain output buffers and discard any pending input.
- ❑ `GIO_new`. Initialize a GIO object using pre-allocated memory.
- ❑ `GIO_read`. Synchronous read command.
- ❑ `GIO_submit`. Submits a packet to the mini-driver.
- ❑ `GIO_write`. Synchronous write command.

Constants, Types, and Structures

```

/* Modes for GIO_create */
#define IOM_INPUT      0x0001
#define IOM_OUTPUT     0x0002
#define IOM_INOUT      (IOM_INPUT | IOM_OUTPUT)

/* IOM Status and Error Codes */
#define IOM_COMPLETED SYS_OK /* I/O successful */
#define IOM_PENDING    1 /* I/O queued and pending */
#define IOM_FLUSHED    2 /* I/O request flushed */
#define IOM_ABORTED    3 /* I/O aborted */
#define IOM_EBADIO     -1 /* generic failure */
#define IOM_ETIMEOUT   -2 /* timeout occurred */
#define IOM_ENOPACKETS -3 /* no packets available */
#define IOM_EFREE      -4 /* unable to free resources */
#define IOM_EALLOC     -5 /* unable to alloc resource */
#define IOM_EABORT     -6 /* I/O aborted uncompleted */
#define IOM_EBADMODE   -7 /* illegal device mode */
#define IOM_EOF        -8 /* end-of-file encountered */
#define IOM_ENOTIMPL   -9 /* operation not supported */
#define IOM_EBADARGS   -10 /* illegal arguments used */
#define IOM_ETIMEOUTUNREC -11
                        /* unrecoverable timeout occurred */
#define IOM_EINUSE     -12 /* device already in use */

```



```

/* Command codes for IOM_Packet */
#define IOM_READ    0
#define IOM_WRITE   1
#define IOM_ABORT   2
#define IOM_FLUSH   3
#define IOM_USER    128 /* 0-127 reserved for system */

/* Command codes reserved for control */
#define IOM_CHAN_RESET    0 /* reset channel only */
#define IOM_CHAN_TIMEDOUT 1
                        /* channel timeout occurred */
#define IOM_DEVICE_RESET  2 /* reset entire device */
#define IOM_CNTL_USER     128
                        /* 0-127 reserved for system */

/* Structure passed to GIO_create */
typedef struct GIO_Attrs {
    Int    nPackets; /* number of asynch I/O packets */
    Uns    timeout;  /* for blocking (SYS_FOREVER) */
} GIO_Attrs;

/* Struct passed to GIO_submit for synchronous use*/
typedef struct GIO_AppCallback {
    GIO_TappCallback    fxn;
    Ptr                 arg;
} GIO_AppCallback;

typedef struct GIO_Obj {
    IOM_Fxns    *fxns; /* ptr to function table */
    Uns         mode;  /* create mode */
    Uns         timeout; /* timeout for blocking */
    IOM_Packet  syncPacket; /* for synchronous use */
    QUE_Obj    freeList; /* frames for asynch I/O */
    Ptr        syncObj;  /* ptr to synchro. obj */
    Ptr        mdChan;   /* ptr to channel obj */
} GIO_Obj, *GIO_Handle;

typedef struct IOM_Fxns
{
    IOM_TmdBindDev        mdBindDev;
    IOM_TmdUnBindDev     mdUnBindDev;
    IOM_TmdControlChan   mdControlChan;
    IOM_TmdCreateChan    mdCreateChan;
    IOM_TmdDeleteChan    mdDeleteChan;
    IOM_TmdSubmitChan    mdSubmitChan;
} IOM_Fxns;

```

```

typedef struct IOM_Packet { /* frame object */
    QUE_Elem  link;      /* queue link */
    Ptr       addr;      /* buffer address */
    size_t    size;      /* buffer size */
    Arg       misc;      /* reserved for driver */
    Arg       arg;        /* user argument */
    Uns       cmd;        /* mini-driver command */
    Int       status;     /* status of command */
} IOM_Packet;

```

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the GIO Manager Properties heading. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters


Name	Type	Default
ENABLEGIO	Bool	false
CREATEFXN	Extern	prog.extern("FXN_F_nop")
DELETFXN	Extern	prog.extern("FXN_F_nop")
PENDFXN	Extern	prog.extern("FXN_F_nop")
POSTFXN	Extern	prog.extern("FXN_F_nop")

Description

The GIO module provides a standard interface to mini-drivers for devices such as UARTs, codecs, and video capture/display devices. The creation of such mini-drivers is not covered in this manual; it is described in *DSP/BIOS Device Driver Developer's Guide* (SPRU616).

The GIO module is independent of the actual mini-driver being used. It allows the application to use a common interface for I/O requests. It also handles response synchronization. It is intended as common "glue" to bind applications to device drivers.

The following figure shows how modules are related in an application that uses the GIO module and an IOM mini-driver:

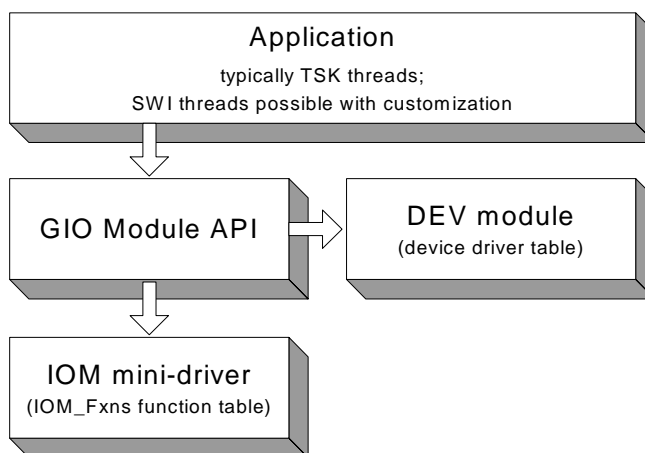

The GIO module is the basis of communication between applications and mini-drivers. The DEV module is responsible for maintaining the table of device drivers that are present in the system. The GIO module obtains device information by using functions such as DEV_match.

GIO Manager Properties

The following global properties can be set for the GIO module in the GIO Manager Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **Enable General Input/Output Manager.** Set this property to true to enable use of the GIO module. If your application does not use GIO, you should leave it disabled to prevent additional modules (such as SEM) from being linked into your application.

Tconf Name: ENABLEGIO

Type: Bool

Example: `bios.GIO.ENABLEGIO = false;`

- ❑ **Create Function.** The function the GIO module should use to create a synchronization object. This function is typically SEM_create. If you use another function, that function should have a prototype that matches that of SEM_create: `Ptr CREATEFXN(Int count, Ptr attrs);`

Tconf Name: CREATEFXN

Type: Extern

Example: `bios.GIO.CREATEFXN =
 prog.extern("SEM_create");`

- ❑ **Delete Function.** The function the GIO module should use to delete a synchronization object. This function is typically `SEM_delete`. If you use another function, that function should have a prototype that matches that of `SEM_delete`: `Void DELETEFXN(Ptr semHandle);`
Tconf Name: `DELETEFXN` Type: Extern
Example:

```
bios.GIO.DELETEFXN =  
    prog.extern("SEM_delete");
```
- ❑ **Pend Function.** The function the GIO module should use to pend on a synchronization object. This function is typically `SEM_pend`. If you use another function, that function should have a prototype that matches that of `SEM_pend`: `Bool PENDFXN(Ptr semHandle, Uns timeout);`
Tconf Name: `PENDFXN` Type: Extern
Example:

```
bios.GIO.PENDFXN =  
    prog.extern("SEM_pend");
```
- ❑ **Post Function.** The function the GIO module should use to post a synchronization object. This function is typically `SEM_post`. If you use another function, that function should have a prototype that matches that of `SEM_post`: `Void POSTFXN(Ptr semHandle);`
Tconf Name: `POSTFXN` Type: Extern
Example:

```
bios.GIO.POSTFXN =  
    prog.extern("SEM_post");
```

GIO Object Properties

GIO objects cannot be created statically. In order to create a GIO object, the application should call `GIO_create` or `GIO_new`.

GIO_abort*Abort all pending input and output***C Interface**

Syntax `status = GIO_abort(gioChan);`

Parameters `GIO_Handle gioChan; /* handle to an instance of the device */`

Return Value `Int status; /* returns IOM_COMPLETED if successful */`

Description

An application calls `GIO_abort` to abort all input and output from the device. When this call is made, all pending calls are completed with a status of `GIO_ABORTED`. An application uses this call to return the device to its initial state. Usually this is done in response to an unrecoverable error at the device level.

`GIO_abort` returns `IOM_COMPLETED` upon successfully aborting all input and output requests. If an error occurs, the device returns a negative value. For a list of error values, see “Constants, Types, and Structures” on page 2-146.

A call to `GIO_abort` results in a call to the `mdSubmit` function of the associated mini-driver. The `IOM_ABORT` command is passed to the `mdSubmit` function. The `mdSubmit` call is typically a blocking call, so calling `GIO_abort` can result in the thread blocking.

Constraints and Calling Context

- ❑ This function can be called only after the device has been loaded and initialized. The handle supplied should have been obtained with a prior call to `GIO_create` or `GIO_new`.
- ❑ `GIO_abort` cannot be called from a SWI or HWI unless the underlying mini-driver is a non-blocking driver and the GIO Manager properties are set to use non-blocking synchronization methods.

Example

```
/* abort all I/O requests given to the device*/
gioStatus = GIO_abort(gioChan);
```

GIO_control*Device specific control call***C Interface**

Syntax `status = GIO_control(gioChan, cmd, args);`

Parameters

`GIO_Handle gioChan;` /* handle to an instance of the device */
`Int cmd;` /* control functionality to perform */
`Ptr args;` /* data structure to pass control information */

Return Value `Int status;` /* returns IOM_COMPLETED if successful */

Description

An application calls `GIO_control` to configure or perform control functionality on the communication channel.

The `cmd` parameter may be one of the command code constants listed in “Constants, Types, and Structures” on page 2-146. A mini-driver may add command codes for additional functionality.

The `args` parameter points to a data structure defined by the device to allow control information to be passed between the device and the application. This structure can be generic across a domain or specific to a mini-driver. In some cases, this argument may point directly to a buffer holding control data. In other cases, there may be a level of indirection if the mini-driver expects a data structure to package many components of data required for the control operation. In the simple case where no data is required, this parameter may just be a predefined command value.

`GIO_control` returns `IOM_COMPLETED` upon success. If an error occurs, the device returns a negative value. For a list of error values, see “Constants, Types, and Structures” on page 2-146.

A call to `GIO_control` results in a call to the `mdControl` function of the associated mini-driver. The `mdControl` call is typically a blocking call, so calling `GIO_control` can result in blocking.

Constraints and Calling Context

- ❑ This function can be called only after the device has been loaded and initialized. The handle supplied should have been obtained with a prior call to `GIO_create` or `GIO_new`.
- ❑ `GIO_control` cannot be called from a SWI or HWI unless the underlying mini-driver is a non-blocking driver and the GIO Manager properties are set to use non-blocking synchronization methods.

Example

```
/* Carry out control/configuration on the device*/
gioStatus = GIO_control(gioChan, XXX_RESET, &args);
```

GIO_create*Allocate and initialize a GIO object***C Interface****Syntax**

```
gioChan = GIO_create(name, mode, *status, chanParams, *attrs)
```

Parameters

```
String    name        /* name of the device to open */
Int       mode        /* mode in which the device is to be opened */
Int       *status     /* address to place driver return status */
Ptr       chanParams /* optional */
GIO_Attrs *attrs     /* pointer to a GIO_Attrs structure */
```

Return Value

```
GIO_Handle gioChan; /* handle to an instance of the device */
```

Description

An application calls `GIO_create` to create a `GIO_Obj` object and open a communication channel. This function initializes the I/O channel and opens the lower-level device driver channel. The `GIO_create` call also creates the synchronization objects it uses and stores them in the `GIO_Obj` object.

The name argument is the name specified for the device when it was created in the configuration or at runtime.

The mode argument specifies the mode in which the device is to be opened. This may be `IOM_INPUT`, `IOM_OUTPUT`, or `IOM_INOUT`.

If the status returned by the device is non-NULL, a status value is placed at the address specified by the status parameter.

The `chanParams` parameter is a pointer that may be used to pass device or domain-specific arguments to the mini-driver. The contents at the specified address are interpreted by the mini-driver in a device-specific manner.

The `attrs` parameter is a pointer to a structure of type `GIO_Attrs`.

```
typedef struct GIO_Attrs {
    Int  nPackets; /* number of asynch I/O packets */
    Uns  timeout; /* for blocking calls (SYS_FOREVER) */
} GIO_Attrs;
```

If `attrs` is NULL, a default set of attributes is used. The default for `nPackets` is 2. The default for `timeout` is `SYS_FOREVER`.

The `GIO_create` call allocates a list of `IOM_Packet` items as specified by the `nPackets` member of the `GIO_Attrs` structure and stores them in the `GIO_Obj` object it creates.

GIO_create returns a handle to the GIO_Obj object created upon a successful open. The handle returned by this call should be used by the application in subsequent calls to GIO functions. This function returns a NULL handle if the device could not be opened. For example, if a device is opened in a mode not supported by the device, this call returns a NULL handle.

A call to GIO_create results in a call to the mdCreateChan function of the associated mini-driver.

Constraints and Calling Context

- ❑ A GIO stream can only be used by one task simultaneously. Catastrophic failure can result if more than one task calls GIO_read on the same input stream, or more than one task calls GIO_write on the same output stream.
- ❑ GIO_create cannot be called from the context of a SWI or HWI thread.
- ❑ This function can be called only after the device has been loaded and initialized.

Example

```
/* Create a device instance */
gioAttrs = GIO_ATTRS;
gioChan = GIO_create("\Codec0", IOM_INPUT, NULL, NULL,
                    &gioAttrs);
GIO_new
```


GIO_delete*Delete underlying mini-drivers and free GIO object and its structures***C Interface**

Syntax `status = GIO_delete(gioChan);`

Parameters `GIO_Handle gioChan; /* handle to device instance to be closed */`

Return Value `Int status; /* returns IOM_COMPLETED if successful */`

Description

An application calls `GIO_delete` to close a communication channel opened prior to this call with `GIO_create`. This function deallocates all memory allocated for this channel and closes the underlying device. All pending input and output are cancelled and the corresponding interrupts are disabled.

The `gioChan` parameter is the handle returned by `GIO_create` or `GIO_new`.

This function returns `IOM_COMPLETED` if the channel is successfully closed. If an error occurs, the device returns a negative value. For a list of error values, see “Constants, Types, and Structures” on page 2-146.

A call to `GIO_delete` results in a call to the `mdDelete` function of the associated mini-driver.

Constraints and Calling Context

- ❑ This function can be called only after the device has been loaded and initialized. The handle supplied should have been obtained with a prior call to `GIO_create` or `GIO_new`.

Example

```
/* close the device instance */
GIO_delete(gioChan);
```

GIO_flush*Drain output buffers and discard any pending input***C Interface**

Syntax `status = GIO_flush(gioChan);`

Parameters `GIO_Handle gioChan; /* handle to an instance of the device */`

Return Value `Int status; /* returns IOM_COMPLETED if successful */`

Description

An application calls `GIO_flush` to flush the input and output channels of the device. All input data is discarded; all pending output requests are completed. When this call is made, all pending input calls are completed with a status of `IOM_FLUSHED`, and all output calls are completed routinely.

The `gioChan` parameter is the handle returned by `GIO_create` or `GIO_new`.

This call returns `IOM_COMPLETED` upon successfully flushing all input and output. If an error occurs, the device returns a negative value. For a list of error values, see “Constants, Types, and Structures” on page 2-146.

A call to `GIO_flush` results in a call to the `mdSubmit` function of the associated mini-driver. The `IOM_FLUSH` command is passed to the `mdSubmit` function. The `mdSubmit` call is typically a blocking call, so calling `GIO_flush` can result in the thread blocking while waiting for output calls to be completed.

Constraints and Calling Context

- ❑ This function can be called only after the device has been loaded and initialized. The handle supplied should have been obtained with a prior call to `GIO_create` or `GIO_new`.
- ❑ `GIO_flush` cannot be called from a SWI or HWI unless the underlying mini-driver is a non-blocking driver and the GIO Manager properties are set to use non-blocking synchronization methods.

Example

```
/* Flush all I/O given to the device*/
GIO_flush(gioChan);
```

GIO_new*Initialize a GIO object with pre-allocated memory***C Interface****Syntax**

```
gioChan = GIO_new(gioChan, name, mode, *status, optArgs,
packetBuf[], syncObject, *attrs);
```

Parameters

```
GIO_Handle gioChan    /* Handle to GIO Obj */
String      name      /* name of the device to open */
Int         mode      /* mode in which the device is to be opened */
Int         *status   /* address to place driver return status */
Ptr         optArgs   /* optional args to mdCreateChan */
IOM_packet packetBuf[] /* to be initialized to zero */
Ptr         syncObject /* sync Object */
GIO_Attrs  *attrs     /* pointer to a GIO_Attrs structure */
```

Return Value

```
GIO_Handle gioChan; /* handle to the initialized GIO object */
```

Description

An application calls `GIO_new` to initialize a `GIO_Obj` object and open a communication channel. This function initializes the I/O channel and opens the lower-level device driver channel. The `GIO_new` call *does not* allocate any memory. It requires pre-allocated memory.

The "gioChan" parameter is a handle to a structure of type `GIO_Obj` that your program has declared. `GIO_new` initializes this structure.

```
typedef struct GIO_Obj {
    IOM_Fxns  *fxns;      /* ptr to function table */
    Uns       mode;      /* create mode */
    Uns       timeout;   /* timeout for blocking */
    IOM_Packet syncPacket; /* for synchronous use */
    QUE_Obj   freeList;  /* frames for asynch I/O */
    Ptr       syncObj;   /* ptr to synchro. obj */
    Ptr       mdChan;    /* ptr to channel obj */
} GIO_Obj, *GIO_Handle;
```

The "name" parameter is the name previously specified for the device. It is used to find a matching name in the device table.

The "mode" parameter specifies the mode in which the device is to be opened. This may be `IOM_INPUT`, `IOM_OUTPUT`, or `IOM_INOUT`.

If the status returned by the device is non-NULL, a status value is placed at the address specified by the "status" parameter.

The "optArgs" parameter is a pointer that may be used to pass device or domain-specific arguments to the mini-driver. The contents at the specified address are interpreted by the mini-driver in a device-specific manner.

Use the "packetBuf[]" array to pass a list of IOM_Packet items. The number of items should match the nPackets member of the GIO_Attrs structure passed to the "attrs" parameter. GIO_new initializes these IOM_Packet items.

The "syncObject" parameter is usually a SEM handle.

The "attrs" parameter is a pointer to a structure of type GIO_Attrs.

```
typedef struct GIO_Attrs {
    Int nPackets; /* number of asynch I/O packets */
    Uns timeout; /* for blocking calls (SYS_FOREVER) */
} GIO_Attrs;
```

If attrs is NULL, a default set of attributes is used. The default for nPackets is 2. The default for timeout is SYS_FOREVER. GIO_new initializes the packets, but does not allocate them.

GIO_new returns the non-NULL handle to the GIO_Obj when initialization is successful. The handle returned by this call should be used by the application in subsequent calls to GIO functions. Usually, this is the same handle passed to GIO_new. However, GIO_new returns a NULL handle if the device could not be initialized. For example, if a device is opened in a mode not supported by the device, this call returns a NULL handle.

A call to GIO_new results in a call to the mdCreateChan function of the associated mini-driver.

Constraints and Calling Context

- ❑ This function can be called only after the device has been loaded and initialized.

Example

```
/* Initialize a device object */
output = GIO_new(&outObj, "/printf", IOM_OUTPUT,
    &status, NULL, outPacketBuf, outSem, &attrs);
GIO_create
```

GIO_read*Synchronous read command***C Interface**

Syntax `status = GIO_read(gioChan, bufp, *pSize);`

Parameters

<code>GIO_Handle</code>	<code>gioChan;</code>	<i>/* handle to an instance of the device */</i>
<code>Ptr</code>	<code>bufp</code>	<i>/* pointer to data structure for buffer data */</i>
<code>size_t</code>	<code>*pSize</code>	<i>/* pointer to size of bufp structure */</i>

Return Value

<code>Int</code>	<code>status;</code>	<i>/* returns IOM_COMPLETED if successful */</i>
------------------	----------------------	--

Description

An application calls `GIO_read` to read a specified number of MADUs (minimum addressable data units) from the communication channel.

The `gioChan` parameter is the handle returned by `GIO_create` or `GIO_new`.

The `bufp` parameter points to a device-defined data structure for passing buffer data between the device and the application. This structure may be generic across a domain or specific to a single mini-driver. In some cases, this parameter may point directly to a buffer that holds the read data. In other cases, this parameter may point to a structure that packages buffer information, size, offset to be read from, and other device-dependent data. For example, for video capture devices this structure may contain pointers to RGB buffers, their sizes, video format, and a host of data required for reading a frame from a video capture device. Upon a successful read, this argument points to the returned data.

The `pSize` parameter points to the size of the buffer or data structure pointed to by the `bufp` parameter. When the function returns, this parameter points to the number of MADUs read from the device. This parameter is relevant only if the `bufp` parameter points to a raw data buffer. In cases where it points to a device-defined structure it is redundant—the size of the structure is known to the mini-driver and the application. At most, it can be used for error checking.

`GIO_read` returns `IOM_COMPLETED` upon successfully reading the requested number of MADUs from the device. If an error occurs, the device returns a negative value. For a list of error values, see “Constants, Types, and Structures” on page 2-146.

A call to `GIO_read` results in a call to the `mdSubmit` function of the associated mini-driver. The `IOM_READ` command is passed to the `mdSubmit` function. The `mdSubmit` call is typically a blocking call, so calling `GIO_read` can result in the thread blocking.

Constraints and Calling Context

- ❑ This function can be called only after the device has been loaded and initialized. The handle supplied should have been obtained with a prior call to `GIO_create` or `GIO_new`.
- ❑ `GIO_read` cannot be called from a SWI, HWI, or `main()` unless the underlying mini-driver is a non-blocking driver and the GIO Manager properties are set to use non-blocking synchronization methods.

Example

```
/* Read from the device */
size = sizeof(readStruct);
status = GIO_read(gioChan, &readStruct, &size);
```

GIO_submit*Submit a GIO packet to the mini-driver***C Interface**

Syntax `status = GIO_submit(gioChan, cmd, bufp, *pSize, *appCallback);`

Parameters

`GIO_Handle gioChan;` /* handle to an instance of the device */
`Uns cmd` /* specified mini-driver command */
`Ptr bufp` /* pointer to data structure for buffer data */
`size_t *pSize` /* pointer to size of bufp structure */
`GIO_AppCallback *appCallback` /* pointer to callback structure */

Return Value `Int status;` /* returns IOM_COMPLETED if successful */

Description

`GIO_submit` is not typically called by applications. Instead, it is used internally and for user-defined extensions to the GIO module.

`GIO_read` and `GIO_write` are macros that call `GIO_submit` with `appCallback` set to `NULL`. This causes GIO to complete the I/O request synchronously using its internal synchronization object (by default, a semaphore). If `appCallback` is non-`NULL`, the specified callback is called without blocking. This API is provided to extend GIO functionality for use with SWI threads without changing the GIO implementation.

The `gioChan` parameter is the handle returned by `GIO_create` or `GIO_new`.

The `cmd` parameter is one of the command code constants listed in “Constants, Types, and Structures” on page 2-146. A mini-driver may add command codes for additional functionality.

The `bufp` parameter points to a device-defined data structure for passing buffer data between the device and the application. This structure may be generic across a domain or specific to a single mini-driver. In some cases, this parameter may point directly to a buffer that holds the data. In other cases, this parameter may point to a structure that packages buffer information, size, offset to be read from, and other device-dependent data.

The `pSize` parameter points to the size of the buffer or data structure pointed to by the `bufp` parameter. When the function returns, this parameter points to the number of MADUs transferred to or from the device. This parameter is relevant only if the `bufp` parameter points to a raw data buffer. In cases where it points to a device-defined structure it is redundant—the size of the structure is known to the mini-driver and the application. At most, it can be used for error checking.

The `appCallback` parameter points to either a callback structure that contains the callback function to be called when the request completes, or it points to `NULL`, which causes the call to be synchronous. When a queued request is completed, the callback routine (if specified) is invoked (i.e. blocking).

`GIO_submit` returns `IOM_COMPLETED` upon successfully carrying out the requested functionality. If the request is queued, then a status of `IOM_PENDING` is returned. If an error occurs, the device returns a negative value. For a list of error values, see “Constants, Types, and Structures” on page 2-146.

A call to `GIO_submit` results in a call to the `mdSubmit` function of the associated mini-driver. The specified command is passed to the `mdSubmit` function.

Constraints and Calling Context

- ❑ This function can be called only after the device has been loaded and initialized. The handle supplied should have been obtained with a prior call to `GIO_create` or `GIO_new`.
- ❑ This function can be called within the program’s `main()` function only if the GIO channel is asynchronous (non-blocking).

Example

```
/* write asynchronously to the device*/
size = sizeof(userStruct);
status = GIO_submit(gioChan, IOM_WRITE, &userStruct,
                   &size, &callbackStruct);

/* write synchronously to the device */
size = sizeof(userStruct);
status = GIO_submit(gioChan, IOM_WRITE, &userStruct,
                   &size, NULL);
```


GIO_write*Synchronous write command***C Interface****Syntax**

```
status = GIO_write(gioChan, bufp, *pSize);
```

Parameters

```
GIO_Handle  gioChan; /* handle to an instance of the device */
Ptr         bufp     /* pointer to data structure for buffer data */
size_t      *pSize   /* pointer to size of bufp structure */
```

Return Value

```
Int         status; /* returns IOM_COMPLETED if successful */
```

Description

The application uses this function to write a specified number of MADUs to the communication channel.

The `gioChan` parameter is the handle returned by `GIO_create` or `GIO_new`.

The `bufp` parameter points to a device-defined data structure for passing buffer data between the device and the application. This structure may be generic across a domain or specific to a single mini-driver. In some cases, this parameter may point directly to a buffer that holds the write data. In other cases, this parameter may point to a structure that packages buffer information, size, offset to be written to, and other device-dependent data. For example, for video capture devices this structure may contain pointers to RGB buffers, their sizes, video format, and a host of data required for reading a frame from a video capture device. Upon a successful read, this argument points to the returned data.

The `pSize` parameter points to the size of the buffer or data structure pointed to by the `bufp` parameter. When the function returns, this parameter points to the number of MADUs written to the device. This parameter is relevant only if the `bufp` parameter points to a raw data buffer. In cases where it points to a device-defined structure it is redundant—the size of the structure is known to the mini-driver and the application. At most, it can be used for error checking.

`GIO_write` returns `IOM_COMPLETED` upon successfully writing the requested number of MADUs to the device. If an error occurs, the device returns a negative value. For a list of error values, see “Constants, Types, and Structures” on page 2-146.

A call to `GIO_write` results in a call to the `mdSubmit` function of the associated mini-driver. The `IOM_WRITE` command is passed to the `mdSubmit` function. The `mdSubmit` call is typically a blocking call, so calling `GIO_write` can result in blocking.

Constraints and Calling Context

- ❑ This function can be called only after the device has been loaded and initialized. The handle supplied should have been obtained with a prior call to GIO_create or GIO_new.
- ❑ This function can be called within the program's main() function only if the GIO channel is asynchronous (non-blocking).
- ❑ GIO_write cannot be called from a SWI or HWI unless the underlying mini-driver is a non-blocking driver and the GIO Manager properties are set to use non-blocking synchronization methods.

Example

```
/* write synchronously to the device*/  
size = sizeof(writeStruct);  
status = GIO_write(gioChan, &writeStrct, &size);
```

2.10 HOOK Module

The HOOK module is the Hook Function manager.

Functions

- ❑ `HOOK_getenv`. Get environment pointer for a given HOOK and TSK combination.
- ❑ `HOOK_setenv`. Set environment pointer for a given HOOK and TSK combination.

Constants, Types, and Structures

```
typedef Int HOOK_Id;          /* HOOK instance id */

typedef Void (*HOOK_InitFxn)(HOOK_Id id);
typedef Void (*HOOK_CreateFxn)(TSK_Handle task);
typedef Void (*HOOK_DeleteFxn)(TSK_Handle task);
typedef Void (*HOOK_ExitFxn)(Void);
typedef Void (*HOOK_ReadyFxn)(TSK_Handle task);
typedef Void (*HOOK_SwitchFxn)(TSK_Handle prev,
                               TSK_Handle next);
```

Configuration Properties

The following list shows the properties that can be configured in a `Tconf` script, along with their types and default values. For details, see the HOOK Object Properties heading. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Instance Configuration Parameters

Name	Type	Default
<code>comment</code>	String	"<add comments here>"
<code>initFxn</code>	Extern	<code>prog.extern("FXN_F_nop")</code>
<code>createFxn</code>	Extern	<code>prog.extern("FXN_F_nop")</code>
<code>deleteFxn</code>	Extern	<code>prog.extern("FXN_F_nop")</code>
<code>exitFxn</code>	Extern	<code>prog.extern("FXN_F_nop")</code>
<code>callSwitchFxn</code>	Bool	false
<code>switchFxn</code>	Extern	<code>prog.extern("FXN_F_nop")</code>
<code>callReadyFxn</code>	Bool	false
<code>readyFxn</code>	Extern	<code>prog.extern("FXN_F_nop")</code>
<code>order</code>	Int16	2

Description

The HOOK module is an extension to the TSK function hooks defined in the TSK Manager Properties. It allows multiple sets of hook functions to be performed at key execution points. For example, an application that integrates third-party software may need to perform both its own hook functions and the hook functions required by the third-party software.

In addition, each HOOK object can maintain private data environments for each task for use by its hook functions.

The key execution points at which hook functions can be executed are during program initialization and at several TSK execution points.

The HOOK module manages objects that reference a set of hook functions. Each HOOK object is assigned a numeric identifier during DSP/BIOS initialization. If your program calls HOOK API functions, you must implement an initialization function for the HOOK instance that records the identifier in a variable of type HOOK_Id. DSP/BIOS passes the HOOK object's ID to the initialization function as the lone parameter.

The following function, myInit, could be configured as the Initialization function for a HOOK object using Tconf.

```
#include <hook.h>
HOOK_Id myId;

Void myInit(HOOK_Id id)
{
    myId = id;
}
```

The HOOK_setenv function allows you to associate an environment pointer to any data structure with a particular HOOK object and TSK object combination.

There is no limit to the number of HOOK objects that can be created. However, each object requires a small amount of memory in the .bss section to contain the object.

A HOOK object initially has all of its functions set to FXN_F_nop. You can set some hook functions and use this no-op function for the remaining events. Since the switch and ready events occur frequently during real-time processing, a separate property controls whether any function is called.

When you create a HOOK object, any TSK module hook functions you have specified are automatically placed in a HOOK object called HOOK_KNL. To set any properties of this object other than the Initialization function, use the TSK module. To set the Initialization function property of the HOOK_KNL object, use the HOOK module.

When an event occurs, all HOOK functions for that event are called in the order set by the order property in the configuration. When you select the HOOK manager in the DSP/BIOS Configuration Tool, you can change the execution order by dragging objects within the ordered list.

HOOK Manager Properties

There are no global properties for the HOOK manager. HOOK objects are placed in the C Variables Section (.bss).

HOOK Object Properties

The following properties can be set for a HOOK object in the DPI Object Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script. To create a HOOK object in a configuration script, use the following syntax:

```
var myHook = bios.HOOK.create("myHook");
```

The Tconf examples that follow assume the object has been created as shown.

- ❑ **comment.** A comment to identify this HOOK object.

Tconf Name: comment Type: String

Example: `myHook.comment = "HOOK funcs";`

- ❑ **Initialization function.** The name of a function to call during program initialization. Such functions run during the BIOS_init portion of application startup, which runs before the program's main() function. Initialization functions can call most functions that can be called from the main() function. However, they should not call TSK module functions, because the TSK module is initialized after initialization functions run. In addition to code specific to the module hook, this function should be used to record the object's ID, if it is needed in a subsequent hook function. This initialization function is intended for use in setting up data structures used by other functions of the same HOOK object. In contrast, the User Init Function property of the GBL Module Properties runs early in the initialization process and is intended to be used to perform hardware setup that needs to run before DSP/BIOS is initialized.

Tconf Name: initFxn Type: Extern

Example: `myHook.initFxn = prog.extern("myInit");`

- ❑ **Create function.** The name of a function to call when any task is created. This includes tasks that are created statically and those created dynamically using TSK_create. The TSK_create topic describes the prototype required for the Create function. If this function is written in C and you are using the DSP/BIOS Configuration Tool, use a leading underscore before the C function name. If you are using Tconf, do not add an underscore before the function name; Tconf adds the underscore needed to call a C function from assembly internally.

Tconf Name: createFxn Type: Extern

Example: `myHook.createFxn =
 prog.extern("myCreate");`

- ❑ **Delete function.** The name of a function to call when any task is deleted at run-time with TSK_delete.
Tconf Name: deleteFxn Type: Extern
Example: `myHook.deleteFxn =
 prog.extern("myDelete");`

- ❑ **Exit function.** The name of a function to call when any task exits. The TSK_exit topic describes the Exit function.
Tconf Name: exitFxn Type: Extern
Example: `myHook.exitFxn = prog.extern("myExit");`

- ❑ **Call switch function.** Set this property to true if you want a function to be called when any task switch occurs.
Tconf Name: callSwitchFxn Type: Bool
Example: `myHook.callSwitchFxn = false;`

- ❑ **Switch function.** The name of a function to call when any task switch occurs. This function can give the application access to both the current and next task handles. The TSK Module topic describes the Switch function.
Tconf Name: switchFxn Type: Extern
Example: `myHook.switchFxn =
 prog.extern("mySwitch");`

- ❑ **Call ready function.** Set this property to true if you want a function to be called when any task becomes ready to run.
Tconf Name: callReadyFxn Type: Bool
Example: `myHook.callReadyFxn = false;`

- ❑ **Ready function.** The name of a function to call when any task becomes ready to run. The TSK Module topic describes the Ready function.
Tconf Name: readyFxn Type: Extern
Example: `myHook.readyFxn = prog.extern("myReady");`

- ❑ **order.** Set this property for all HOOK function objects match the order in which HOOK functions should be executed.
Tconf Name: order Type: Int16
Example: `myHook.order = 2;`

HOOK_getenv*Get environment pointer for a given HOOK and TSK combination***C Interface**

Syntax `environ = HOOK_getenv(task, id);`

Parameters `TSK_Handle task; /* task object handle */`
`HOOK_Id id; /* HOOK instance id */`

Return Value `Ptr environ; /* environment pointer */`

Reentrant `yes`

Description `HOOK_getenv` returns the environment pointer associated with the specified HOOK and TSK objects. The environment pointer, `environ`, references the data structure specified in a previous call to `HOOK_setenv`.

See Also `HOOK_setenv`
`TSK_getenv`

HOOK_setenv*Set environment pointer for a given HOOK and TSK combination***C Interface****Syntax** HOOK_setenv(task, id, environ);**Parameters** TSK_Handle task; /* task object handle */
HOOK_Id id; /* HOOK instance id */
Ptr environ; /* environment pointer */**Return Value** Void**Reentrant** yes**Description** HOOK_setenv sets the environment pointer associated with the specified HOOK and TSK objects to environ. The environment pointer, environ, should reference an data structure to be used by the hook functions for a task or tasks.

Each HOOK object may have a separate environment pointer for each task. A HOOK object may also point to the same data structure for all tasks, depending on its data sharing needs.

The HOOK_getenv function can be used to get the environ pointer for a particular HOOK and TSK object combination.

See Also HOOK_getenv
 TSK_setenv

2.11 HST Module

Important Note: This module is being deprecated and will no longer be supported in the next major release of DSP/BIOS. The HST module is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

The HST module is the host channel manager.

Functions

- ❑ HST_getpipe. Get corresponding pipe object

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the HST Manager Properties and HST Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default (Enum Options)
OBJMEMSEG	Reference	prog.get("IDRAM")
HOSTLINKTYPE	EnumString	"RTDX" ("NONE")

Instance Configuration Parameters

Name	Type	Default (Enum Options)
comment	String	"<add comments here>"
mode	EnumString	"output" ("input")
bufSeg	Reference	prog.get("IDRAM")
bufAlign	Int16	4
frameSize	Int16	128
numFrames	Int16	2
statistics	Bool	false
availableForDHL	Bool	false
notifyFxn	Extern	prog.extern("FXN_F_nop")
arg0	Arg	3

Description

The HST module manages host channel objects, which allow an application to stream data between the target and the host. Host channels are statically configured for input or output. Input channels (also

halted (for example, at a breakpoint). The program code size is smaller when the Host Link Type is set to None because RTDX code is not included in the program.

Tconf Name: HOSTLINKTYPE Type: EnumString

Options: "RTDX", "NONE"

Example: `bios.HST.HOSTLINKTYPE = "RTDX";`

HST Object Properties

A host channel maintains a buffer partitioned into a fixed number of fixed length frames. All I/O operations on these channels deal with one frame at a time; although each frame has a fixed length, the application can put a variable amount of data in each frame.

The following properties can be set for a host file object in the HST Object Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script. To create an HST object in a configuration script, use the following syntax:

```
var myHst = bios.HST.create("myHst");
```

The Tconf examples that follow assume the object has been created as shown.

- ❑ **comment.** A comment to identify this HST object.

Tconf Name: comment Type: String

Example: `myHst.comment = "my HST";`

- ❑ **mode.** The type of channel: input or output. Input channels are used by the target to read data from the host; output channels are used by the target to transfer data from the target to the host.

Tconf Name: mode Type: EnumString

Options: "output", "input"

Example: `myHst.mode = "output";`

- ❑ **bufseg.** The memory segment from which the buffer is allocated; all frames are allocated from a single contiguous buffer (of size framesize x numframes).

Tconf Name: bufSeg Type: Reference

Example: `myHst.bufSeg = prog.get("myMEM");`

- ❑ **bufalign.** The alignment (in words) of the buffer allocated within the specified memory segment.

Tconf Name: bufAlign Type: Int16

Options: must be ≥ 4 and a power of 2

Example: `myHst.bufAlign = 4;`

- ❑ **framesize.** The length of each frame (in words)
Tconf Name: `frameSize` Type: Int16
Example: `myHst.frameSize = 128;`

- ❑ **numframes.** The number of frames
Tconf Name: `numFrames` Type: Int16
Example: `myHst.numFrames = 2;`

- ❑ **statistics.** Set this property to true if you want to monitor this channel with an STS object. You can display the STS object for this channel to see a count of the number of frames transferred with the Statistics View Analysis Tool.
Tconf Name: `statistics` Type: Bool
Example: `myHst.statistics = false;`

- ❑ **Make this channel available for a new DHL device.** Set this property to true if you want to use this HST object with a DHL device. DHL devices allow you to manage data I/O between the host and target using the SIO module, rather than the PIP module. See the DHL Driver topic for more details.
Tconf Name: `availableForDHL` Type: Bool
Example: `myHst.availableForDHL = false;`

- ❑ **notify.** The function to execute when a frame of data for an input channel (or free space for an output channel) is available. To avoid problems with recursion, this function should not directly call any of the PIP module functions for this HST object.
Tconf Name: `notifyFxn` Type: Extern
Example: `myHst.notifyFxn =
 prog.extern("hstNotify");`

- ❑ **arg0, arg1.** Two 32-bit arguments passed to the notify function. They can be either unsigned 32-bit constants or symbolic labels.
Tconf Name: `arg0` Type: Arg
Tconf Name: `arg1` Type: Arg
Example: `myHst.arg0 = 3;`

HST_getpipe*Get corresponding pipe object*

Important Note: This API is being deprecated and will no longer be supported in the next major release of DSP/BIOS. The HST module is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
pipe = HST_getpipe(hst);
```

Parameters

```
HST_Handle hst      /* host object handle */
```

Return Value

```
PIP_Handle pip      /* pipe object handle*/
```

Reentrant

```
yes
```

Description

HST_getpipe gets the address of the pipe object for the specified host channel object.

Example

```
Void copy(HST_Obj *input, HST_Obj *output)
{
    PIP_Obj      *in, *out;
    Uns          *src, *dst;
    Uns          size;

    in = HST_getpipe(input);
    out = HST_getpipe(output);
    if (PIP_getReaderNumFrames == 0 ||
        PIP_getWriterNumFrames == 0) {
        error;
    }

    /* get input data and allocate output frame */
    PIP_get(in);
    PIP_alloc(out);

    /* copy input data to output frame */
    src = PIP_getReaderAddr(in);
    dst = PIP_getWriterAddr(out);
    size = PIP_getReaderSize();
    out->writerSize = size;

    for (; size > 0; size--) {
        *dst++ = *src++;
    }

    /* output copied data and free input frame */
    PIP_put(out);
    PIP_free(in);
}

```

See Also

```
PIP_alloc
```

2.12 HWI Module

The HWI module is the hardware interrupt manager.

Functions

- ❑ `HWI_applyWugenMasks`. Set WUGEN interrupt mask registers.
- ❑ `HWI_disable`. Disable hardware interrupts
- ❑ `HWI_disableWugen`. Disable an interrupt in WUGEN registers.
- ❑ `HWI_dispatchPlug`. Plug the HWI dispatcher
- ❑ `HWI_enable`. Enable hardware interrupts
- ❑ `HWI_enableWugen`. Enable an interrupt in WUGEN registers.
- ❑ `HWI_enter`. Hardware ISR prolog
- ❑ `HWI_eventMap`. Assign interrupt source number to an HWI object.
- ❑ `HWI_exit`. Hardware ISR epilog
- ❑ `HWI_getWugenMasks`. Get WUGEN interrupt mask registers.
- ❑ `HWI_ierToWugenMasks`. Compute WUGEN masks to match IER register.
- ❑ `HWI_isHWI`. Check current thread calling context.
- ❑ `HWI_restore`. Restore hardware interrupt state

Constants, Types, and Structures

```
typedef struct HWI_Attrs {
    Uns    intrMask; /* IER bitmask, 1="self" (default) */
    Uns    ccMask    /* CSR CC bitmask, 1="leave alone" */
    Arg    arg;      /* fxn arg (default = 0)*/
} HWI_Attrs;

HWI_Attrs HWI_ATTRS = {
    1,          /* interrupt mask (1 => self) */
    1,          /* CSR bit mask (1 => leave alone) */
    0           /* argument to ISR */
};
```

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the HWI Manager Properties and HWI Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters.

Name	Type	Default (Enum Options)
RESETVECTOR	Bool	false
EXTPIN4POLARITY	EnumString	"low-to-high" ("high-to-low")

Name	Type	Default (Enum Options)
EXTPIN5POLARITY	EnumString	"low-to-high" ("high-to-low")
EXTPIN6POLARITY	EnumString	"low-to-high" ("high-to-low")
EXTPIN7POLARITY	EnumString	"low-to-high" ("high-to-low")
ENABLEEXC	Bool	true (C64x+ only)

Instance Configuration Parameters

HWI instances are provided as a default part of the configuration and cannot be created. In the items that follow, HWI_INT* may be any provided instance. Default values for many HWI properties are different for each instance.

Name	Type	Default (Enum Options)
comment	String	"<add comments here>"
interruptSource	EnumString	"Reset" (Non_Maskable, "Reserved", "Timer 0", "Timer 1", "Host_Port_Host_to_DSP", "EMIF_SDRAM_Timer", "PCI_WAKEUP", "AUX_DMA_HALT", "External_Pin_4", "External_Pin_5", "External_Pin_6", "External_Pin_7", "DMA_Channel_0", "DMA_Channel_1", "DMA_Channel_2", "DMA_Channel_3", "MCSP_0_Transmit", "MCSP_0_Receive", "MCSP_1_Transmit", "MCSP_2_Receive", "MCSP_2_Transmit", "MCSP_2_Receive") (Not used for C64x+)
interruptSelectNumber	Int	(varies by specific target)
fxn	Extern	prog.extern("HWI_unused","asm")
monitor	EnumString	"Nothing" ("Data Value", "Stack Pointer", "Top of SW Stack", "A0" ... "A15", "B0" ... "B15")
addr	Arg	0x00000000
dataType	EnumString	"signed" ("unsigned")
operation	EnumString	"STS_add(*addr)" ("STS_delta(*addr)", "STS_add(-*addr)", "STS_delta(-*addr)", "STS_add(!*addr)", "STS_delta(!*addr)")
useDispatcher	Bool	false
arg	Arg	0
interruptMask	EnumString	"self" ("all", "none", "bitmask")
interruptBitMask	Numeric	0x0010 *
cacheControl	Bool	true (Not used for C64x+)
progCacheMask	EnumString	"mapped" ("cache enable", "cache freeze", "cache bypass") (Not used for C64x+)
dataCacheMask	EnumString	"mapped" ("cache enable", "cache freeze", "cache bypass") (Not used for C64x+)

* Depends on interrupt ID

Description

The HWI module manages hardware interrupts. Using Tconf, you can assign routines that run when specific hardware interrupts occur. Some routines are assigned to interrupts automatically by the HWI module. For example, the interrupt for the timer that you select for the CLK global properties is automatically configured to run a function that increments the low-resolution time. See the CLK Module for more details.

You can also dynamically assign routines to interrupts at run-time using the HWI_dispatchPlug function or the C62_plug or C64_plug functions.

DSP/BIOS supports the C64x+ interrupt selector through the HWI Module. You can route one of the 128 system events to a specific HWI object by specifying the event number as the "interrupt selection number" in the HWI Object Properties. This one-to-one mapping supports up to 12 maskable interrupts. The C64x+ event combiner is supported by the ECM Module. If the 16 HWI objects are sufficient for the number of HWI functions your application needs to run, you need not enable the ECM module. You do not need to know whether your C function will be run by the HWI module or ECM module when you write the function. (The ECM module uses the HWI dispatcher, and so its functions cannot be completely written in assembly.)

Interrupt routines can be written completely in assembly, completely in C, or in a mix of assembly and C. In order to support interrupt routines written completely in C, an HWI dispatcher is provided that performs the requisite prolog and epilog for an interrupt routine.

Note: RTS Functions Callable from TSK Threads Only

Many runtime support (RTS) functions use lock and unlock functions to prevent reentrancy. However, DSP/BIOS SWI and HWI threads cannot call LCK_pend and LCK_post. As a result, RTS functions that call LCK_pend or LCK_post *must not be called in the context of a SWI or HWI thread*. For a list of RTS functions that should not be called from a SWI or an HWI function, see "LCK_pend" on page 2-213.

The C++ "new" operator calls malloc, which in turn calls LCK_pend. As a result, the "new" operator cannot be used in the context of a SWI or HWI thread.

HWI Dispatcher vs. HWI_enter/exit

The HWI dispatcher is the preferred method for handling an interrupt. When enabled, the HWI objects that run functions for the CLK and RTDX modules use the dispatcher.

When an HWI object does not use the dispatcher, the HWI_enter assembly macro must be called prior to any DSP/BIOS API calls that affect other DSP/BIOS objects, such as posting a SWI or a semaphore, and the HWI_exit assembly macro must be called at the very end of the function's code.

When an HWI object is configured to use the dispatcher, the dispatcher handles the HWI_enter prolog and HWI_exit epilog, and the HWI function can be completely written in C. It would, in fact, cause a system crash for the dispatcher to call a function that contains the HWI_enter/HWI_exit macro pair. Using the dispatcher allows you to save code space by including only one instance of the HWI_enter/HWI_exit code.

Note:

CLK functions should not call HWI_enter and HWI_exit as these are called internally by the HWI dispatcher when it runs CLK_F_isr. Additionally, CLK functions should **not** use the *interrupt* keyword or the INTERRUPT pragma in C functions.

Notes

In the following notes, references to the usage of HWI_enter/HWI_exit also apply to usage of the HWI dispatcher since, in effect, the dispatcher calls HWI_enter/HWI_exit.

- ❑ Do not call SWI_disable or SWI_enable within an HWI function.
- ❑ Do not call HWI_enter, HWI_exit, or any other DSP/BIOS functions from a non-maskable interrupt (NMI) service routine. In addition, the HWI dispatcher cannot be used with the NMI service routine.

In general, due to details of the 'C6000 architecture, NMI disrupts the code it interrupts to the point that it cannot be returned to. Therefore, NMI should not be used to respond to run-time events. NMI should be used only for exceptional processing that does not return to the code it interrupted.

- ❑ Do not call HWI_enter/HWI_exit from a HWI function that is invoked by the dispatcher.

- The DSP/BIOS API calls that require an HWI function to use HWI_enter and HWI_exit are:
 - SWI_andn
 - SWI_andnHook
 - SWI_dec
 - SWI_inc
 - SWI_or
 - SWI_orHook
 - SWI_post
 - PIP_alloc
 - PIP_free
 - PIP_get
 - PIP_put
 - PRD_tick
 - SEM_post
 - MBX_post
 - TSK_yield
 - TSK_tick

Any PIP API call can cause the pipe's notifyReader or notifyWriter function to run. If an HWI function calls a PIP function, the notification functions run as part of the HWI function.

An HWI function must use HWI_enter and HWI_exit or must be dispatched by the HWI dispatcher if it indirectly runs a function containing any of the API calls listed above.

If your HWI function and the functions it calls do not call any of these API operations, you do not need to disable SWI scheduling by calling HWI_enter and HWI_exit.

Registers and Stack

Whether a hardware interrupt is dispatched by the HWI dispatcher or handled with the HWI_enter/HWI_exit macros, a common interrupt stack (called the system stack) is used for the duration of the HWI. This same stack is also used by all SWI routines.

The register mask argument to HWI_enter and HWI_exit allows you to save and restore registers used within the function. Other arguments, for example, allow the HWI to control the settings of the IEMASK and the cache control field.

Note:

By using HWI_enter and HWI_exit as an HWI function's prolog and epilog, an HWI function can be interrupted; that is, a hardware interrupt can interrupt another interrupt. You can use the IEMASK parameter for the HWI_enter API to prevent this from occurring.

HWI Manager Properties

DSP/BIOS manages the hardware interrupt vector table and provides basic hardware interrupt control functions; for example, enabling and disabling the execution of hardware interrupts.

The following global properties can be set for the HWI module in the HWI Manager Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- Generate RESET vector at address 0.** Check this box in order to place an additional reset vector at address 0. You need to enable this property only if you generated your vector table somewhere other than address 0 but want the reset vector to be at address 0. This option is available only if address 0 exists in the memory configuration and the .hwi_vec section is not placed in a memory segment containing address 0.

Tconf Name: RESETVECTOR Type: Bool

Example: `bios.HWI.RESETVECTOR = false;`

- External Interrupt Pin 4-7 Polarity.** Choose whether the device connected to this pin causes an interrupt when a high-to-low transition occurs, or when a low-to-high transition occurs.

Tconf Name: EXTPIN4POLARITY Type: EnumString

Tconf Name: EXTPIN5POLARITY Type: EnumString

Tconf Name: EXTPIN6POLARITY Type: EnumString

Tconf Name: EXTPIN7POLARITY Type: EnumString

Options: "low-to-high", "high-to-low"

Example: `bios.HWI.EXTPIN4POLARITY =
"low-to-high";`

- Enable EXC module exception processing.** C64x+ only. Leave this property set to true if you plan to use the EXC or MPC Module. By default, the EXC module is enabled.

Tconf Name: ENABLEEXC Type: Bool

Example: `bios.HWI.ENABLEEXC = true;`

HWI Object Properties

The following properties can be set for an HWI object in the HWI Object Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script. The HWI objects for the platform are provided in the default configuration and cannot be created.

- ❑ **comment.** A comment is provided to identify each HWI object.

Tconf Name: comment

Type: String

Example: `bios.HWI_INT4.comment = "myISR";`

- ❑ **interrupt source.** Select the pin, DMA channel, timer, or other source of the interrupt. Only the most common sources are listed. If your source is not listed here as an option, use the interrupt selection number property instead. (Not used for C64x+ devices.)

Tconf Name: interruptSource

Type: EnumString

Options: "Reset", "Non_Maskable", "Reserved", "Timer 0",
 "Timer 1", "Host_Port_Host_to_DSP",
 "EMIF_SDRAM_Timer", "PCI_WAKEUP",
 "AUX_DMA_HALT", "External_Pin_4",
 "External_Pin_5", "External_Pin_6", "External_Pin_7",
 "DMA_Channel_0", "DMA_Channel_1",
 "DMA_Channel_2", "DMA_Channel_3",
 "MCSP_0_Transmit", "MCSP_0_Receive",
 "MCSP_1_Transmit", "MCSP_2_Receive",
 "MCSP_2_Transmit", "MCSP_2_Receive"

Example: `bios.HWI_INT4.interruptSource =
 "External_Pin_4";`

- ❑ **interrupt selection number.** The source number associated with an interrupt. This property overrides the interrupt source selection, and should be used if your interrupt source is not listed as an option for the previous property. This value is used to program the interrupt multiplexer registers or the interrupt selector. You can use the HWI_eventMap API to change this property at run-time. To use this property with the C64x+ event combiner, see Section 2.7, *ECM Module*.

Tconf Name: interruptSelectionNumber

Type: Int

Example: `bios.HWI_INT4.interruptSelectionNumber=4;`

- ❑ **function.** The function to execute. Interrupt routines that use the dispatcher can be written completely in C or any combination of assembly and C but must not call the HWI_enter/HWI_exit macro pair. Interrupt routines that don't use the dispatcher must be written at least partially in assembly language. Within an HWI function that does not use the dispatcher, the HWI_enter assembly macro must be called prior to any DSP/BIOS API calls that affect other DSP/BIOS objects, such as posting a SWI or a semaphore. HWI functions can

post SWIs, but they do not run until your HWI function (or the dispatcher) calls the HWI_exit assembly macro, which must be the last statement in any HWI function that calls HWI_enter.

Tconf Name: `fxn` Type: Extern

Example: `bios.HWI_INT4.fxn = prog.extern("myHWI", "asm");`

- ❑ **monitor.** If set to anything other than Nothing, an STS object is created for this HWI that is passed the specified value on every invocation of the HWI function. The STS update occurs just before entering the HWI routine.

Be aware that when the monitor property is enabled for a particular HWI object, a code preamble is inserted into the HWI routine to make this monitoring possible. The overhead for monitoring is 20 to 30 instructions per interrupt, per HWI object monitored. Leaving this instrumentation turned on after debugging is not recommended, since HWI processing is the most time-critical part of the system.

Options: "Nothing", "Data Value", "Stack Pointer", "Top of SW Stack", "A0" ... "A15", "B0" ... "B15"

Example: `bios.HWI_INT4.monitor = "Nothing";`

- ❑ **addr.** If the monitor property above is set to Data Address, this property lets you specify a data memory address to be read; the word-sized value is read and passed to the STS object associated with this HWI object.

Tconf Name: `addr` Type: Arg

Example: `bios.HWI_INT4.addr = 0x00000000;`

- ❑ **type.** The type of the value to be monitored: unsigned or signed. Signed quantities are sign extended when loaded into the accumulator; unsigned quantities are treated as word-sized positive values.

Tconf Name: `dataType` Type: EnumString

Options: "signed", "unsigned"

Example: `bios.HWI_INT4.dataType = "signed";`

- ❑ **operation.** The operation to be performed on the value monitored. You can choose one of several STS operations.

Tconf Name: `operation` Type: EnumString

Options: "STS_add(*addr)", "STS_delta(*addr)", "STS_add(-*addr)", "STS_delta(-*addr)", "STS_add(|*addr|)", "STS_delta(|*addr|)"

Example: `bios.HWI_INT4.operation = "STS_add(*addr)";`

- Use Dispatcher.** A check box that controls whether the HWI dispatcher is used. The HWI dispatcher cannot be used for the non-maskable interrupt (NMI) service routine.

Tconf Name: useDispatcher Type: Bool

Example: `bios.HWI_INT4.useDispatcher = false;`
- Arg.** This argument is passed to the function as its only parameter. You can use either a literal integer or a symbol defined by the application. This property is available only when using the HWI dispatcher.

Tconf Name: arg Type: Arg

Example: `bios.HWI_INT4.arg = 3;`
- Interrupt Mask.** Specifies which interrupts the dispatcher should disable before calling the function. This property is available only when using the HWI dispatcher.

 - The "self" option causes the dispatcher to disable only the current interrupt.
 - The "all" option disables all interrupts.
 - The "none" option disables no interrupts.
 - The "bitmask" option causes the interruptBitMask property to be used to specify which interrupts to disable.

Tconf Name: interruptMask Type: EnumString

Options: "self", "all", "none", "bitmask"

Example: `bios.HWI_INT4.interruptMask = "self";`
- Interrupt Bit Mask.** An integer property that is writable when the interrupt mask is set to "bitmask". This should be a hexadecimal integer bitmask specifying the interrupts to disable.

Tconf Name: interruptBitMask Type: Numeric

Example: `bios.HWI_INT4.interruptBitMask = 0x0010;`

Options: "self", "all", "none", "bitmask"
- Don't modify cache control.** (Not used for C64x+) A check box that chooses between not modifying the cache at all or enabling the individual drop-down menus for program and data cache control masks. This property is available only when using the HWI dispatcher. This property and the two that follow are not used for C64x+ because the HWI dispatcher does not perform cache control for C64x+.

Tconf Name: cacheControl Type: Bool

Example: `bios.HWI_INT4.cacheControl = true;`

Name	Default Interrupt Source
HWI_INT7	INT7
HWI_INT8	INT8
HWI_INT9	INT9
HWI_INT10	INT10
HWI_INT11	INT11
HWI_INT12	INT12
HWI_INT13	INT13
HWI_INT14	INT14
HWI_INT15	INT15

HWI_applyWugenMasks*Apply specified masks to WUGEN interrupt mask registers***C Interface****Syntax** HWI_applyWugenMasks(mask[]);**Parameters** Uint32 mask[]; /* array of masks to apply to WUGEN registers */**Return Value** Void**Reentrant** yes**Description** This function is available only for OMAP 2330/4330 devices.

HWI_applyWugenMasks applies the specified masks to the WUGEN interrupt mask registers. The WUGEN registers are the Wakeup Generator registers.

If a bit in a mask is enabled, the corresponding interrupt in the WUGEN will be blocked.

The mask[] array should contain the following masks in four integers:

- ❑ First mask consists of IRQ 0-31
- ❑ Second mask consists of IRQ 32-47
- ❑ Third mask consists of DMA requests
- ❑ Fourth mask consists of hpi access wake-up

For details about WUGEN registers, see literature item number SWPU090 (for OMAP 2430) and number SWPU100 (for OMAP 3430).

Constraints and Calling Context

- ❑ This function should be called with interrupts disabled. This ensures that when interrupts are re-enabled, the pending interrupt with the highest priority is executed first.

See Also

HWI_getWugenMasks
 HWI_disableWugen
 HWI_enableWugen
 HWI_ierToWugenMasks

HWI_disable*Disable hardware interrupts***C Interface****Syntax** `oldCSR = HWI_disable();`**Parameters** `Void`**Return Value** `Uns oldCSR;`**Reentrant** `yes`**Description**

HWI_disable disables hardware interrupts by clearing the GIE bit in the Control Status Register (CSR). Call HWI_disable before a portion of a function that needs to run without interruption. When critical processing is complete, call HWI_restore or HWI_enable to reenale hardware interrupts.

Interrupts that occur while interrupts are disabled are postponed until interrupts are reenaled. However, if the same type of interrupt occurs several times while interrupts are disabled, the interrupt's function is executed only once when interrupts are reenaled.

A context switch can occur when calling HWI_enable or HWI_restore if an enabled interrupt occurred while interrupts are disabled.

HWI_disable may be called from main(). However, since HWI interrupts are already disabled in main(), such a call has no effect.

Example

```
old = HWI_disable();
    'do some critical operation'
HWI_restore(old);
```

See Also

HWI_enable
HWI_restore
SWI_disable
SWI_enable

HWI_disableWugen*Disable an event in the WUGEN interrupt mask registers***C Interface****Syntax** HWI_disableWugen(eventid);**Parameters** Int eventid; /* event number associated with the interrupt */**Return Value** Void**Reentrant** yes**Description** This function is available only for OMAP 2330/4330 devices.

HWI_disableWugen disables the interrupt source you specify. It sets the appropriate bit in the WUGEN registers.

Use the eventid parameter to specify an event using the event number associated with an interrupt.

Constraints and Calling Context None**See Also** HWI_enableWugen
HWI_applyWugenMasks
HWI_getWugenMasks
HWI_ierToWugenMasks

HWI_dispatchPlug*Plug the HWI dispatcher***C Interface****Syntax** HWI_dispatchPlug(vecid, fxn, dmachan, attrs);**Parameters**
Int vecid; /* interrupt id */
Fxn fxn; /* pointer to HWI function */
Int dmachan; /* DMA channel to use for performing plug */
HWI_Attrs *attrs /*pointer to HWI dispatcher attributes */**Return Value** Void**Reentrant** yes**Description** HWI_dispatchPlug fills the HWI dispatcher table with the function specified by the fxn parameter and the attributes specified by the attrs parameter.

If the specified interrupt (vecid) was not configured to be dispatched (via Tconf or Gconf configuration), then HWI_dispatchPlug writes an Interrupt Service Fetch Packet (ISFP) into the Interrupt Service Table (IST), at the address corresponding to vecid. The op-codes written in the ISFP create a branch to the HWI dispatcher. If the interrupt was previously configured to be dispatched, then the HWI dispatcher table is still updated using the fxn and attrs parameters, but a new ISFP is not written to the IST.

The dmachan is needed only for 'C6x0x devices if the IST is located in internal program RAM. Since the 'C6x0x CPU cannot write to internal program RAM, it needs to use DMA to write to IPRAM. This is not the case for 'C6x1x and 'C64x devices.

For 'C6x0x devices, if the IST is stored in external RAM, a DMA (Direct Memory Access) channel is not necessary and the dmachan parameter can be set to -1 to cause a CPU copy instead. A DMA channel can still be used to plug a vector in external RAM. A DMA channel must be used to plug a vector in internal program RAM.

For 'C6x11 and 'C64x devices, you may set the dmachan parameter to -1 to specify a CPU copy, regardless of where the IST is stored. Alternately, you may specify the DMA channel.

For 'C64x+ devices, the dmachan is ignored. However, there is a case where DMA is automatically used by HWI_dispatchPlug on 'C64x+ devices. If the vector table location is L1P SRAM, then IDMA1 is used for the vector copy. In this case, HWI_dispatchPlug waits for any activity to finish on IDMA1 before using it. It then waits for the vector copy DMA

activity to complete before returning. Since the stack is used for the source location of the DMA copy, HWI_dispatchPlug must be called while a stack from internal memory (L1 or L2) is active (and only when the vector table is in L1P SRAM).

If you use the `dmachan` parameter to specify a DMA channel, HWI_dispatchPlug assumes that the DMA channel is available for use, and stops the DMA channel before programming it. If the DMA channel is shared with other code, use a semaphore or other DSP/BIOS signaling method to provide mutual exclusion before calling HWI_dispatchPlug, C62_plug, or C64_plug.

HWI_dispatchPlug does not enable the interrupt. Use C62_enableIER or C64_enableIER to enable specific interrupts.

If `attrs` is NULL, the HWI's dispatcher properties are assigned a default set of attributes. Otherwise, the HWI's dispatcher properties are specified by a structure of type HWI_Attrs defined as follows.

```
typedef struct HWI_Attrs {
    Uns    intrMask; /* IER bitmask, 1="self" (default) */
    Uns    ccMask    /* CSR CC bitmask, 1="leave alone" */
    Arg    arg;      /* fxn arg (default = 0)*/
} HWI_Attrs;
```

The `intrMask` element is a bitmask that specifies which interrupts to mask off while executing the HWI. Bit positions correspond to those of the IER. A value of 1 indicates an interrupt is being plugged. The default value is 1.

For most C6000 platforms, the `ccMask` element is a bitfield that corresponds to the cache control bitfield in the CSR. A value of 1 indicates that the HWI dispatcher should not modify the cache control settings at all. The default value is 1.

For C64x+ devices, the `ccMask` element is ignored, since no cache handling occurs within the HWI dispatcher.

The default values are defined as follows:

```
HWI_Attrs HWI_ATTRS = {
    1,    /* interrupt mask (1 => self) */
    1,    /* CSR bit mask (1 => leave alone) */
    0     /* argument to ISR */
};
```

The `arg` element is a generic argument that is passed to the plugged function as its only parameter. The default value is 0.

- ❑ `vecid` must be a valid interrupt ID in the range of 0-15.

Constraints and Calling Context

- ❑ `dmachan` must be 0, 1, 2, or 3 if the IST is in internal program memory and the device is a 'C6x0x.

See Also

`HWI_enable`
`HWI_restore`
`C62_plug`
`C64_plug`
`HWI_eventMap`
`SWI_disable`
`SWI_enable`

HWI_enable	<i>Enable interrupts</i>
C Interface	
Syntax	HWI_enable();
Parameters	Void
Return Value	Void
Reentrant	yes
Description	<p>HWI_enable enables hardware interrupts by setting the GIE bit in the Control Status Register (CSR).</p> <p>Hardware interrupts are enabled unless a call to HWI_disable disables them. DSP/BIOS enables hardware interrupts after the program's main() function runs. Your main() function can enable individual interrupt mask bits, but it should not call HWI_enable to globally enable interrupts.</p> <p>Interrupts that occur while interrupts are disabled are postponed until interrupts are reenabled. However, if the same type of interrupt occurs several times while interrupts are disabled, the interrupt's function is executed only once when interrupts are reenabled. A context switch can occur when calling HWI_enable/HWI_restore if an enabled interrupt occurs while interrupts are disabled.</p> <p>Any call to HWI_enable enables interrupts, even if HWI_disable has been called several times.</p>
Constraints and Calling Context	<ul style="list-style-type: none"> ❑ HWI_enable cannot be called from the program's main() function.
Example	<pre>HWI_disable(); "critical processing takes place" HWI_enable(); "non-critical processing"</pre>
See Also	<p>HWI_disable HWI_restore SWI_disable SWI_enable</p>

HWI_enableWugen*Enable an event in the WUGEN interrupt mask registers***C Interface****Syntax** HWI_enableWugen(eventid);**Parameters** Int eventid; /* event number associated with the interrupt */**Return Value** Void**Reentrant** yes**Description** This function is available only for OMAP 2330/4330 devices.

HWI_enableWugen enables the interrupt source you specify. It clears the appropriate bit in the WUGEN registers.

Use the eventid parameter to specify an event using the event number associated with an interrupt.

Constraints and Calling Context None**See Also** HWI_disableWugen
HWI_applyWugenMasks
HWI_getWugenMasks
HWI_ierToWugenMasks

HWI_enter*Hardware ISR prolog***C Interface****Syntax** none**Parameters** none**Return Value** none**Assembly Interface****Syntax** HWI_enter AMASK, BMASK, CMASK, IEMASK, CCMASK**Preconditions** interrupts are globally disabled (that is, GIE == 0)**Postconditions**
amr = 0
GIE = 1
dp (b14) = .bss**Modifies** a0, a1, a2, a3, amr, b0, b1, b2, b3, b14, b15, csr, ier**Reentrant** yes**Description** HWI_enter is an API (assembly macro) used to save the appropriate context for a DSP/BIOS hardware interrupt (HWI).

The arguments to HWI_enter are bitmasks that define the set of registers to be saved and bitmasks that define which interrupts are to be masked during the execution of the HWI.

HWI_enter is used by HWIs that are user-dispatched, as opposed to HWIs that are handled by the HWI dispatcher. HWI_enter must not be issued by HWIs that are handled by the HWI dispatcher.

If the HWI dispatcher is not used by an HWI object, HWI_enter must be used in the HWI before any DSP/BIOS API calls that could trigger other DSP/BIOS objects, such as posting a SWI or semaphore. HWI_enter is used in tandem with HWI_exit to ensure that the DSP/BIOS SWI or TSK manager is called at the appropriate time. Normally, HWI_enter and HWI_exit must surround all statements in any DSP/BIOS assembly language HWIs that call C functions.

Common masks are defined in the device-specific assembly macro file c6x.h62. This file defines C6X_ATEMPs, C6X_BTEMPs, and C6X_CTEMPs. These masks specify the C temporary registers and should be used when saving the context for an HWI that is written in C.

The c62.h62 and c64.h64 files define deprecated C62_ and C64_ masks for backward compatibility. Code that uses the old C62_ABTEMPS mask will compile correctly, but will generate a warning.

The input parameter CCMASK specifies the program cache control (PCC) and data cache control (DCC) codes you need to use in the context of the HWI. Some typical values for this mask are defined in c6x.h62. The PCC code and DCC code can be ORed together (for example, C6X_PCC_ENABLE | C6X_PCC_DISABLE) to generate CCMASK.

The following parameters and constants are available for HWI_enter. These match the parameters used for HWI_exit, except that IEMASK corresponds to IERRESTOREMASK.

- ❑ **AMASK, BMASK.** Register mask specifying A, B registers to save
 - **C6X_ATEMPS, C6X_BTEMPS.** Masks to use if calling a C function from within an HWI; defined in c6x.h62.
 - **C6X_A0 to C6X_A15, C6X_B0 to C6X_B15.** For 'C62x and 'C67x platforms. Individual register constants; can be ORed together for more precise control than using C6X_ATEMPS and C6X_BTEMPS.
 - **C6X_A0 to C6X_A31, C6X_B0 to C6X_B31.** For 'C64x, 'C64x+, and 'C67+ platforms. Individual register constants; can be ORed together for more precise control than using C6X_ATEMPS and C6X_BTEMPS.
- ❑ **CMASK.** Register mask specifying control registers to save
 - **C6X_CTEMPS.** Mask to use if calling a C function from within an HWI. Defined in c6x.h62.
 - **C6X_AMR, C6X_CSR, C6X_IER, C6X_IST, C6X_IRP, C6X_NRP.** Individual register constants; can be ORed together for more precise control than using C6X_CTEMPS.
- ❑ **IEMASK.** Bit mask specifying IER bits to disable. Any bit mask can be specified, with bits having a one-to-one correspondence with the assigned values in the IER. The following convenience macros can be ORed together to specify the mask of interrupts to disable
 - **C6X_NMIE**
 - **C6X_IE4 to C6X_IE15**

- ❑ **CCMASK.** Bit mask specifying cache control bits in the CSR. The following macros directly correspond to the possible modes of the program cache specified in the CSR. (Although the HWI dispatcher does not support cache control for C64x+ devices, the CCMASK is used for C64x+ devices with HWI_enter.)

- **C6X_PCC_DISABLE**

- **C6X_PCC_ENABLE**

- **C6X_PCC_FREEZE**

- **C6X_PCC_BYPASS**

Note that if HWI_enter modifies CSR bits, those changes are lost when interrupt processing is complete. HWI_exit restores the CSR to its value when interrupt processing began no matter what the value of CCMASK.

Constraints and Calling Context

- ❑ This API should not be used in the NMI HWI function.
- ❑ This API must not be called if the HWI object that runs this function uses the HWI dispatcher.
- ❑ This API cannot be called from the program's main() function.
- ❑ This API cannot be called from a SWI, TSK, or IDL function.
- ❑ This API cannot be called from a CLK function.
- ❑ Unless the HWI dispatcher is used, this API must be called within any hardware interrupt function (except NMI's HWI function) before the first operation in an HWI that uses any DSP/BIOS API calls that might post or affect a SWI or semaphore. Such functions must be written in assembly language. Alternatively, the HWI dispatcher can be used instead of this API, allowing the function to be written completely in C and allowing you to reduce code size.
- ❑ If an interrupt function calls HWI_enter, it must end by calling HWI_exit.
- ❑ Do not use the interrupt keyword or the INTERRUPT pragma in C functions that run in the context of an HWI.
- ❑

Example

CLK_isr:

```
HWI_enter C6X_ATEMPS, C6X_BTEMPS, C6X_CTEMPS, 0XF0, \
C6X_PCC_ENABLE|C6X_PCC_DISABLE
PRD_tick
HWI_exit C6X_ATEMPS, C6X_BTEMPS, C6X_CTEMPS, 0XF0, \
C6X_PCC_ENABLE|C6X_PCC_DISABLE
```

See Also

HWI_exit

HWI_eventMap*Assign interrupt selection number to HWI object***C Interface****Syntax** HWI_eventMap(vectID, eventID);**Parameters** Int vectID; /* number of HWI object (indexed from 0) */
Int eventID; /* event or interrupt selection number */**Return Value** Void**Reentrant** yes**Description** This function is available only for C6000 devices.

HWI_eventMap associates an interrupt source selection number (or an eventID) to a specific HWI vector ID. This causes the specified interrupt event to invoke the specified HWI object.

This API allows you to remap an interrupt source to a particular HWI object at run-time. To statically configure the same thing, use the interruptSelectionNumber or interruptSource HWI instance property.

The vectID parameter is the Hardware Vector number. For example, HWI_INT4 has a vectID of 4, and HWI_INT5 has a vectID of 5.

The eventID parameter should match the event ID. For C64x+ platforms, these events are listed in the "System Event Mapping" table in the *TMS320C64x+ DSP Megamodule Reference Guide* (SPRU871). Device-specific data manuals contain additional information about event numbers. For other C6000 devices, you can select the interrupt source you want in the DSP/BIOS Configuration Tool to see its corresponding interrupt selection number.

This API is protected by calls to HWI_disable/HWI_restore, so it can be called from any thread, including an HWI thread.

Constraints and Calling Context None**Example**

```
// maps interrupt selection number 1 to HWI object 14
HWI_eventMap(14, 1);
```

See Also HWI_dispatchPlug
C62_plug
C64_plug

HWI_exit*Hardware ISR epilog***C Interface**

Syntax	none
Parameters	none
Return Value	none

Assembly Interface

Syntax	HWI_exit AMASK BMASK CMASK IERRESTOREMASK CCMASK
Preconditions	b14 = pointer to the start of .bss amr = 0
Postconditions	none
Modifies	a0, a1, amr, b0, b1, b2, b3, b14, b15, csr, ier, irp

Reentrant yes

Description HWI_exit is an API (assembly macro) which is used to restore the context that existed before a DSP/BIOS hardware interrupt (HWI) was invoked.

HWI_exit is used by HWIs that are user-dispatched, as opposed to HWIs that are handled by the HWI dispatcher. HWI_exit must not be issued by HWIs that are handled by the HWI dispatcher.

If the HWI dispatcher is not used by an HWI object, HWI_exit must be the last statement in an HWI that uses DSP/BIOS API calls which could trigger other DSP/BIOS objects, such as posting a SWI or semaphore.

HWI_exit restores the registers specified by AMASK, BMASK, and CMASK. These masks are used to specify the set of registers that were saved by HWI_enter.

HWI_enter and HWI_exit must surround all statements in any DSP/BIOS assembly language HWIs that call C functions only for HWIs that are not dispatched by the HWI dispatcher.

HWI_exit calls the DSP/BIOS SWI manager if DSP/BIOS itself is not in the middle of updating critical data structures, or if no currently interrupted HWI is also in a HWI_enter/HWI_exit region. The DSP/BIOS SWI manager services all pending SWI handlers (functions).

Of the interrupts in IERRESTOREMASK, HWI_exit only restores those enabled upon entering the HWI. HWI_exit does not affect the status of interrupt bits that are not in IERRESTOREMASK.

- ❑ If upon exiting an HWI you do not wish to restore an interrupt that was disabled with HWI_enter, do not set that interrupt bit in the IERRESTOREMASK in HWI_exit.
- ❑ If upon exiting an HWI you wish to enable an interrupt that was disabled upon entering the HWI, set the corresponding bit in IER register. (Including a bit in IER in the IERRESTOREMASK of HWI_exit does not enable the interrupt if it was disabled when the HWI was entered.)

For a list of parameters and constants available for use with HWI_exit, see the description of HWI_enter. In addition, see the c6x.h62 file.

To be symmetrical, even though CCMASK has no effect on HWI_exit, you should use the same CCMASK that is used in HWI_enter for HWI_exit. HWI_exit restores the CSR to its value when interrupt processing began no matter what the value of CCMASK.

Constraints and Calling Context

- ❑ This API should not be used for the NMI HWI function.
- ❑ This API must not be called if the HWI object that runs the function uses the HWI dispatcher.
- ❑ If the HWI dispatcher is not used, this API must be the last operation in an HWI that uses any DSP/BIOS API calls that might post or affect a SWI or semaphore. The HWI dispatcher can be used instead of this API, allowing the function to be written completely in C and allowing you to reduce code size.
- ❑ The AMASK, BMASK, and CMASK parameters must match the corresponding parameters used for HWI_enter.
- ❑ This API cannot be called from the program's main() function.
- ❑ This API cannot be called from a SWI, TSK, or IDL function.
- ❑ This API cannot be called from a CLK function.

Example

CLK_isr:

```
HWI_enter C6X_ATEMPS, C6X_BTEMPS, C6X_CTEMPS, 0XF0, \
C6X_PCC_ENABLE | C6X_PCC_DISABLE
PRD_tick
HWI_exit C6X_ATEMPS, C6X_BTEMPS, C6X_CTEMPS, 0XF0, \
C6X_PCC_ENABLE | C6X_PCC_DISABLE
```

See Also

HWI_enter

HWI_getWugenMasks*Get masks from WUGEN interrupt mask registers***C Interface****Syntax** HWI_getWugenMasks(mask[]);**Parameters** Uint32 mask[]; /* array of WUGEN masks */**Return Value** Void**Reentrant** yes

Description This function is available only for OMAP 2330/4330 devices.

HWI_getWugenMasks gets the WUGEN interrupt mask registers.

If a bit in a mask is enabled, the corresponding interrupt in the WUGEN is blocked.

After this function returns, the mask[] array will contain the following masks in four integers:

- First mask consists of IRQ 0-31
- Second mask consists of IRQ 32-47
- Third mask consists of DMA requests
- Fourth mask consists of hpi access wake-up

Constraints and Calling Context None

See Also HWI_disableWugen
 HWI_enableWugen
 HWI_applyWugenMasks
 HWI_ierToWugenMasks

HWI_ierToWugenMasks*Compute WUGEN masks from IER register***C Interface****Syntax** HWI_ierToWugenMasks(mask[]);**Parameters** Uint32 mask[]; /* array of WUGEN masks */**Return Value** Void**Reentrant** yes**Description** This function is available only for OMAP 2330/4330 devices.

HWI_ierToWugenMasks computes the WUGEN masks needed to allow the interrupts set in the IER register to propagate through the WUGEN.

This function does not enable external DMA requests that are routed directly to the EDMA but are not set in the IER registers. In fact, these will be blocked in the masks returned by this function. To enable such DMA requests as a wakeup event, you must set the corresponding bits in the WUGEN masks returned by this function, before using the masks in a call to HWI_applyWugenMasks().

The mask[] array contains the following masks in four integers:

- ❑ First mask consists of IRQ 0-31
- ❑ Second mask consists of IRQ 32-47
- ❑ Third mask consists of DMA requests
- ❑ Fourth mask consists of hpi access wake-up

This function does not set any WUGEN registers, it simply computes the mask[] values. To apply the computed WUGEN masks, call HWI_applyWugenMasks with the mask[] array values returned by HWI_ierToWugenMasks.

Constraints and Calling Context None**See Also** HWI_disableWugen
HWI_enableWugen
HWI_applyWugenMasks
HWI_getWugenMasks

HWI_isHWI

Check to see if called in the context of an HWI

C Interface**Syntax**

```
result = HWI_isHWI(Void);
```

Parameters

Void

Return Value

Bool result; */* TRUE if in HWI context, FALSE otherwise */*

Reentrant

yes

Description

This macro returns TRUE when it is called within the context of an HWI or CLK function. It also returns TRUE when called from main(). This macro returns FALSE in all other contexts.

In previous versions of DSP/BIOS, calling HWI_isHWI() from main() resulted in TRUE. This is no longer the case; main() is identified as part of the TSK context.

See Also

SWI_isSWI
TSK_isTSK

HWI_restore*Restore global interrupt enable state***C Interface****Syntax** HWI_restore(oldCSR);**Parameters** Uns oldCSR;**Returns** Void**Reentrant** yes**Description**

HWI_restore sets the global interrupt enable (GIE) bit in the Control Status Register (CSR) using the least significant bit of the oldCSR parameter. If bit 0 is 0, the GIE bit is not modified. If bit 0 is 1, the GIE bit is set to 1, which enables interrupts.

When you call HWI_disable, the previous contents of the register are returned. You can use this returned value with HWI_restore.

A context switch may occur when calling HWI_restore if HWI_restore reenables interrupts and if a higher-priority HWI occurred while interrupts were disabled.

HWI_restore may be called from main(). However, since HWI_enable cannot be called from main(), interrupts are always disabled in main(), and a call to HWI_restore has no effect.

Constraints and Calling Context

- ❑ HWI_restore must be called with interrupts disabled. The parameter passed to HWI_restore must be the value returned by HWI_disable.

Example

```
oldCSR = HWI_disable(); /* disable interrupts */
    'do some critical operation'
HWI_restore(oldCSR);
    /* re-enable interrupts if they
       were enabled at the start of the
       critical section */
```

See Also

HWI_enable
HWI_disable

2.13 IDL Module

The IDL module is the idle thread manager.

Functions

- IDL_run. Make one pass through idle functions.

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the IDL Manager Properties and IDL Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default
OBJMEMSEG	Reference	prog.get("IDRAM")
AUTOCALCULATE	Bool	true
LOOPINSTCOUNT	Int32	1000

Instance Configuration Parameters

Name	Type	Default
comment	String	"<add comments here>"
fxn	Extern	prog.extern("FXN_F_nop")
calibration	Bool	true
order	Int16	0

Description

The IDL module manages the lowest-level threads in the application. In addition to user-created functions, the IDL module executes DSP/BIOS functions that handle host communication and CPU load calculation.

There are four kinds of threads that can be executed by DSP/BIOS programs: hardware interrupts (HWI Module), software interrupts (SWI Module), tasks (TSK Module), and background threads (IDL module). Background threads have the lowest priority, and execute only if no hardware interrupts, software interrupts, or tasks need to run.

An application's main() function must return before any DSP/BIOS threads can run. After the return, DSP/BIOS runs the idle loop. Once an application is in this loop, HWI hardware interrupts, SWI software interrupts, PRD periodic functions, TSK task functions, and IDL background threads are all enabled.

The functions for IDL objects registered with the configuration are run in sequence each time the idle loop runs. IDL functions are called from the

IDL context. IDL functions can be written in C or assembly and must follow the C calling conventions described in the compiler manual.

When RTA is enabled (see page 2–135), an application contains an IDL_cpuLoad object, which runs a function that provides data about the CPU utilization of the application. In addition, the LNK_dataPump function handles host I/O in the background, and the RTA_dispatch function handles run-time analysis communication.

The IDL Function Manager allows you to insert additional functions that are executed in a loop whenever no other processing (such as HWIs or higher-priority tasks) is required.

IDL Manager Properties

The following global properties can be set for the IDL module in the IDL Manager Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- Object Memory.** The memory segment that contains the IDL objects.
Tconf Name: OBJMEMSEG Type: Reference
Example: `bios.IDL.OBJMEMSEG = prog.get("myMEM");`
- Auto calculate idle loop instruction count.** When this property is set to true, the program runs the IDL functions one or more times at system startup to get an approximate value for the idle loop instruction count. This value, saved in the global variable CLK_D_idletime, is read by the host and used in the CPU load calculation. By default, the instruction count includes all IDL functions, not just LNK_dataPump, RTA_dispatcher, and IDL_cpuLoad. You can remove an IDL function from the calculation by setting the "Include in CPU load calibration" property for an IDL object to false.

Remember that functions included in the calibration are run before the main() function runs. These functions should not access data structures that are not initialized before the main() function runs. In particular, functions that perform any of the following actions should not be included in the idle loop calibration:

- enabling hardware interrupts or the SWI or TSK schedulers
- using CLK APIs to get the time
- accessing PIP objects
- blocking tasks
- creating dynamic objects

Tconf Name: AUTOCALCULATE Type: Bool

Example: `bios.IDL.AUTOCALCULATE = true;`

- ❑ **Idle Loop Instruction Count.** This is the number of instruction cycles required to perform the IDL loop and the default IDL functions (LNK_dataPump, RTA_dispatcher, and IDL_cpuLoad) that communicate with the host. Since these functions are performed whenever no other processing is needed, background processing is subtracted from the CPU load before it is displayed.

Tconf Name: LOOPINSTCOUNT Type: Int32

Example: `bios.IDL.LOOPINSTCOUNT = 1000;`

IDL Object Properties

Each idle function runs to completion before another idle function can run. It is important, therefore, to ensure that each idle function completes (that is, returns) in a timely manner.

To create an IDL object in a configuration script, use the following syntax. The Tconf examples assume the object is created as shown here.

```
var myIdl = bios.IDL.create("myIdl");
```

The following properties can be set for an IDL object:

- ❑ **comment.** Type a comment to identify this IDL object.
Tconf Name: comment Type: String
Example: `myIdl.comment = "IDL function";`
- ❑ **function.** The function to execute. If this function is written in C and you use the DSP/BIOS Configuration Tool, use a leading underscore before the C function name. (The DSP/BIOS Configuration Tool generates assembly code, which must use leading underscores when referencing C functions or labels.) If you use Tconf, do not add an underscore before the function name; Tconf adds the underscore to call a C function from assembly internally.
Tconf Name: fxn Type: Extern
Example: `myIdl.fxn = prog.extern("myIDL");`
- ❑ **Include in CPU load calibration.** You can remove an individual IDL function from the CPU load calculation by setting this property to false. The CPU load calibration is performed only if the "Auto calculate idle loop instruction count" property is true in the IDL Manager Properties. You should remove a function from the calculation if it blocks or depends on variables or structures that are not initialized until the main() function runs.
Tconf Name: calibration Type: Bool
Example: `myIdl.calibration = true;`
- ❑ **order.** Set this property for all IDL objects so that the numbers match the sequence in which IDL functions should be executed.
Tconf Name: order Type: Int16
Example: `myIdl.order = 2;`

IDL_run*Make one pass through idle functions***C Interface****Syntax** IDL_run();**Parameters** Void**Return Value** Void**Description**

IDL_run makes one pass through the list of configured IDL objects, calling one function after the next. IDL_run returns after all IDL functions have been executed one time. IDL_run is not used by most DSP/BIOS applications since the IDL functions are executed in a loop when the application returns from main. IDL_run is provided to allow easy integration of the real-time analysis features of DSP/BIOS (for example, LOG and STS) into existing applications.

IDL_run must be called to transfer the real-time analysis data to and from the host computer. Though not required, this is usually done during idle time when no HWI or SWI threads are running.

Note:

BIOS_init and BIOS_start must be called before IDL_run to ensure that DSP/BIOS has been initialized. For example, the DSP/BIOS boot file contains the following system calls around the call to main:

```
BIOS_init(); /* initialize DSP/BIOS */
main();
BIOS_start() /* start DSP/BIOS */
IDL_loop(); /* call IDL_run in an infinite loop */
```

**Constraints and
Calling Context**

- ❑ IDL_run cannot be called by an HWI or SWI function.

2.14 LCK Module

The LCK module is the resource lock manager.

Functions

- ❑ LCK_create. Create a resource lock
- ❑ LCK_delete. Delete a resource lock
- ❑ LCK_pend. Acquire ownership of a resource lock
- ❑ LCK_post. Relinquish ownership of a resource lock

Constants, Types, and Structures

```
typedef struct LCK_Obj *LCK_Handle; /* resource handle */

/* lock object */
typedef struct LCK_Attrs LCK_Attrs;

struct LCK_Attrs {
    Int dummy;
};

LCK_Attrs LCK_ATTRS = {0}; /* default attribute values */
```

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the LCK Manager Properties and LCK Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameter.

Name	Type	Default
OBJMEMSEG	Reference	prog.get("IDRAM")

Description

The lock module makes available a set of functions that manipulate lock objects accessed through handles of type LCK_Handle. Each lock implicitly corresponds to a shared global resource, and is used to arbitrate access to this resource among several competing tasks.

The LCK module contains a pair of functions for acquiring and relinquishing ownership of resource locks on a per-task basis. These functions are used to bracket sections of code requiring mutually exclusive access to a particular resource.

LCK lock objects are semaphores that potentially cause the current task to suspend execution when acquiring a lock.

LCK Manager Properties

The following global property can be set for the LCK module on the LCK Manager Properties dialog in the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **Object Memory.** The memory segment that contains the LCK objects.

Tconf Name: OBJMEMSEG

Type: Reference

Example: `bios.LCK.OBJMEMSEG = prog.get("myMEM");`

LCK Object Properties

To create a LCK object in a configuration script, use the following syntax. The Tconf examples that follow assume the object has been created as shown here.

```
var myLck = bios.LCK.create("myLck");
```

The following property can be set for a LCK object in the LCK Object Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **comment.** Type a comment to identify this LCK object.

Tconf Name: comment

Type: String

Example: `myLck.comment = "LCK object";`

LCK_create*Create a resource lock***C Interface**

Syntax lock = LCK_create(attrs);

Parameters LCK_Attrs attrs; /* pointer to lock attributes */

Return Value LCK_Handle lock; /* handle for new lock object */

Description

LCK_create creates a new lock object and returns its handle. The lock has no current owner and its corresponding resource is available for acquisition through LCK_pend.

If attrs is NULL, the new lock is assigned a default set of attributes. Otherwise the lock's attributes are specified through a structure of type LCK_Attrs.

Note:

At present, no attributes are supported for lock objects.

All default attribute values are contained in the constant LCK_ATTRS, which can be assigned to a variable of type LCK_Attrs prior to calling LCK_create.

LCK_create calls MEM_alloc to dynamically create the object's data structure. MEM_alloc must acquire a lock to the memory before proceeding. If another thread already holds a lock to the memory, then there is a context switch. The segment from which the object is allocated is described by the DSP/BIOS objects property in the MEM Module, page 2–243.

Constraints and Calling Context

- ❑ LCK_create cannot be called from a SWI or HWI.
- ❑ You can reduce the size of your application program by creating objects with Tconf rather than using the XXX_create functions.

See Also

LCK_delete
LCK_pend
LCK_post

LCK_delete*Delete a resource lock***C Interface**

Syntax LCK_delete(lock);

Parameters LCK_Handle lock; /* lock handle */

Return Value Void

Description

LCK_delete uses MEM_free to free the lock referenced by lock.

LCK_delete calls MEM_free to delete the LCK object. MEM_free must acquire a lock to the memory before proceeding. If another task already holds a lock to the memory, then there is a context switch.

Constraints and Calling Context

- ❑ LCK_delete cannot be called from a SWI or HWI.
- ❑ No task should be awaiting ownership of the lock.
- ❑ No check is performed to prevent LCK_delete from being used on a statically-created object. If a program attempts to delete a lock object that was created using Tconf, SYS_error is called.

See Also

LCK_create
LCK_pend
LCK_post

LCK_pend*Acquire ownership of a resource lock***C Interface**

Syntax status = LCK_pend(lock, timeout);

Parameters LCK_Handle lock; /* lock handle */
 Uns timeout; /* return after this many system clock ticks */

Return Value Bool status; /* TRUE if successful, FALSE if timeout */

Description

LCK_pend acquires ownership of lock, which grants the current task exclusive access to the corresponding resource. If lock is already owned by another task, LCK_pend suspends execution of the current task until the resource becomes available.

The task owning lock can call LCK_pend any number of times without risk of blocking, although relinquishing ownership of the lock requires a balancing number of calls to LCK_post.

LCK_pend results in a context switch if this LCK timeout is greater than 0 and the lock is already held by another thread.

LCK_pend returns TRUE if it successfully acquires ownership of lock, returns FALSE if a timeout occurs before it can acquire ownership. LCK_pend returns FALSE if it is called from the context of a SWI or HWI, even if the timeout is zero.

Note: RTS Functions Callable from TSK Threads Only

Many run-time support (RTS) functions use lock and unlock functions to prevent reentrancy. However, DSP/BIOS SWI and HWI threads cannot call LCK_pend and LCK_post. As a result, RTS functions that call LCK_pend or LCK_post *must not be called in the context of a SWI or HWI thread.*

To determine whether a particular RTS function uses LCK_pend or LCK_post, refer to the source code for that function shipped with Code Composer Studio. The following table lists some RTS functions that call LCK_pend and LCK_post in certain versions of Code Composer Studio:

fprintf	printf	vfprintf	sprintf
vprintf	vsprintf	clock	strftime
minit	malloc	realloc	free
calloc	rand	srand	getenv

The C++ new operator calls malloc, which in turn calls LCK_pend. As a result, the new operator cannot be used in the context of a SWI or HWI thread.

Constraints and Calling Context

- ❑ The lock must be a handle for a resource lock object created through a prior call to LCK_create.
- ❑ LCK_pend should not be called from a SWI or HWI thread.
- ❑ LCK_pend should not be called from main().

See Also

LCK_create
LCK_delete
LCK_post

LCK_post*Relinquish ownership of a resource LCK***C Interface**

Syntax	LCK_post(lock);
Parameters	LCK_Handle lock; /* lock handle */
Return Value	Void

Description

LCK_post relinquishes ownership of lock, and resumes execution of the first task (if any) awaiting availability of the corresponding resource. If the current task calls LCK_pend more than once with lock, ownership remains with the current task until LCK_post is called an equal number of times.

LCK_post results in a context switch if a higher priority thread is currently pending on the lock.

Constraints and Calling Context

- ❑ lock must be a handle for a resource lock object created through a prior call to LCK_create.
- ❑ LCK_post should not be called from a SWI or HWI thread.
- ❑ LCK_post should not be called from main().

See Also

LCK_create
LCK_delete
LCK_pend

2.15 LOG Module

The LOG module captures events in real time.

Functions

- LOG_disable. Disable the system log.
- LOG_enable. Enable the system log.
- LOG_error. Write a user error event to the system log.
- LOG_event. Append unformatted message to message log.
- LOG_event5. Append 5-argument unformatted message to log.
- LOG_message. Write a user message event to the system log.
- LOG_printf. Append formatted message to message log.
- LOG_printf4. Append 4-argument formatted message to log.
- LOG_reset. Reset the system log.

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the LOG Manager Properties and LOG Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default
OBJMEMSEG	Reference	prog.get("IDRAM")
TS	Bool	false

Instance Configuration Parameters

Name	Type	Default (Enum Options)
comment	String	"<add comments here>"
bufSeg	Reference	prog.get("IDRAM")
bufLen	EnumInt	64 (0, 8, 16, 32, 64, ..., 32768)
logType	EnumString	"circular" ("fixed")
dataType	EnumString	"printf" ("raw data")
format	String	"0x%x, 0x%x, 0x%x"

Description

The Event Log is used to capture events in real time while the target program executes. You can use the system log, or create user-defined logs. If the logtype is circular, the log buffer of size `buflen` contains the last `buflen` elements. If the logtype is fixed, the log buffer contains the first `buflen` elements.

The system log stores messages about system events for the types of log tracing you have enabled. See the TRC Module, page 2–473, for a list of events that can be traced in the system log.

You can add messages to user logs or the system log by using `LOG_printf` or `LOG_event`. To reduce execution time, log data is always formatted on the host.

`LOG_error` writes a user error event to the system log. This operation is not affected by any TRC trace bits; an error event is always written to the system log. `LOG_message` writes a user message event to the system log, provided that both `TRC_GBLHOST` and `TRC_GBLTARG` (the host and target trace bits, respectively) traces are enabled.

When a problem is detected on the target, it is valuable to put a message in the system log. This allows you to correlate the occurrence of the detected event with the other system events in time. `LOG_error` and `LOG_message` can be used for this purpose.

Log buffers are of a fixed size and reside in data memory. Individual messages use four words of storage in the log's buffer. The first word holds a sequence number that allows the Event Log to display logs in the correct order. The remaining three words contain data specified by the call that wrote the message to the log.

See the *Code Composer Studio* online tutorial for examples of how to use the LOG Manager.

LOG Manager Properties

The following global property can be set for the LOG module in the LOG Manager Properties dialog of the DSP/BIOS Configuration Tool or in a `Tconf` script:

- Object Memory.** The memory segment that contains the LOG objects.
Tconf Name: `OBJMEMSEG` Type: Reference
Example: `bios.LOG.OBJMEMSEG = prog.get("myMEM");`
- timestamped LOGs.** If enabled, timestamps are added to LOG records created by LOG APIs. The timestamp uses the same counter used by `CLK_gettime`. When timestamping is enabled, each LOG record is 8 words. When timestamping is disabled, each LOG record is 4 words. You must enable timestamping in order to use the

LOG_event5 and LOG_printf4 APIs. When you enable timestamping, the logs cannot be handled by the DSP/BIOS plug-ins in CCStudio. However, timestamped logs are supported by the System Analyzer Tool.

Tconf Name: TS

Type: Bool

Example: `bios.LOG.TS = false;`

LOG Object Properties

To create a LOG object in a configuration script, use the following syntax. The Tconf examples that follow assume the object has been created as shown here.

```
var myLog = bios.LOG.create("myLog");
```

The following properties can be set for a log object on the LOG Object Properties dialog in the DSP/BIOS Configuration Tool or in a Tconf script:

- comment.** Type a comment to identify this LOG object.
Tconf Name: comment Type: String
Example: `myLog.comment = "trace LOG";`
- bufseg.** The name of a memory segment to contain the log buffer.
Tconf Name: bufSeg Type: Reference
Example: `myLog.bufSeg = prog.get("myMEM");`
- bufLen.** The length of the log buffer (in words).
Tconf Name: bufLen Type: EnumInt
Options: 0, 8, 16, 32, 64, ..., 32768
Example: `myLog.bufLen = 64;`
- logtype.** The type of the log: circular or fixed. Events added to a full circular log overwrite the oldest event in the buffer, whereas events added to a full fixed log are dropped.
 - Fixed.** The log stores the first messages it receives and stops accepting messages when its message buffer is full.
 - Circular.** The log automatically overwrites earlier messages when its buffer is full. As a result, a circular log stores the last events that occur.
 Tconf Name: logType Type: EnumString
Options: "circular", "fixed"
Example: `myLog.logType = "circular";`
- datatype.** Choose printf if you use LOG_printf to write to this log and provide a format string.

Choose raw data if you want to use LOG_event to write to this log and have the Event Log apply a printf-style format string to all records in the log.

Tconf Name: dataType Type: EnumString

Options: "printf", "raw data"

Example: `myLog.dataType = "printf";`

- ❑ **format.** If you choose raw data as the datatype, type a printf-style format string for this property. Provide up to three (3) conversion characters (such as %d) to format words two, three, and four in all records in the log. Do not put quotes around the format string. The format string can use %d, %u, %x, %o, %s, %r, and %p conversion characters; it cannot use other types of conversion characters. See LOG_printf, page 2–227, and LOG_event, page 2–223, for information about the structure of a log record.

Tconf Name: format Type: String

Example: `myLog.format = "0x%x, 0x%x, 0x%x";`

LOG_disable*Disable a message log***C Interface**

Syntax	LOG_disable(log);
Parameters	LOG_Handle log; /* log object handle */
Return Value	Void

Reentrant no

Description LOG_disable disables the logging mechanism and prevents the log buffer from being modified.

Example LOG_disable(&trace);

See Also LOG_enable
LOG_reset

LOG_enable*Enable a message log***C Interface**

Syntax LOG_enable(log);

Parameters LOG_Handle log; /* log object handle */

Return Value Void

Reentrant no

Description LOG_enable enables the logging mechanism and allows the log buffer to be modified.

Example LOG_enable(&trace);

See Also LOG_disable
LOG_reset

LOG_error*Write an error message to the system log***C Interface**

Syntax `LOG_error(format, arg0);`

Parameters String format; /* printf-style format string */
 Arg arg0; /* copied to second word of log record */

Return Value Void

Reentrant yes

Description LOG_error writes a program-supplied error message to the system log, which is defined in the default configuration by the LOG_system object. LOG_error is not affected by any TRC bits; an error event is always written to the system log.

The format argument can contain any of the conversion characters supported for LOG_printf. See LOG_printf for details.

Example

```
Void UTL_doError(String s, Int errno)
{
    LOG_error("SYS_error called: error id = 0x%x", errno);
    LOG_error("SYS_error called: string = '%s'", s);
}
```

See Also

LOG_event
LOG_message
LOG_printf
TRC_disable
TRC_enable

LOG_event*Append an unformatted message to a message log***C Interface****Syntax**

LOG_event(log, arg0, arg1, arg2);

Parameters

LOG_Handle log; /* log objecthandle */
 Arg arg0; /* copied to second word of log record */
 Arg arg1; /* copied to third word of log record */
 Arg arg2; /* copied to fourth word of log record */

Return Value

Void

Reentrant

yes

Description

LOG_event copies a sequence number and three arguments to the specified log buffer. Each log message uses four words. The contents of the four words written by LOG_event are shown here:

LOG_event	Sequence #	arg0	arg1	arg2
-----------	------------	------	------	------

You can format the log by using LOG_printf instead of LOG_event.

If you want the Event Log to apply the same printf-style format string to all records in the log, use Tconf to choose raw data for the datatype property and type a format string for the format property (see “LOG Object Properties” on page 2-218).

If the logtype is circular, the log buffer of size buflen contains the last buflen elements. If the logtype is fixed, the log buffer contains the first buflen elements.

Any combination of threads can write to the same log. Internally, hardware interrupts are temporarily disabled during a call to LOG_event. Log messages are never lost due to thread preemption.

Example

```
LOG_event(&trace, (Arg)value1, (Arg)value2,
          (Arg)CLK_gettime());
```

See Also

LOG_error
 LOG_printf
 TRC_disable
 TRC_enable

LOG_event5

Append an unformatted 5-argument message to a message log

C Interface

Syntax LOG_event5(log, arg0, arg1, arg2, arg3, arg4);

Parameters

LOG_Handle log;	/* log objecthandle */
Arg arg0;	/* copied to second word of log record */
Arg arg1;	/* copied to third word of log record */
Arg arg2;	/* copied to fourth word of log record */
Arg arg3;	/* copied to fifth word of log record */
Arg arg4;	/* copied to sixth word of log record */

Return Value Void

Reentrant yes

Description LOG_event5 copies a sequence number, timestamp, and up to five arguments to the specified log buffer.

In order to use LOG_event5, you *must* have configured the LOG.TS (timestamped logs) property to be true. The default is false. See LOG Manager Properties for details.

If you enable timestamped logs, you cannot view log data with the DSP/BIOS plug-ins in CCStudio. You can access them with the System Analyzer tool.

When you enable timestamped LOGs, each log record contains eight words. The contents of the eight words written by LOG_event5 are shown here:



You can use a combination of calls to LOG_event, LOG_event5, LOG_printf, and LOG_printf4 to the same log so long as timestamped logs are enabled.

If you want the Event Log to apply the same printf-style format string to all records in the log, use Tconf to choose raw data for the datatype property and type a format string for the format property (see “LOG Object Properties” on page 2-218).

If the logtype is circular, the log buffer of size buflen contains the last buflen elements. If the logtype is fixed, the log buffer contains the first buflen elements.

Any combination of threads can write to the same log. Internally, hardware interrupts are temporarily disabled during a call to LOG_event5. Log messages are never lost due to thread preemption.

Example

```
LOG_event5(&trace, (Arg)value0, (Arg)value1, (Arg)value2,  
           (Arg)value3, (Arg)CLK_gettime());
```

See Also

LOG_event
LOG_printf4

LOG_message*Write a program-supplied message to the system log***C Interface****Syntax** LOG_message(format, arg0);**Parameters** String format; /* printf-style format string */
Arg arg0; /* copied to second word of log record */**Return Value** Void**Reentrant** yes**Description** LOG_message writes a program-supplied message to the system log, provided that both the host and target trace bits are enabled.

The format argument passed to LOG_message can contain any of the conversion characters supported for LOG_printf. See LOG_printf, page 2-227, for details.

Example

```
Void UTL_doMessage(String s, Int errno)
{
    LOG_message("SYS_error called: error id = 0x%x", errno);
    LOG_message("SYS_error called: string = '%s'", s);
}
```

See AlsoLOG_error
LOG_event
LOG_printf
TRC_disable
TRC_enable

LOG_printf*Append a formatted message to a message log***C Interface**

Syntax	LOG_printf(log, format); or LOG_printf(log, format, arg0); or LOG_printf(log, format, arg0, arg1);
Parameters	LOG_Handle log; /* log object handle */ String format; /* printf format string */ Arg arg0; /* value for first format string token */ Arg arg1; /* value for second format string token */
Return Value	Void
Reentrant	yes

Description As a convenience for C (as well as assembly language) programmers, the LOG module provides a variation of the ever-popular printf. LOG_printf copies a sequence number, the format address, and two arguments to the specified log buffer.

To reduce execution time, log data is always formatted on the host. The format string is stored on the host and accessed by the Event Log.

The arguments passed to LOG_printf must be integers, strings, or a pointer (if the special %r or %p conversion character is used).

The format string can use any conversion character found in Table 2-5.

Table 2-5. Conversion Characters for LOG_printf

Conversion Character	Description
%d	Signed integer
%u	Unsigned integer
%x	Unsigned hexadecimal integer
%o	Unsigned octal integer

Conversion Character	Description
%s	<p>Character string</p> <p>This character can only be used with constant string pointers. That is, the string must appear in the source and be passed to LOG_printf. For example, the following is supported:</p> <pre>char *msg = "Hello world!"; LOG_printf(&trace, "%s", msg);</pre> <p>However, the following example is not supported:</p> <pre>char msg[100]; strcpy(msg, "Hello world!"); LOG_printf(&trace, "%s", msg);</pre> <p>If the string appears in the COFF file and a pointer to the string is passed to LOG_printf, then the string in the COFF file is used by the Event Log to generate the output. If the string can not be found in the COFF file, the format string is replaced with *** ERROR: 0x%x 0x%x ***\n, which displays all arguments in hexadecimal.</p>
%r	<p>Symbol from symbol table</p> <p>This is an extension of the standard printf format tokens. This character treats its parameter as a pointer to be looked up in the symbol table of the executable and displayed. That is, %r displays the symbol (defined in the executable) whose value matches the value passed to %r. For example:</p> <pre>Int testval = 17; LOG_printf("%r = %d", &testval, testval);</pre> <p>displays:</p> <pre>testval = 17</pre> <p>If no symbol is found for the value passed to %r, the Event Log uses the string <unknown symbol>.</p>
%p	pointer

If you want the Event Log to apply the same printf-style format string to all records in the log, use Tconf to choose raw data for the datatype property of this LOG object and typing a format string for the format property.

Each log message uses four words. The contents of the message written by LOG_printf are shown here:

LOG_printf	Sequence #	arg0	arg1	Format address
------------	------------	------	------	----------------

You configure the characteristics of a log in Tconf. If the logtype is circular, the log buffer of size buflen contains the last buflen elements. If the logtype is fixed, the log buffer contains the first buflen elements.

Any combination of threads can write to the same log. Internally, hardware interrupts are temporarily disabled during a call to LOG_printf. Log messages are never lost due to thread preemption.

Constraints and Calling Context

- ❑ LOG_printf supports only 0, 1, or 2 arguments after the format string.
- ❑ The format string address is put in b6 as the third value for LOG_event.

Example

```
LOG_printf(&trace, "hello world");
LOG_printf(&trace, "Size of Int is: %d", sizeof(Int));
```

See Also

LOG_error
 LOG_event
 TRC_disable
 TRC_enable

LOG_printf4

Append a formatted message with up to 4 arguments to message log

C Interface**Syntax**

```
LOG_printf4(log, format, arg0, arg1, arg2, arg3);
```

Parameters

```
LOG_Handle log;      /* log object handle */
String      format;  /* printf format string */
Arg         arg0;    /* value for first format string token */
Arg         arg1;    /* value for second format string token */
Arg         arg2;    /* value for third format string token */
Arg         arg3;    /* value for fourth format string token */
```

Return Value

Void

Reentrant

yes

Description

This variant on the LOG_printf function allows you to provide up to 4 arguments to be formatted by the format string. Four arguments are not required—you may use 0, 1, 2, 3, or 4 arguments.

This function behaves the same as LOG_printf with the following exceptions:

LOG_printf4 copies a sequence number, format address, timestamp, and up to four arguments to the specified log buffer.

In order to use LOG_printf4, you *must* have configured the LOG.TS (timestamped logs) property to be true. The default is false. See LOG Manager Properties for details.

If you enable timestamped logs, you cannot view log data with the DSP/BIOS plug-ins in CCStudio. You can access them with the System Analyzer tool.

When you enable timestamped LOGs, each log record contains eight words. The contents of the eight words written by LOG_printf4 are shown here:



You can use a combination of calls to LOG_event, LOG_event5, LOG_printf, and LOG_printf4 to the same log so long as timestamped logs are enabled.

**Constraints and
Calling Context**

❑ none

Example

```
LOG_printf4(&trace, "hello world");  
LOG_printf4(&trace, "Data: %d %d %d %d", data1, data2,  
data3, data4);
```

See Also

LOG_event5
LOG_printf

LOG_reset*Reset a message log***C Interface**

Syntax LOG_reset(log);

Parameters LOG_Handle log /* log object handle */

Return Value Void

Reentrant no

Description LOG_reset enables the logging mechanism and allows the log buffer to be modified starting from the beginning of the buffer, with sequence number starting from 0.

LOG_reset does not disable interrupts or otherwise protect the log from being modified by an HWI or other thread. It is therefore possible for the log to contain inconsistent data if LOG_reset is preempted by an HWI or other thread that uses the same log.

Example LOG_reset(&trace);

See Also LOG_disable
LOG_enable

2.16 MBX Module

The MBX module is the mailbox manager.

Functions

- ❑ MBX_create. Create a mailbox
- ❑ MBX_delete. Delete a mailbox
- ❑ MBX_pend. Wait for a message from mailbox
- ❑ MBX_post. Post a message to mailbox

Constants, Types, and Structures

```
typedef struct MBX_Obj *MBX_Handle;
    /* handle for mailbox object */

struct MBX_Attrs {          /* mailbox attributes */
    Int    segid;
};

MBX_Attrs MBX_ATTRS = { /* default attribute values */
    0,
};
```

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the MBX Manager Properties and MBX Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default
OBJMEMSEG	Reference	prog.get("IDRAM")

Instance Configuration Parameters

Name	Type	Default
comment	String	"<add comments here>"
messageSize	Int16	1
length	Int16	1
elementSeg	Reference	prog.get("IDRAM")

Description

The MBX module makes available a set of functions that manipulate mailbox objects accessed through handles of type MBX_Handle. Mailboxes can hold up to the number of messages specified by the Mailbox Length property in Tconf.

MBX_pend waits for a message from a mailbox. Its timeout parameter allows the task to wait until a timeout. A timeout value of SYS_FOREVER causes the calling task to wait indefinitely for a message. A timeout value of zero (0) causes MBX_pend to return immediately. MBX_pend's return value indicates whether the mailbox was signaled successfully.

MBX_post is used to send a message to a mailbox. The timeout parameter to MBX_post specifies the amount of time the calling task waits if the mailbox is full. If a task is waiting at the mailbox, MBX_post removes the task from the queue and puts it on the ready queue. If no task is waiting and the mailbox is not full, MBX_post simply deposits the message and returns.

MBX Manager Properties

The following global property can be set for the MBX module on the MBX Manager Properties dialog in the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **Object Memory.** The memory segment that contains the MBX objects created with Tconf.

Tconf Name: OBJMEMSEG Type: Reference

Example: `bios.MBX.OBJMEMSEG = prog.get("myMEM");`

MBX Object Properties

To create an MBX object in a configuration script, use the following syntax. The Tconf examples that follow assume the object has been created as shown here.

```
var myMbx = bios.MBX.create("myMbx");
```

The following properties can be set for an MBX object in the MBX Object Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **comment.** Type a comment to identify this MBX object.

Tconf Name: comment Type: String

Example: `myMbx.comment = "my MBX";`

- ❑ **Message Size.** The size (in MADUs, 8-bit bytes) of the messages this mailbox can contain.

Tconf Name: messageSize Type: Int16

Example: `myMbx.messageSize = 1;`

- ❑ **Mailbox Length.** The number of messages this mailbox can contain.

Tconf Name: length Type: Int16

Example: `myMbx.length = 1;`

- ❑ **Element memory segment.** The memory segment to contain the mailbox data buffers.

Tconf Name: elementSeg Type: Reference

Example: `myMbx.elementSeg = prog.get("myMEM");`

MBX_create*Create a mailbox***C Interface**

Syntax `mbx = MBX_create(msgsize, mbxlength, attrs);`

Parameters `size_t msgsize; /* size of message */`
 `Uns mbxlength; /* length of mailbox */`
 `MBX_Attrs *attrs; /* pointer to mailbox attributes */`

Return Value `MBX_Handle mbx; /* mailbox object handle */`

Description

MBX_create creates a mailbox object which is initialized to contain up to mbxlength messages of size msgsize. If successful, MBX_create returns the handle of the new mailbox object. If unsuccessful, MBX_create returns NULL unless it aborts (for example, because it directly or indirectly calls SYS_error, and SYS_error causes an abort).

If attrs is NULL, the new mailbox is assigned a default set of attributes. Otherwise, the mailbox's attributes are specified through a structure of type MBX_Attrs.

All default attribute values are contained in the constant MBX_ATTRS, which can be assigned to a variable of type MBX_Attrs prior to calling MBX_create.

MBX_create calls MEM_alloc to dynamically create the object's data structure. MEM_alloc must acquire a lock to the memory before proceeding. If another thread already holds a lock to the memory, then there is a context switch. The segment from which the object is allocated is described by the DSP/BIOS objects property in the MEM Module, page 2-243.

Constraints and Calling Context

- MBX_create cannot be called from a SWI or HWI.
- You can reduce the size of your application program by creating objects with Tconf rather than using the XXX_create functions.

See Also

MBX_delete
 SYS_error

MBX_delete*Delete a mailbox***C Interface**

Syntax	MBX_delete(mbx);
Parameters	MBX_Handle mbx; /* mailbox object handle */
Return Value	Void

Description

MBX_delete frees the mailbox object referenced by mbx.

MBX_delete calls MEM_free to delete the MBX object. MEM_free must acquire a lock to the memory before proceeding. If another task already holds a lock to the memory, then there is a context switch.

Constraints and Calling Context

- ❑ No tasks should be pending on mbx when MBX_delete is called.
- ❑ MBX_delete cannot be called from a SWI or HWI.
- ❑ No check is performed to prevent MBX_delete from being used on a statically-created object. If a program attempts to delete a mailbox object that was created using Tconf, SYS_error is called.

See Also

MBX_create

MBX_pend*Wait for a message from mailbox***C Interface**

Syntax	<code>status = MBX_pend(mbx, msg, timeout);</code>
Parameters	<code>MBX_Handle mbx; /* mailbox object handle */</code> <code>Ptr msg; /* message pointer */</code> <code>Uns timeout; /* return after this many system clock ticks */</code>
Return Value	<code>Bool status; /* TRUE if successful, FALSE if timeout */</code>

Description

If the mailbox is not empty, `MBX_pend` copies the first message into `msg` and returns `TRUE`. Otherwise, `MBX_pend` suspends the execution of the current task until `MBX_post` is called or the timeout expires. The actual time of task suspension can be up to 1 system clock tick less than `timeout` due to granularity in system timekeeping.

If `timeout` is `SYS_FOREVER`, the task remains suspended until `MBX_post` is called on this mailbox. If `timeout` is 0, `MBX_pend` returns immediately.

If `timeout` expires (or `timeout` is 0) before the mailbox is available, `MBX_pend` returns `FALSE`. Otherwise `MBX_pend` returns `TRUE`.

A task switch occurs when calling `MBX_pend` if the mailbox is empty and `timeout` is not 0, or if a higher priority task is blocked on `MBX_post`.

Constraints and Calling Context

- This API can be called from a TSK with any timeout value, but if called from an HWI or SWI the timeout must be 0.
- If you need to call `MBX_pend` within a `TSK_disable/TSK_enable` block, you must use a timeout of 0.
- `MBX_pend` cannot be called from the program's `main()` function.

See Also`MBX_post`

MBX_post*Post a message to mailbox***C Interface****Syntax**

```
status = MBX_post(mbx, msg, timeout);
```

Parameters

```
MBX_Handle mbx;    /* mailbox object handle */
Ptr          msg;  /* message pointer */
Uns         timeout; /* return after this many system clock ticks */
```

Return Value

```
Bool        status; /* TRUE if successful, FALSE if timeout */
```

Description

MBX_post checks to see if there are any free message slots before copying msg into the mailbox. MBX_post readies the first task (if any) waiting on mbx.

If the mailbox is full and timeout is SYS_FOREVER, the task remains suspended until MBX_pend is called on this mailbox. If timeout is 0, MBX_post returns immediately. Otherwise, the task is suspended for timeout system clock ticks. The actual time of task suspension can be up to 1 system clock tick less than timeout due to granularity in system timekeeping.

If timeout expires (or timeout is 0) before the mailbox is available, MBX_post returns FALSE. Otherwise MBX_post returns TRUE.

A task switch occurs when calling MBX_post if a higher priority task is made ready to run, or if there are no free message slots and timeout is not 0.

Constraints and Calling Context

- If you need to call MBX_post within a TSK_disable/TSK_enable block, you must use a timeout of 0.
- This API can be called from a TSK with any timeout value, but if called from an HWI or SWI the timeout must be 0.
- MBX_post can be called from the program's main() function. However, the number of calls should not be greater than the number of messages the mailbox can hold. Additional calls have no effect.

See Also

MBX_pend

2.17 MEM Module

The MEM module is the memory segment manager.

Functions

- ❑ MEM_alloc. Allocate from a memory segment.
- ❑ MEM_calloc. Allocate and initialize to 0.
- ❑ MEM_define. Define a new memory segment.
- ❑ MEM_free. Free a block of memory.
- ❑ MEM_getBaseAddress. Get base address of memory heap.
- ❑ MEM_increaseTableSize. Increase the internal MEM table size.
- ❑ MEM_redefine. Redefine an existing memory segment.
- ❑ MEM_stat. Return the status of a memory segment.
- ❑ MEM_undefine. Undefine an existing memory segment.
- ❑ MEM_valloc. Allocate and initialize to a value.

Constants, Types, and Structures

```
MEM->MALLOCSEG = 0;    /* segid for malloc, free */

#define MEM_HEADERSIZE /* free block header size */
#define MEM_HEADERMASK /* mask to align on
                        MEM_HEADERSIZE */
#define MEM_ILLEGAL    /* illegal memory address */

MEM_Attrs MEM_ATTRS = { /* default attribute values */
    0
};

typedef struct MEM_Segment {
    Ptr      base;      /* base of the segment */
    MEM_sizep length;  /* size of the segment */
    Uns      space;    /* memory space */
} MEM_Segment;

typedef struct MEM_Stat {
    MEM_sizep size;    /* original size of segment */
    MEM_sizep used;   /* MADUs used in segment */
    size_t    length; /* largest contiguous block */
} MEM_Stat;

typedef unsigned int MEM_sizep;
```

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. The defaults shown are for 'C62x and 'C67x. The memory segment defaults are different for 'C64x. For details, see the MEM Manager Properties and MEM Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters.

Name	Type	Default (Enum Options)
REUSECODESPACE	Bool	false
ARGSSIZE	Numeric	0x0004
STACKSIZE	Numeric	0x0100
NOMEMORYHEAPS	Bool	false
BIOSOBJSEG	Reference	prog.get("IDRAM")
MALLOCSEG	Reference	prog.get("IDRAM")
USEMPC	Bool	false (C64x+ only)
ARGSSEG	Reference	prog.get("IDRAM")
STACKSEG	Reference	prog.get("IDRAM")
GBLINITSEG	Reference	prog.get("IDRAM")
TRCDATASEG	Reference	prog.get("IDRAM")
SYSDATASEG	Reference	prog.get("IDRAM")
OBJSEG	Reference	prog.get("IDRAM")
BIOSSEG	Reference	prog.get("IPRAM")
SYSINITSEG	Reference	prog.get("IPRAM")
HWISEG	Reference	prog.get("IPRAM")
HWIVCSEG	Reference	prog.get("IPRAM")
RTDXTEXTSEG	Reference	prog.get("IPRAM")
USERCOMMANDFILE	Bool	false
TEXTSEG	Reference	prog.get("IPRAM")
SWITCHSEG	Reference	prog.get("IDRAM")
BSSSEG	Reference	prog.get("IDRAM")
FARSEG	Reference	prog.get("IDRAM")
CINITSEG	Reference	prog.get("IDRAM")
PINITSEG	Reference	prog.get("IDRAM")
CONSTSEG	Reference	prog.get("IDRAM")
DATASEG	Reference	prog.get("IDRAM")
CIOSEG	Reference	prog.get("IDRAM")
ENABLELOADADDR	Bool	false
LOADBIOSSEG	Reference	prog.get("IPRAM")
LOADSYSINITSEG	Reference	prog.get("IPRAM")
LOADGBLINITSEG	Reference	prog.get("IDRAM")
LOADTRCDATASEG	Reference	prog.get("IDRAM")
LOADTEXTSEG	Reference	prog.get("IPRAM")

Name	Type	Default (Enum Options)
LOADSWITCHSEG	Reference	prog.get("IDRAM")
LOADCINITSEG	Reference	prog.get("IDRAM")
LOADPINITSEG	Reference	prog.get("IDRAM")
LOADCONSTSEG	Reference	prog.get("IDRAM")
LOADHWISEG	Reference	prog.get("IPRAM")
LOADHWIVCSEG	Reference	prog.get("IPRAM")
LOADRTDXTEXTSEG	Reference	prog.get("IPRAM")

Instance Configuration Parameters

Name	Type	Default (Enum Options)
comment	String	"<add comments here>"
base	Numeric	0x00000000
len	Numeric	0x00000000
createHeap	Bool	true
heapSize	Numeric	0x08000
enableHeapLabel	Bool	false
heapLabel	Extern	prog.extern("segment_name","asm")
space	EnumString	"data" ("code", "code/data")

Description

The MEM module provides a set of functions used to allocate storage from one or more disjointed segments of memory. These memory segments are specified with Tconf.

MEM always allocates an even number of MADUs and always aligns buffers on an even boundary. This behavior is used to insure that free buffers are always at least two MADUs in length. This behavior does not preclude you from allocating two 512 buffers from a 1K region of on-device memory, for example. It does, however, mean that odd allocations consume one more MADU than expected.

If small code size is important to your application, you can reduce code size significantly by removing the capability to dynamically allocate and free memory. To do this, set the "No Dynamic Memory Heaps" property for the MEM manager to true. If you remove this capability, your program cannot call any of the MEM functions or any object creation functions (such as TSK_create). You need to create all objects to be used by your program statically (with Tconf). You can also create or remove the dynamic memory heap from an individual memory segment in the configuration.

Software modules in DSP/BIOS that allocate storage at run-time use MEM functions; DSP/BIOS does not use the standard C function malloc. DSP/BIOS modules use MEM to allocate storage in the segment selected for that module with Tconf.

The MEM Manager property, Segment for malloc()/free(), is used to implement the standard C malloc, free, and calloc functions. These functions actually use the MEM functions (with segid = Segment for malloc/free) to allocate and free memory.

Note:

The MEM module does not set or configure hardware registers associated with a DSP's memory subsystem. Such configuration is the responsibility of the user and is typically handled by software loading programs, or in the case of Code Composer Studio, the startup or menu options. For example, to access external memory on a c6000 platform, the External Memory Interface (EMIF) registers must first be set appropriately before any access. The earliest opportunity for EMIF initialization within DSP/BIOS would be during the user initialization hook (see *Global Settings* in the *API Reference Guide*).

**MEM Manager
Properties**

The DSP/BIOS Memory Section Manager allows you to specify the memory segments required to locate the various code and data sections of a DSP/BIOS application.

Note that settings you specify in the Visual Linker normally override settings you specify in the configuration. See the Visual Linker help for details on using the Visual Linker with DSP/BIOS.

The following global properties can be set for the MEM module in the MEM Manager Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

General tab

- Reuse Startup Code Space.** If this property is set to true, the startup code section (.sysinit) can be reused after startup is complete.

Tconf Name: REUSECODESPACE

Type: Bool

Example: `bios.MEM.REUSECODESPACE = false;`

- ❑ **Argument Buffer Size.** The size of the .args section. The .args section contains the argc, argv, and envp arguments to the program's main() function. Code Composer loads arguments for the main() function into the .args section. The .args section is parsed by the boot file.

Tconf Name: ARGSSIZE

Type: Numeric

Example: `bios.MEM.ARGSSIZE = 0x0004;`

- ❑ **Stack Size.** The size of the global stack in MADUs. The upper-left corner of the DSP/BIOS Configuration Tool window shows the estimated minimum global stack size required for this application (as a decimal number).

This size is shown as a hex value in Minimum Addressable Data Units (MADUs). An MADU is the smallest unit of data storage that can be read or written by the CPU. For the c6000 this is an 8-bit byte.

Tconf Name: STACKSIZE

Type: Numeric

Example: `bios.MEM.STACKSIZE = 0x0400;`

- ❑ **No Dynamic Memory Heaps.** Put a checkmark in this box to completely disable the ability to dynamically allocate memory and the ability to dynamically create and delete objects. If this property is set to true, the program may not call the MEM_alloc, MEM_valloc, MEM_calloc, and malloc or the XXX_create function for any DSP/BIOS module. If this property is set to true, the Segment For DSP/BIOS Objects, Segment for malloc()/free(), and Stack segment for dynamic tasks properties are set to MEM_NULL.

When you set this property to true, heaps already specified in MEM segments are removed from the configuration. If you later reset this property to false, recreate heaps by configuring properties for individual MEM objects as needed.

Tconf Name: NOMEMORYHEAPS

Type: Bool

Example: `bios.MEM.NOMEMORYHEAPS = false;`

- ❑ **Segment For DSP/BIOS Objects.** The default memory segment to contain objects created at run-time with an XXX_create function. The XXX_Attrs structure passed to the XXX_create function can override this default. If you select MEM_NULL for this property, creation of DSP/BIOS objects at run-time via the XXX_create functions is disabled.

Tconf Name: BIOSOBJSEG

Type: Reference

Example: `bios.MEM.BIOSOBJSEG = prog.get("myMEM");`

- ❑ **Segment For malloc() / free().** The memory segment from which space is allocated when a program calls malloc and from which space is freed when a program calls free. If you select MEM_NULL for this property, dynamic memory allocation at run-time is disabled.

Tconf Name: MALLOCSEG

Type: Reference

Example: `bios.MEM.MALLOCSEG = prog.get("myMEM");`

- ❑ **Enable Memory Protection Controller module.** C64x+ only. Set this property to true to enable the MPC Module. By default, this module is disabled. If you plan to use the MPC module, you should also leave the EXC module enabled. This is set in the "Enable EXC module exception processing" field in the HWI Manager Properties.

Tconf Name: USEMPC

Type: Bool

Example: `bios.MEM.USEMPC = false;`

BIOS Data tab

- ❑ **Argument Buffer Section (.args).** The memory segment containing the .args section.

Tconf Name: ARGSSEG

Type: Reference

Example: `bios.MEM.ARGSSEG = prog.get("myMEM");`

- ❑ **Stack Section (.stack).** The memory segment containing the global stack. This segment should be located in RAM.

Tconf Name: STACKSEG

Type: Reference

Example: `bios.MEM.STACKSEG = prog.get("myMEM");`

- ❑ **DSP/BIOS Init Tables (.gblinit).** The memory segment containing the DSP/BIOS global initialization tables.

Tconf Name: GBLINITSEG

Type: Reference

Example: `bios.MEM.GBLINITSEG = prog.get("myMEM");`

- ❑ **TRC Initial Value (.trcdata).** The memory segment containing the TRC mask variable and its initial value. This segment must be placed in RAM.

Tconf Name: TRCDATASEG

Type: Reference

Example: `bios.MEM.TRCDATASEG = prog.get("myMEM");`

- ❑ **DSP/BIOS Kernel State (.sysdata).** The memory segment containing system data about the DSP/BIOS kernel state.

Tconf Name: SYSDATASEG

Type: Reference

Example: `bios.MEM.SYSDATASEG = prog.get("myMEM");`

- ❑ **DSP/BIOS Conf Sections (.obj).** The memory segment containing configuration properties that can be read by the target program.

Tconf Name: OBJSEG

Type: Reference

Example: `bios.MEM.OBJSEG = prog.get("myMEM");`

BIOS Code tab

- BIOS Code Section (.bios).** The memory segment containing the DSP/BIOS code.
 Tconf Name: BIOSSEG Type: Reference
 Example: `bios.MEM.BIOSSEG = prog.get("myMEM");`
- Startup Code Section (.sysinit).** The memory segment containing DSP/BIOS startup initialization code; this memory can be reused after main starts executing.
 Tconf Name: SYSINITSEG Type: Reference
 Example: `bios.MEM.SYSINITSEG = prog.get("myMEM");`
- Function Stub Memory (.hwi).** The memory segment containing dispatch code for HWIs that are configured to be monitored in the HWI Object Properties.
 Tconf Name: HWISEG Type: Reference
 Example: `bios.MEM.HWISEG = prog.get("myMEM");`
- Interrupt Service Table Memory (.hwi_vec).** The memory segment containing the Interrupt Service Table (IST). The IST can be placed anywhere on the memory map, but a copy of the RESET vector always remains at address 0x00000000.
 Tconf Name: HWIVCSEG Type: Reference
 Example: `bios.MEM.HWIVCSEG = prog.get("myMEM");`
- RTDX Text Segment (.rtdx_text).** The memory segment containing the code sections for the RTDX module.
 Tconf Name: RTDXTEXTSEG Type: Reference
 Example: `bios.MEM.RTDXTEXTSEG =
 prog.get("myMEM");`

Compiler Sections tab

- User .cmd File For Compiler Sections.** Put a checkmark in this box if you want to have full control over the memory used for the sections that follow. You must then create a linker command file that begins by including the linker command file created by the configuration. Your linker command file should then assign memory for the items normally handled by the following properties. See the *TMS320C6000 Optimizing Compiler User's Guide* for more details.
 Tconf Name: USERCOMMANDFILE Type: Bool
 Example: `bios.MEM.USERCOMMANDFILE = false;`
- Text Section (.text).** The memory segment containing the executable code, string literals, and compiler-generated constants. This segment can be located in ROM or RAM.
 Tconf Name: TEXTSEG Type: Reference
 Example: `bios.MEM.TEXTSEG = prog.get("myMEM");`

- ❑ **Switch Jump Tables (.switch).** The memory segment containing the jump tables for switch statements. This segment can be located in ROM or RAM.
Tconf Name: SWITCHSEG Type: Reference
Example: `bios.MEM.SWITCHSEG = prog.get("myMEM");`
- ❑ **C Variables Section (.bss).** The memory segment containing global and static C variables. At boot or load time, the data in the .cinit section is copied to this segment. This segment should be located in RAM.
Tconf Name: BSSSEG Type: Reference
Example: `bios.MEM.BSSSEG = prog.get("myMEM");`
- ❑ **C Variables Section (.far).** The memory segment containing global and static variables declared as far variables.
Tconf Name: FARSEG Type: Reference
Example: `bios.MEM.FARSEG = prog.get("myMEM");`
- ❑ **Data Initialization Section (.cinit).** The memory segment containing tables for explicitly initialized global and static variables and constants. This segment can be located in ROM or RAM.
Tconf Name: CINITSEG Type: Reference
Example: `bios.MEM.CINITSEG = prog.get("myMEM");`
- ❑ **C Function Initialization Table (.pinit).** The memory segment containing the table of global object constructors. Global constructors must be called during program initialization. The C/C++ compiler produces a table of constructors to be called at startup. The table is contained in a named section called .pinit. The constructors are invoked in the order that they occur in the table. This segment can be located in ROM or RAM.
Tconf Name: PINITSEG Type: Reference
Example: `bios.MEM.PINITSEG = prog.get("myMEM");`
- ❑ **Constant Sections (.const, .printf).** These sections can be located in ROM or RAM. The .const section contains string constants and data defined with the const C qualifier. The DSP/BIOS .printf section contains other constant strings used by the Real-Time Analysis tools. The .printf section is not loaded onto the target. Instead, the (COPY) directive is used for this section in the .cmd file. The .printf section is managed along with the .const section, since it must be grouped with the .const section to make sure that no addresses overlap. If you specify these sections in your own .cmd file, you'll need to do something like the following:

```
GROUP {
    .const: {}
    .printf (COPY): {}
} > IRAM
```

Tconf Name: CONSTSEG Type: Reference

Example: `bios.MEM.CONSTSEG = prog.get("myMEM");`

- Data Section (.data).** This memory segment contains program data. This segment can be located in ROM or RAM.

Tconf Name: DATASEG Type: Reference

Example: `bios.MEM.DATASEG = prog.get("myMEM");`

- Data Section (.cio).** This memory segment contains C standard I/O buffers.

Tconf Name: CIOSEG Type: Reference

Example: `bios.MEM.CIOSEG = prog.get("myMEM");`

Load Address tab

- Specify Separate Load Addresses.** If you put a checkmark in this box, you can select separate load addresses for the sections listed on this tab.

Load addresses are useful when, for example, your code must be loaded into ROM, but would run faster in RAM. The linker allows you to allocate sections twice: once to set a load address and again to set a run address.

If you do not select a separate load address for a section, the section loads and runs at the same address.

If you do select a separate load address, the section is allocated as if it were two separate sections of the same size. The load address is where raw data for the section is placed. References to items in the section refer to the run address. The application must copy the section from its load address to its run address. For details, see the topics on Runtime Relocation and the .label Directive in the Code Generation Tools help or manual.

Tconf Name: ENABLELOADADDR Type: Bool

Example: `bios.MEM.ENABLELOADADDR = false;`

- Load Address - BIOS Code Section (.bios).** The memory segment containing the load allocation of the section that contains DSP/BIOS code.

Tconf Name: LOADBIOSSEG Type: Reference

Example: `bios.MEM.LOADBIOSSEG =
prog.get("myMEM");`

- ❑ **Load Address - Startup Code Section (.sysinit).** The memory segment containing the load allocation of the section that contains DSP/BIOS startup initialization code.
Tconf Name: LOADSYSINITSEG Type: Reference
Example:

```
bios.MEM.LOADSYSINITSEG =  
    prog.get ("myMEM");
```
- ❑ **Load Address - DSP/BIOS Init Tables (.gblinit).** The memory segment containing the load allocation of the section that contains the DSP/BIOS global initialization tables.
Tconf Name: LOADGBLINITSEG Type: Reference
Example:

```
bios.MEM.LOADGBLINITSEG =  
    prog.get ("myMEM");
```
- ❑ **Load Address - TRC Initial Value (.trcdata).** The memory segment containing the load allocation of the section that contains the TRC mask variable and its initial value.
Tconf Name: LOADTRCDATASEG Type: Reference
Example:

```
bios.MEM.LOADTRCDATASEG =  
    prog.get ("myMEM");
```
- ❑ **Load Address - Text Section (.text).** The memory segment containing the load allocation of the section that contains the executable code, string literals, and compiler-generated constants.
Tconf Name: LOADTEXTSEG Type: Reference
Example:

```
bios.MEM.LOADTEXTSEG =  
    prog.get ("myMEM");
```
- ❑ **Load Address - Switch Jump Tables (.switch).** The memory segment containing the load allocation of the section that contains the jump tables for switch statements.
Tconf Name: LOADSWITCHSEG Type: Reference
Example:

```
bios.MEM.LOADSWITCHSEG =  
    prog.get ("myMEM");
```
- ❑ **Load Address - Data Initialization Section (.cinit).** The memory segment containing the load allocation of the section that contains tables for explicitly initialized global and static variables and constants.
Tconf Name: LOADCINITSEG Type: Reference
Example:

```
bios.MEM.LOADCINITSEG =  
    prog.get ("myMEM");
```

- ❑ **Load Address - C Function Initialization Table (.pinit).** The memory segment containing the load allocation of the section that contains the table of global object constructors.

Tconf Name: LOADPINITSEG Type: Reference

Example: `bios.MEM.LOADPINITSEG =
 prog.get ("myMEM") ;`
- ❑ **Load Address - Constant Sections (.const, .printf).** The memory segment containing the load allocation of the sections that contain string constants, data defined with the const C qualifier, and other constant strings used by the Real-Time Analysis tools. The .printf section is managed along with the .const section to make sure that no addresses overlap.

Tconf Name: LOADCONSTSEG Type: Reference

Example: `bios.MEM.LOADCONSTSEG =
 prog.get ("myMEM") ;`
- ❑ **Load Address - Function Stub Memory (.hwi).** The memory segment containing the load allocation of the section that contains dispatch code for HWIs configured to be monitored.

Tconf Name: LOADHWISEG Type: Reference

Example: `bios.MEM.LOADHWISEG = prog.get ("myMEM") ;`
- ❑ **Load Address - Interrupt Service Table Memory (.hwi_vec).** The memory segment containing the load allocation of the section that contains the Interrupt Service Table (IST).

Tconf Name: LOADHWIVCSEG Type: Reference

Example: `bios.MEM.LOADHWIVCSEG =
 prog.get ("myMEM") ;`
- ❑ **Load Address - RTDX Text Segment (.rtdx_text).** The memory segment containing the load allocation of the section that contains the code sections for the RTDX module.

Tconf Name: LOADRTDXTEXTSEG Type: Reference

Example: `bios.MEM.LOADRTDXTEXTSEG =
 prog.get ("myMEM") ;`

MEM Object Properties

A memory segment represents a contiguous length of code or data memory in the address space of the processor.

Note that settings you specify in the Visual Linker normally override settings you specify in the configuration. See the Visual Linker help for details on using the Visual Linker with DSP/BIOS.

To create a MEM object in a configuration script, use the following syntax. The Tconf examples that follow assume the object has been created as shown here.

```
var myMem = bios.MEM.create("myMem");
```

The following properties can be set for a MEM object in the MEM Object Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- comment.** Type a comment to identify this MEM object.
Tconf Name: comment Type: String
Example: `myMem.comment = "my MEM";`
- base.** The address at which this memory segment begins. This value is shown in hex.
Tconf Name: base Type: Numeric
Example: `myMem.base = 0x00000000;`
- len.** The length of this memory segment in MADUs. This value is shown in hex.
Tconf Name: len Type: Numeric
Example: `myMem.len = 0x00000000;`
- create a heap in this memory.** If this property is set to true, a heap is created in this memory segment. Memory can be allocated dynamically from a heap. In order to remove the heap from a memory segment, you can select another memory segment that contains a heap for properties that dynamically allocate memory in this memory segment. The properties you should check are in the Memory Section Manager (the Segment for DSP/BIOS objects and Segment for malloc/free properties) and the Task Manager (the Default stack segment for dynamic tasks property). If you disable dynamic memory allocation in the Memory Section Manager, you cannot create a heap in any memory segment.
Tconf Name: createHeap Type: Bool
Example: `myMem.createHeap = true;`
- heap size.** The size of the heap in MADUs to be created in this memory segment. You cannot control the location of the heap within its memory segment except by making the segment and heap the same sizes. Note that if the base of the heap ends up at address 0x0, the base address of the heap is offset by MEM_HEADERSIZE and the heap size is reduced by MEM_HEADERSIZE.
Tconf Name: heapSize Type: Numeric
Example: `myMem.heapSize = 0x08000;`

- ❑ **enter a user defined heap identifier.** If this property is set to true, you can define your own identifier label for this heap.

Tconf Name: `enableHeapLabel` Type: Bool

Example: `myMem.enableHeapLabel = false;`
- ❑ **heap identifier label.** If the property above is set to true, type a name for this segment's heap.

Tconf Name: `heapLabel` Type: Extern

Example: `myMem.heapLabel =
prog.extern("seg_name", "asm");`
- ❑ **space.** Type of memory segment. This is set to code for memory segments that store programs, and data for memory segments that store program data.

Tconf Name: `space` Type: EnumString

Options: `"code", "data", "code/data"`

Example: `myMem.space = "data";`

The predefined memory segments in a configuration file, particularly those for external memory, are dependent on the board template you select. In general, Table 2-6 and Table 2-7 list segments that can be defined for the c6000:

Table 2-6. *Typical Memory Segments for c6x EVM Boards*

Name	Memory Segment Type
IPRAM	Internal (on-device) program memory
IDRAM	Internal (on-device) data memory
SBSRAM	External SBSRAM on CE0
SDRAM0	External SDRAM on CE2
SDRAM1	External SDRAM on CE3

Table 2-7. *Typical Memory Segment for c6711 DSK Boards*

Name	Memory Segment Type
SDRAM	External SDRAM

MEM_alloc*Allocate from a memory segment***C Interface**

Syntax	<code>addr = MEM_alloc(segid, size, align);</code>		
Parameters	<code>Int</code>	<code>segid;</code>	<code>/* memory segment identifier */</code>
	<code>size_t</code>	<code>size;</code>	<code>/* block size in MADUs */</code>
	<code>size_t</code>	<code>align;</code>	<code>/* block alignment */</code>
Return Value	<code>Void</code>	<code>*addr;</code>	<code>/* address of allocated block of memory */</code>

Description

MEM_alloc allocates a contiguous block of storage from the memory segment identified by segid and returns the address of this block.

The segid parameter identifies the memory segment to allocate memory from. This identifier can be an integer or a memory segment name defined in the configuration. Files created by the configuration define each configured segment name as a variable with an integer value.

The block contains size MADUs and starts at an address that is a multiple of align. If align is 0 or 1, there is no alignment constraint.

MEM_alloc does not initialize the allocated memory locations.

If the memory request cannot be satisfied, MEM_alloc calls SYS_error with SYS_EALLOC and returns MEM_ILLEGAL.

MEM functions that allocate and deallocate memory internally lock the memory by calling the LCK_pend and LCK_post functions. If another task already holds a lock to the memory, there is a context switch. For this reason, MEM_alloc cannot be called from the context of a SWI or HWI. MEM_alloc checks the context from which it is called. It calls SYS_error and returns MEM_ILLEGAL if it is called from the wrong context.

A number of other DSP/BIOS APIs call MEM_alloc internally, and thus also cannot be called from the context of a SWI or HWI. See the "Function Callability Table" on page A-2 for a detailed list of calling contexts for each DSP/BIOS API.

Constraints and Calling Context

- segid must identify a valid memory segment.
- MEM_alloc cannot be called from a SWI or HWI.
- MEM_alloc cannot be called if the TSK scheduler is disabled.
- align must be 0, or a power of 2 (for example, 1, 2, 4, 8).

See Also

MEM_calloc
MEM_free
MEM_valloc

MEM_alloc*Allocate from a memory segment and set value to 0***C Interface****Syntax**

addr = MEM_alloc(segid, size, align)

Parameters

```

Int          segid;    /* memory segment identifier */
size_t       size;     /* block size in MADUs */
size_t       align;    /* block alignment */

```

Return Value

Void *addr; /* address of allocated block of memory */

Description

MEM_alloc is functionally equivalent to calling MEM_valloc with value set to 0. MEM_alloc allocates a contiguous block of storage from the memory segment identified by segid and returns the address of this block.

The segid parameter identifies the memory segment from which memory is to be allocated. This identifier can be an integer or a memory segment name defined in the configuration. The files created by the configuration define each configured segment name as a variable with an integer value.

The block contains size MADUs and starts at an address that is a multiple of align. If align is 0 or 1, there is no alignment constraint.

If the memory request cannot be satisfied, MEM_alloc calls SYS_error with SYS_EALLOC and returns MEM_ILLEGAL.

MEM functions that allocate and deallocate memory internally lock the memory by calling the LCK_pend and LCK_post functions. If another task already holds a lock to the memory, there is a context switch. For this reason, MEM_alloc cannot be called from the context of a SWI or HWI.

Constraints and Calling Context

- ❑ segid must identify a valid memory segment.
- ❑ MEM_alloc cannot be called from a SWI or HWI.
- ❑ MEM_alloc cannot be called if the TSK scheduler is disabled.
- ❑ align must be 0, or a power of 2 (for example, 1, 2, 4, 8).

See Also

MEM_alloc
MEM_free
MEM_valloc
SYS_error
std.h and stdlib.h functions

MEM_define*Define a new memory segment***C Interface**

Syntax `segid = MEM_define(base, length, attrs);`

Parameters

<code>Ptr</code>	<code>base;</code>	<code>/* base address of new segment */</code>
<code>MEM_sizep</code>	<code>length;</code>	<code>/* length (in MADUs) of new segment */</code>
<code>MEM_Attrs</code>	<code>*attrs;</code>	<code>/* segment attributes */</code>

Return Value `Int` `segid;` `/* ID of new segment */`

Reentrant `yes`**Description** `MEM_define` defines a new memory segment for use by the DSP/BIOS MEM Module.

The new segment contains length MADUs starting at base. A new table entry is allocated to define the segment, and the entry's index into this table is returned as the segid.

The new block should be aligned on a `MEM_HEADERSIZE` boundary, and the length should be a multiple of `MEM_HEADERSIZE`.

If `attrs` is `NULL`, the new segment is assigned a default set of attributes. Otherwise, the segment's attributes are specified through a structure of type `MEM_Attrs`.

Note:

No attributes are supported for segments, and the type `MEM_Attrs` is defined as a dummy structure.

If there are undefined slots available in the internal table of memory segment identifiers, one of those slots is (re)used for the new segment. If there are no undefined slots available in the internal table, the table size is increased via `MEM_alloc`. See `MEM_increaseTableSize` to manage performance in this situation.

Constraints and Calling Context

- At least one segment must exist at the time `MEM_define` is called.
- `MEM_define` internally locks the memory by calling `LCK_pend` and `LCK_post`. If another task already holds a lock to the memory, there is a context switch. For this reason, `MEM_define` cannot be called from the context of a SWI or HWI. It can be called from `main()` or a TSK. The duration that the API holds the memory lock is variable.

- ❑ The length parameter must be a multiple of MEM_HEADERSIZE and must be at least equal to MEM_HEADERSIZE.
- ❑ The base Ptr cannot be NULL.

See Also

MEM_redefine
MEM_undefine

MEM_free*Free a block of memory***C Interface****Syntax**

```
status = MEM_free(segid, addr, size);
```

Parameters

```
Int          segid;    /* memory segment identifier */
Ptr          addr;    /* block address pointer */
size_t       size;    /* block length in MADUs*/
```

Return Value

```
Bool        status;  /* TRUE if successful */
```

Description

MEM_free places the memory block specified by `addr` and `size` back into the free pool of the segment specified by `segid`. The newly freed block is combined with any adjacent free blocks. This space is then available for further allocation by MEM_alloc. The `segid` can be an integer or a memory segment name defined in the configuration.

MEM functions that allocate and deallocate memory internally lock the memory by calling the LCK_pend and LCK_post functions. If another task already holds a lock to the memory, there is a context switch. For this reason, MEM_free cannot be called from the context of a SWI or HWI.

Constraints and Calling Context

- ❑ `addr` must be a valid pointer returned from a call to MEM_alloc.
- ❑ `segid` and `size` are those values used in a previous call to MEM_alloc.
- ❑ MEM_free cannot be called by HWI or SWI functions.
- ❑ MEM_free cannot be called if the TSK scheduler is disabled.

See Also

MEM_alloc
std.h and stdlib.h functions

MEM_getBaseAddress *Get base address of a memory heap***C Interface**

Syntax `addr = MEM_getBaseAddress(segid);`

Parameters Int segid; /* memory segment identifier */

Return Value Ptr addr; /* heap base address pointer */

Description MEM_getBaseAddress returns the base address of the memory heap with the segment ID specified by the segid parameter.

Constraints and Calling Context ❑ The segid can be an integer or a memory segment name defined in the configuration.

See Also MEM Object Properties

MEM_increaseTableSize *Increase the internal MEM table size***C Interface**

Syntax `status = MEM_increaseTableSize(numEntries);`

Parameters `Uns numEntries; /* number of segments to increase table by */`

Return Value `Int status; /* TRUE if successful */`

Reentrant `yes`

Description MEM_increaseTableSize allocates numEntries of undefined memory segments. When MEM_define is called, undefined memory segments are re-used. If no undefined memory segments exist, one is allocated. By using MEM_increaseTableSize, the application can avoid the use of MEM_alloc (thus improving performance and determinism) within the MEM_define call.

MEM_increaseTableSize internally locks memory by calling LCK_pend and LCK_post. If another task already holds a lock to the memory, there is a context switch. For this reason, MEM_increaseTableSize cannot be called from the context of a SWI or HWI. It can be called from main() or a TSK. The duration that the API holds the memory lock is variable.

MEM_increaseTableSize returns SYS_OK to indicate success and SYS_EALLOC if an allocation error occurred.

Constraints and Calling Context

- ❑ Do not call from the context of a SWI or HWI.

See Also

MEM_define
MEM_undefine

MEM_redefine*Redefine an existing memory segment***C Interface****Syntax**

MEM_redefine(segid, base, length);

Parameters

Int segid; /* segment to redefine */
 Ptr base; /* base address of new block */
 MEM_sizep length; /* length (in MADUs) of new block */

Return Value

Void

Reentrant

yes

Description

MEM_redefine redefines an existing memory segment managed by the DSP/BIOS MEM Module. All pointers in the old segment memory block are automatically freed, and the new segment block is completely available for allocations.

The new block should be aligned on a MEM_HEADERSIZE boundary, and the length should be a multiple of MEM_HEADERSIZE.

Constraints and Calling Context

- ❑ MEM_redefine internally locks the memory by calling LCK_pend and LCK_post. If another task already holds a lock to the memory, there is a context switch. For this reason, MEM_redefine cannot be called from the context of a SWI or HWI. It can be called from main() or a TSK. The duration that the API holds the memory lock is variable.
- ❑ The length parameter must be a multiple of MEM_HEADERSIZE and must be at least equal to MEM_HEADERSIZE.
- ❑ The base Ptr cannot be NULL.

See Also

MEM_define
 MEM_undefine

MEM_stat*Return the status of a memory segment***C Interface**

Syntax	<code>status = MEM_stat(segid, statbuf);</code>
Parameters	<code>Int segid; /* memory segment identifier */</code> <code>MEM_Stat *statbuf; /* pointer to stat buffer */</code>
Return Value	<code>Bool status; /* TRUE if successful */</code>

Description

MEM_stat returns the status of the memory segment specified by segid in the status structure pointed to by statbuf.

```
typedef struct MEM_Stat {
    MEM_sizep size; /* original size of segment */
    MEM_sizep used; /* MADUs used in segment */
    size_t length; /* largest contiguous block */
} MEM_Stat;
```

All values are expressed in terms of minimum addressable units (MADUs).

MEM_stat returns TRUE if segid corresponds to a valid memory segment, and FALSE otherwise. If MEM_stat returns FALSE, the contents of statbuf are undefined. If the segment has been undefined with MEM_undefine, this function returns FALSE.

MEM functions that access memory internally lock the memory by calling the LCK_pend and LCK_post functions. If another task already holds a lock to the memory, there is a context switch. For this reason, MEM_stat cannot be called from the context of a SWI or HWI.

Constraints and Calling Context

- ❑ MEM_stat cannot be called from a SWI or HWI.
- ❑ MEM_stat cannot be called if the TSK scheduler is disabled.

MEM_undefine*Undefine an existing memory segment***C Interface**

Syntax MEM_undefine(segid);

Parameters Int segid; /* segment to undefine */

Return Value Void

Reentrant yes

Description MEM_undefine removes a memory segment from the internal memory tables. Once a memory segment has been undefined, the segid cannot be used in any of the MEM APIs (except MEM_stat). Note: The undefined segid might later be returned by a subsequent MEM_define call.

MEM_undefine internally locks the memory by calling LCK_pend and LCK_post. If another task already holds a lock to the memory, there is a context switch. For this reason, MEM_undefine cannot be called from the context of a SWI or HWI. It can be called from main() or a TSK. The duration that the API holds the memory lock is variable.

Constraints and Calling Context

- ❑ Do not call from the context of a SWI or HWI.
- ❑ MEM_undefine does not free the actual memory buffer managed by the memory segment.

See Also

MEM_define
MEM_redefine

MEM_valloc*Allocate from a memory segment and set value***C Interface****Syntax**

```
addr = MEM_valloc(segid, size, align, value);
```

Parameters

```
Int          segid;    /* memory segment identifier */
size_t       size;     /* block size in MADUs */
size_t       align;   /* block alignment */
Char         value;    /* character value */
```

Return Value

```
Void         *addr;    /* address of allocated block of memory */
```

Description

MEM_valloc uses MEM_alloc to allocate the memory before initializing it to value.

The segid parameter identifies the memory segment from which memory is to be allocated. This identifier can be an integer or a memory segment name defined in the configuration. The files created by the configuration define each configured segment name as a variable with an integer value.

The block contains size MADUs and starts at an address that is a multiple of align. If align is 0 or 1, there is no alignment constraint.

If the memory request cannot be satisfied, MEM_valloc calls SYS_error with SYS_EALLOC and returns MEM_ILLEGAL.

MEM functions that allocate and deallocate memory internally lock the memory by calling the LCK_pend and LCK_post functions. If another task already holds a lock to the memory, there is a context switch. For this reason, MEM_valloc cannot be called from the context of a SWI or HWI.

Constraints and Calling Context

- segid must identify a valid memory segment.
- MEM_valloc cannot be called from a SWI or HWI.
- MEM_valloc cannot be called if the TSK scheduler is disabled.
- align must be 0, or a power of 2 (for example, 1, 2, 4, 8).

See Also

```
MEM_alloc
MEM_calloc
MEM_free
SYS_error
std.h and stdlib.h functions
```

2.18 MPC Module

The MPC module is the Memory Protection Controller manager for C64x+ devices.

Functions

- ❑ `MPC_getPA`. Get permission attributes of address.
- ❑ `MPC_getPageSize`. Get size of page containing address.
- ❑ `MPC_getPrivMode`. Get current CPU privilege mode.
- ❑ `MPC_setBufferPA`. Set permission attributes for a buffer.
- ❑ `MPC_setPA`. Set permission attributes for an address.
- ❑ `MPC_setPrivMode`. Set CPU privilege mode.

Constants, Types, and Structures

```
/* MPPA Permission Attribute Register bitmasks */
typedef Uns MPC_Perm;

/* macros for valid values for MPC_Perm */
#define MPC_MPPA_UX 0x00000001 /* User eExecute */
#define MPC_MPPA_UW 0x00000002 /* User Write */
#define MPC_MPPA_UR 0x00000004 /* User Read */
#define MPC_MPPA_SX 0x00000008 /* Supervisor eExecute */
#define MPC_MPPA_SW 0x00000010 /* Supervisor Write */
#define MPC_MPPA_SR 0x00000020 /* Supervisor Read */
#define MPC_MPPA_LOCAL 0x00000100 /* LOCAL CPU */
```

Configuration Properties

The MPC module has no configuration properties of its own. To enable the MPC module, set the “Enable Memory Protection Controller module” field in the MEM Manager Properties to true.

Description

Memory protection can protect operating system data structures from poorly behaving code and aid in debugging by providing greater information about illegal memory accesses. The C64x+ Megamodule Memory Protection Architecture provides for memory protection through a combination of CPU privilege levels and a memory system permission structure.

- ❑ **CPU privilege levels.** Code running on the CPU executes in one of two privilege modes: Supervisor Mode or User Mode. The privilege of a thread determines what permissions that thread might have. You can use `MPC_getPrivMode` and `MPC_setPrivMode` to get and set the CPU privilege level.
 - **Supervisor code** is considered "more trusted" than User code. Examples of Supervisor threads include operating system kernels and hardware device drivers. Supervisor Mode is generally granted access to peripheral registers and the memory protection configuration.

- **User code** includes, for example, vocoders and end applications. User Mode is generally confined to the memory spaces that the OS specifically designates for its use.
- **Permission structure.** The Memory Protection model defines three fundamental functional access types: Read, Write, and Execute. Read and Write refer to data accesses by the CPU or the IDMA engine. Execute refers to accesses associated with a program fetch. You can enable/disable these access types on a per page basis for both User and Supervisor mode. Use `MPC_getPA`, `MPC_setBufferPA` and `MPC_setPA` to get and set the permissions.

See the chapter on "Memory Protection" in the *TMS320C64x+ DSP Megamodule Reference Guide* (SPRU871) for information.

Handling Invalid Accesses

The MPC hardware generates exceptions when an access that violates permissions occurs. The DSP/BIOS MPC module is associated with an `"_MPC"` module (note the underscore) that contains code that reports permission violations.

When enabled, the MPC module assigns `_MPC` exception handling functions to the EXC exception handling hooks (see Section C.4, *EXC Module* and Section C.5, *_MPC Module*). The MPC module enables and handles only MPC-related events.

If you use any MPC module APIs in your application source code, add the following line to your source file:

```
#include <mpc.h>
```

In addition to the MPC APIs, the `"_MPC"` APIs includes handler functions used with the EXC module hooks. Note the initial underscore in this module name. If you use any `_MPC` module APIs in your application source code, add the following line to your source file:

```
#include <_mpc.h>
```

Enabling the MPC module causes the Program Memory Controller (PMC), Data Memory Controller (DMC), and Unified Memory Controller (UMC) CPU events to be enabled to generate exceptions. The corresponding DMA events are not enabled.

If you want other exceptions to be generated, you need to enable those system events and write functions to handle them. For details, see the EXC Module. Since the MPC module takes control of the EXC function

hooks, the MPC module also provides a function hook that you can assign to handle additional exception processing (see `_MPC_userHook`).

When enabled, the MPC module assigns the following functions to the EXC function hooks.

- `EXC_exceptionHook = _MPC_exceptionHandler`
- `EXC_externalHook = _MPC_externalHandler`
- `EXC_internalHook = _MPC_internalHandler`
- `EXC_nmiHook = (not used)`

If you need to further process external exceptions, including ones already handled by the MPC module, you can write a function and assign it to the function pointer `_MPC_userHook`.

MPC Manager Properties

By default, the MPC module is disabled. To enable it, set the “Enable Memory Protection Controller module” field in the MEM Manager Properties to true. You can also enable the MPC module in a Tconf script with the following statement:

```
bios.MEM.USEMPC = true;
```

You can use MPC APIs without enabling the EXC Module, but you must have the EXC module enabled to allow MPC-related violations to generate an exception and report information about the exception. The EXC module is enabled by default.

Note that the MPC module does not have its own “module” in the configuration tools, and there are no “MPC objects”. It is a module in the DSP/BIOS kernel. The MEM module is used as a container for the single MPC configuration property.

MPC_getPA*Get permission attributes of address***C Interface**

Syntax `status = MPC_getPA(addr, space, *perm);`

Parameters

Ptr	addr;	<i>/* address to request permissions for */</i>
Int	space;	<i>/* memory space of addr */</i>
MPC_Perm	*perm;	<i>/* pointer to storage for desired PA */</i>

Return Value

Int	status	<i>/* SYS_OK or SYS_EINVAL */</i>
-----	--------	-----------------------------------

Description

This function is available only for C64x+ devices.

MPC_getPA reads the permission attributes (PA) associated with the specified location.

The addr parameter specifies an address for which you want to know the permissions. Due to the page granularity of the PA mask, all memory locations contained in the page in which addr resides have the same permission attributes.

The space parameter identifies whether the address is in program, data, I/O, or other memory. Since the C64x+ has a single memory space, use zero (0) for this parameter. Other values may be supported in future versions of DSP/BIOS.

The perm parameter is a pointer to a bitmask of type MPC_Perm. You can use the following constants to interpret the bitmask:

```
#define MPC_MPPA_UX  0x00000001  /* User eXecute */
#define MPC_MPPA_UW  0x00000002  /* User Write */
#define MPC_MPPA_UR  0x00000004  /* User Read */
#define MPC_MPPA_SX  0x00000008  /* Supervisor eXecute */
#define MPC_MPPA_SW  0x00000010  /* Supervisor Write */
#define MPC_MPPA_SR  0x00000020  /* Supervisor Read */
#define MPC_MPPA_LOCAL 0x00000100 /* LOCAL CPU */
```

This function returns SYS_OK if the operation is successful and SYS_EINVAL if the address and space you specify are invalid.

Constraints and Calling Context

□ none

See Also

MPC_setBufferPA
MPC_setPA

MPC_getPageSize*Get size of page containing address***C Interface****Syntax**

```
status = MPC_getPageSize(addr, space, *pageSize);
```

Parameters

```
Ptr      addr;    /* address to request page size for */
Int      space;   /* memory space of addr */
Uns      *pageSize; /* pointer to storage for desired page size */
```

Return Value

```
Int      status   /* SYS_OK or SYS_EINVAL */
```

Description

This function is available only for C64x+ devices.

MPC_getPageSize returns the page size associated with the specified address.

The addr parameter specifies an address for which you want to know the page size.

The space parameter identifies whether the address is in program, data, I/O, or other memory. Since the C64x+ has a single memory space, use zero (0) for this parameter. Other values may be supported in future versions of DSP/BIOS.

The pageSize parameter is a pointer to a location that will receive the page size of the specified location. The page size is measured in MAUs (minimum addressable units).

This function returns SYS_OK if the operation is successful and SYS_EINVAL if the address and space you specify are invalid.

Constraints and Calling Context

□ none

See Also

MPC_setBufferPA

MPC_getPrivMode *Get current CPU privilege mode***C Interface**

Syntax	<code>privMode = MPC_getPrivMode(Void);</code>
Parameters	Void
Return Value	Uns <code>privMode /* MPC_SV or MPC_US */</code>

Description

This function is available only for C64x+ devices.

MPC_getPrivMode returns the current CPU privilege mode. The return value matches one of the following constants:

- MPC_SV. Supervisor mode
- MPC_US. User mode
- none

Constraints and Calling Context

See Also MPC_setPrivMode

MPC_setBufferPA*Set permission attributes for a buffer***C Interface**

Syntax	<code>status = MPC_setBufferPA(baseAddr, size, space, perm);</code>								
Parameters	<table> <tr> <td>Ptr</td> <td>baseAddr; /* base address of buffer to set permissions for */</td> </tr> <tr> <td>Uns</td> <td>size; /* size in MAUs of buffer */</td> </tr> <tr> <td>Int</td> <td>space; /* memory space of baseAddr */</td> </tr> <tr> <td>MPC_Perm</td> <td>perm; /* permission attributes to set */</td> </tr> </table>	Ptr	baseAddr; /* base address of buffer to set permissions for */	Uns	size; /* size in MAUs of buffer */	Int	space; /* memory space of baseAddr */	MPC_Perm	perm; /* permission attributes to set */
Ptr	baseAddr; /* base address of buffer to set permissions for */								
Uns	size; /* size in MAUs of buffer */								
Int	space; /* memory space of baseAddr */								
MPC_Perm	perm; /* permission attributes to set */								
Return Value	Int status /* SYS_OK or SYS_EINVAL */								

Description

This function is available only for C64x+ devices.

MPC_setBufferPA writes specified permission attributes for the specified buffer.

The baseAddr parameter specifies the start of an address for which you want to set the permissions.

The size parameter specifies the length of the buffer in MAUs. Due to the page granularity of the PA, memory locations not contained in the buffer but which exist on the same page as the beginning or end of the buffer are set with the same permission attributes. Using a size of 1 is equivalent to calling MPC_setPA. You can find the page size for a particular address by calling MPC_getPageSize.

The space parameter identifies whether the address is in program, data, I/O, or other memory. Since the C64x+ has a single memory space, use zero (0) for this parameter. Other values may be supported in future versions of DSP/BIOS.

The perm parameter is a bitmask of type MPC_Perm. You can set any number of bits in the PA mask. You can use the following constants to set the bitmask:

```
#define MPC_MPPA_UX 0x00000001 /* User eXecute */
#define MPC_MPPA_UW 0x00000002 /* User Write */
#define MPC_MPPA_UR 0x00000004 /* User Read */
#define MPC_MPPA_SX 0x00000008 /* Supervisor eXecute */
#define MPC_MPPA_SW 0x00000010 /* Supervisor Write */
#define MPC_MPPA_SR 0x00000020 /* Supervisor Read */
#define MPC_MPPA_LOCAL 0x00000100 /* LOCAL CPU */
```

This function returns SYS_OK if the operation is successful and SYS_EINVAL if some or all of the buffer address range you specify is invalid.

Constraints and Calling Context

□ none

Example

```
#define IRAM_CODE_BASE 0x00800000
#define IRAM_CODE_LEN 0x00008000

MPC_Perm perm;

/* Set code space to execute-only (user & supervisor)*/
perm = MPC_MPPA_UX | MPC_MPPA_SX | MPC_MPPA_LOCAL;

MPC_setBufferPA((Ptr)IRAM_CODE_BASE, IRAM_CODE_LEN,
                0, perm);
```

See Also

MPC_getPA
MPC_getPageSize
MPC_setPA

MPC_setPA*Set permission attributes for an address***C Interface**

Syntax	<code>status = MPC_setPA(addr, space, perm);</code>		
Parameters	<code>Ptr</code>	<code>addr;</code>	<code>/* address to set permissions for */</code>
	<code>Int</code>	<code>space;</code>	<code>/* memory space of addr */</code>
	<code>MPC_Perm</code>	<code>perm;</code>	<code>/* permission attributes to set */</code>
Return Value	<code>Int</code>	<code>status</code>	<code>/* SYS_OK or SYS_EINVAL */</code>

Description

This function is available only for C64x+ devices.

MPC_setPA sets the permission attributes (PA) associated with the specified location.

The `addr` parameter specifies the address for which you want to set the permissions.

The `space` parameter identifies whether the address is in program, data, I/O, or other memory. Since the C64x+ has a single memory space, use zero (0) for this parameter. Other values may be supported in future versions of DSP/BIOS.

The `perm` parameter is a bitmask of type `MPC_Perm`. You can set any number of bits in the PA mask. Due to the page granularity of the PA mask, all memory locations contained in the page in which `addr` resides are set with `perm`. You can use the following constants to set the bitmask:

```
#define MPC_MPPA_UX 0x00000001 /* User eXecute */
#define MPC_MPPA_UW 0x00000002 /* User Write */
#define MPC_MPPA_UR 0x00000004 /* User Read */
#define MPC_MPPA_SX 0x00000008 /* Supervisor eXecute */
#define MPC_MPPA_SW 0x00000010 /* Supervisor Write */
#define MPC_MPPA_SR 0x00000020 /* Supervisor Read */
#define MPC_MPPA_LOCAL 0x00000100 /* LOCAL CPU */
```

This function returns `SYS_OK` if the operation is successful and `SYS_EINVAL` if the address and space you specify are invalid.

To set permissions for a range of addresses, use the `MPC_setBufferPA` API, instead.

Constraints and Calling Context

none

See Also

`MPC_getPA`
`MPC_setBufferPA`

MPC_setPrivMode *Set CPU privilege mode***C Interface**

Syntax	MPC_setPrivMode(privMode);
Parameters	Uns privMode; /* privilege mode to set */
Return Value	Void

Description

This function is available only for C64x+ devices.

MPC_setPrivMode modifies the current CPU privilege mode. You can set the mode using one of the following constants:

- MPC_SV. Supervisor mode
- MPC_US. User mode

MPC_setPrivMode relies on support by the EXC_dispatch function, so the EXC Module must be enabled. The source code fore EXC_dispatch is provided with DSP/BIOS in the exc_asm.s64P file.

Constraints and Calling Context

- none

Example

```
/* temporarily set privilege mode to permit access */
MPC_setPrivMode(MPC_SV);
ptr = MEM_alloc(L1D_HEAP, 0x100, 0);
MPC_setPrivMode(MPC_US);
```

See Also

MPC_getPrivMode

2.19 MSGQ Module

The MSGQ module allows for the structured sending and receiving of variable length messages. This module can be used for homogeneous or heterogeneous multi-processor messaging.

Functions

- ❑ `MSGQ_alloc`. Allocate a message. Performed by writer.
- ❑ `MSGQ_close`. Closes a message queue. Performed by reader.
- ❑ `MSGQ_count`. Return the number of messages in a message queue.
- ❑ `MSGQ_free`. Free a message. Performed by reader.
- ❑ `MSGQ_get`. Receive a message from the message queue. Performed by reader.
- ❑ `MSGQ_getAttrs`. Returns the attributes of a local message queue.
- ❑ `MSGQ_getDstQueue`. Get destination message queue.
- ❑ `MSGQ_getMsgId`. Return the message ID from a message.
- ❑ `MSGQ_getMsgSize`. Return the message size from a message.
- ❑ `MSGQ_getSrcQueue`. Extract the reply destination from a message.
- ❑ `MSGQ_isLocalQueue`. Returns TRUE if local message queue.
- ❑ `MSGQ_locate`. Synchronously find a message queue. Performed by writer.
- ❑ `MSGQ_locateAsync`. Asynchronously find a message queue. Performed by writer.
- ❑ `MSGQ_open`. Opens a message queue. Performed by reader.
- ❑ `MSGQ_put`. Place a message on a message queue. Performed by writer.
- ❑ `MSGQ_release`. Release a located message queue. Performed by writer.
- ❑ `MSGQ_setErrorHandler`. Set up handling of internal MSGQ errors.
- ❑ `MSGQ_setMsgId`. Sets the message ID in a message.
- ❑ `MSGQ_setSrcQueue`. Sets the reply destination in a message.

Constants, Types, and Structures

```
/* Attributes used to open message queue */
typedef struct MSGQ_Attrs {
    Ptr        notifyHandle;
    MSGQ_Pend  pend;
    MSGQ_Post  post;
} MSGQ_Attrs;
```

```

MSGQ_Attrs MSGQ_ATTRS = {
    NULL,                /* notifyHandle */
    (MSGQ_Pend)SYS_zero, /* NOP pend */
    FXN_F_nop            /* NOP post */
};

/* Attributes for message queue location */
typedef struct MSGQ_LocateAttrs {
    Uns        timeout;
} MSGQ_LocateAttrs;

MSGQ_LocateAttrs MSGQ_LOCATEATTRS = {SYS_FOREVER};

/* Attrs for asynchronous message queue location */
typedef struct MSGQ_LocateAsyncAttrs {
    Uint16     poolId;
    Arg        arg;
} MSGQ_LocateAttrs;

MSGQ_LocateAsyncAttrs MSGQ_LOCATEASYNCATTRS = {0, 0};

/* Configuration structure */
typedef struct MSGQ_Config {
    MSGQ_Obj      *msgqQueues;          /* Array of MSGQ handles */
    MSGQ_TransportObj *transports;      /* Transport array */
    Uint16        numMsgqQueues;        /* Number of MSGQ handles */
    Uint16        numProcessors;        /* Number of processors */
    Uint16        startUninitialized;    /* 1st MSGQ to init */
    MSGQ_Queue     errorQueue;          /* Receives transport err */
    Uint16        errorPoolId;          /* Alloc errors from poolId */
} MSGQ_Config;

/* Asynchronous locate message */
typedef struct MSGQ_AsyncLocateMsg {
    MSGQ_MsgHeader header;
    MSGQ_Queue     msgqQueue;
    Arg            arg;
} MSGQ_AsyncLocateMsg;

/* Asynchronous error message */
typedef struct MSGQ_AsyncErrorMsg {
    MSGQ_MsgHeader header;
    MSGQ_MqtError  errorType;
    Uint16         mqtId;
    Uint16         parameter;
} MSGQ_AsyncErrorMsg;

```



```

/* Transport object */
typedef struct MSGQ_TransportObj {
    MSGQ_MqtInit  initFxn;    /* Transport init func */
    MSGQ_TransportFxn *fxns; /* Interface funcs */
    Ptr          params; /* Setup parameters */
    Ptr          object; /* Transport-specific object */
    Uint16      procId; /* Processor Id talked to */
} MSGQ_TransportObj;

```

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the MSGQ Manager Properties heading. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default (Enum Options)
ENABLEMSGQ	Bool	false

Description

The MSGQ module allows for the structured sending and receiving of variable length messages. This module can be used for homogeneous or heterogeneous multi-processor messaging. The MSGQ module with a substantially similar API is implemented in DSP/BIOS Link for certain TI general-purpose processors (GPPs), particularly those used in OMAP devices.

MSGQ provides more sophisticated messaging than other modules. It is typically used for complex situations such as multi-processor messaging. The following are key features of the MSGQ module:

- Writers and readers can be relocated to another processor with no runtime code changes.
- Timeouts are allowed when receiving messages.
- Readers can determine the writer and reply back.
- Receiving a message is deterministic when the timeout is zero.
- Sending a message is non-blocking.
- Messages can reside on any message queue.
- Supports zero-copy transfers.
- Can send and receive from HWIs, SWIs and TSKs.
- Notification mechanism is specified by application.
- Allows QoS (quality of service) on message buffer pools. For example, using specific buffer pools for specific message queues.

Messages are sent and received via a *message queue*. A reader is a thread that gets (reads) messages from a message queue. A writer is a thread that puts (writes) a message to a message queue. Each message queue has one reader and can have many writers. A thread may read from or write to multiple message queues.

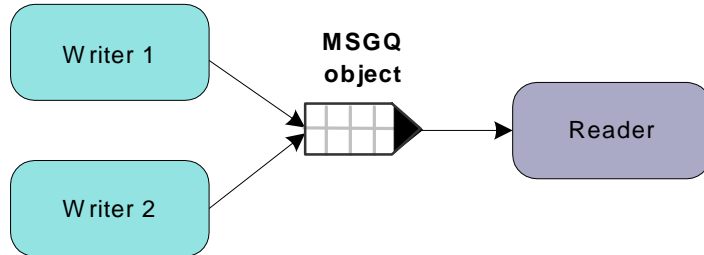


Figure 2-1. Writers and Reader of a Message Queue

Conceptually, the reader thread owns a message queue. The processor where the reader resides opens a message queue. Writer threads locate existing message queues to get access to them.

Messages must be allocated from the MSGQ module. Once a message is allocated, it can be sent on any message queue. Once a message is sent, the writer loses ownership of the message and should not attempt to modify the message. Once the reader receives the message, it owns the message. It may either free the message or re-use the message.

Messages in a message queue can be of variable length. The only requirement is that the first field in the definition of a message must be a `MSGQ_MsgHeader` element.

```
typedef struct MyMsg {
    MSGQ_MsgHeader header;
    ...
} MyMsg;
```

The MSGQ API uses the `MSGQ_MsgHeader` internally. Your application should not modify or directly access the fields in the `MSGQ_MsgHeader`.

The MSGQ module has the following components:

- ❑ **MSGQ API.** Applications call the MSGQ functions to open and use a message queue object to send and receive messages. For an overview, see “MSGQ APIs” on page 2-277. For details, see the sections on the individual APIs.
- ❑ **Allocators.** Messages sent via MSGQ must be allocated by an allocator. The allocator determines where and how the memory for the message is allocated. For more about allocators, see the *DSP/BIOS User’s Guide* (SPRU423F).

- ❑ **Transports.** Transports are responsible for locating and sending messages with other processors. For more about transports, see the *DSP/BIOS User's Guide (SPRU423F)*.

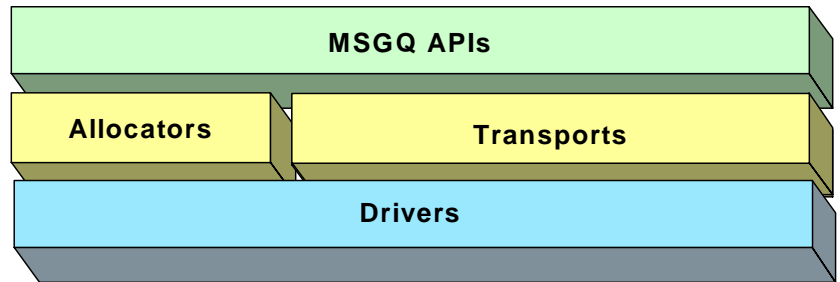


Figure 2-2. Components of the MSGQ Architecture

For more about using the MSGQ module—including information about multi-processor issues and a comparison of data transfer modules—see the *DSP/BIOS User's Guide (SPRU423F)*.

MSGQ APIs

The MSGQ APIs are used to open and close message queues and to send and receive messages. The MSGQ APIs shield the application from having to contain any knowledge about transports and allocators.

The following figure shows the call sequence of the main MSGQ functions:

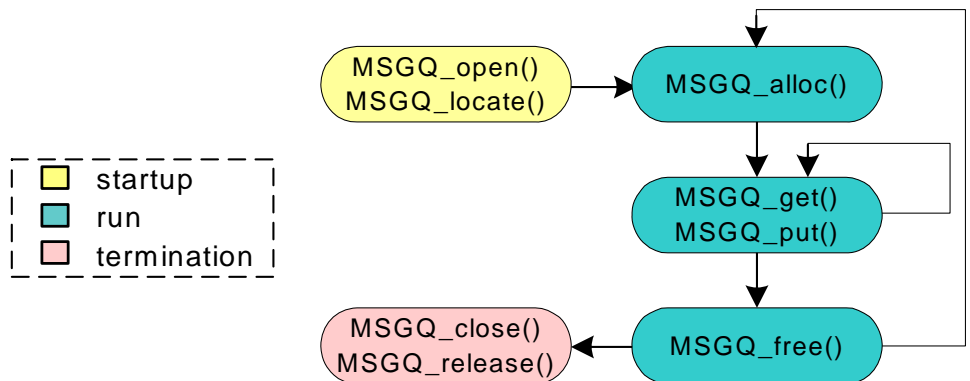


Figure 2-3. MSGQ Function Calling Sequence

The reader calls the following APIs:

- ❑ MSGQ_open
- ❑ MSGQ_get
- ❑ MSGQ_free
- ❑ MSGQ_close

A writer calls the following APIs:

- ❑ MSGQ_locate or MSGQ_locateAsync
- ❑ MSGQ_alloc
- ❑ MSGQ_put
- ❑ MSGQ_release

Wherever possible, the MSGQ APIs have been written to have a deterministic execution time. This allows application designers to be certain that messaging will not consume an unknown number of cycles.

In addition, the MSGQ functions support use of message queues from all types of DSP/BIOS threads: HWIs, SWIs, and TSKs. That is, calls that may be synchronous (blocking) have an asynchronous (non-blocking) alternative.

Static Configuration

In order to use the MSGQ module and the allocators it depends upon, you must statically configure the following:

- ❑ ENABLEMSGQ property of the MSGQ module using Tconf (see “MSGQ Manager Properties” on page 2-282)
- ❑ MSGQ_config variable in application code (see below)
- ❑ PROCID property of the GBL module using Tconf (see “GBL Module Properties” on page 2-133)
- ❑ ENABLEPOOL property of the POOL module using Tconf (see “POOL Manager Properties” on page 2-333)
- ❑ POOL_config variable in application code (see “Static Configuration” on page 2-330)

An application must provide a filled in MSGQ_config variable in order to use the MSGQ module.

```
MSGQ_Config MSGQ_config;
```

The MSGQ_Config type has the following structure:

```
typedef struct MSGQ_Config {
    MSGQ_Obj      *msgqQueues;      /* Array of message queue handles */
    MSGQ_TransportObj *transports;  /* Array of transports */
    Uint16       numMsgqQueues;    /* Number of message queue handles*/
    Uint16       numProcessors;    /* Number of processors */
    Uint16       startUninitialized; /* First msgq to init */
    MSGQ_Queue   errorQueue;      /* Receives async transport errors*/
    Uint16       errorPoolId;     /* Alloc error msgs from poolId */
} MSGQ_Config;
```

The fields in the MSGQ_Config structure are described in the following table:

Field	Type	Description
msgqQueues	MSGQ_Obj *	Array of message queue objects. The fields of each object do not need to be initialized.
transports	MSGQ_TransportObj *	Array of transport objects. The fields of each object must be initialized.
numMsgqQueues	Uint16	Length of the msgqQueues array.
numProcessors	Uint16	Length of the transports array.
startUninitialized	Uint16	Index of the first message queue to initialize in the msgq-Queue array. This should be set to 0.
errorQueue	MSGQ_Queue	Message queue to receive transport errors. Initialize to MSGQ_INVALIDMSGQ.
errorPoolId	Uint16	Allocator to allocate transport errors. Initialize to POOL_INVALIDID.

Internally, MSGQ references its configuration via the MSGQ_config variable. If the MSGQ module is enabled (via Tconf) but the application does not provide the MSGQ_config variable, the application cannot be linked successfully.

In the MSGQ_Config structure, an array of MSGQ_TransportObj items defines transport objects with the following structure:

```
typedef struct MSGQ_TransportObj {
    MSGQ_MqtInit  initFxn;    /* Transport init func */
    MSGQ_TransportFxn *fxns; /* Interface funcs */
    Ptr          params; /* Setup parameters */
    Ptr          object; /* Transport-specific object */
    Uint16      procId; /* Processor Id talked to */
} MSGQ_TransportObj;
```

The following table describes the fields in the MSGQ_TransportObj structure:

Field	Type	Description
initFxn	MSGQ_MqtInit	Initialization function for this transport. This function is called during DSP/BIOS startup. More explicitly it is called before main().
fxns	MSGQ_TransportFxn *	Pointer to the transport's interface functions.

Field	Type	Description
params	Ptr	Pointer to the transport's parameters. This field is transport-specific. Please see documentation provided with your transport for a description of this field.
info	Ptr	State information needed by the transport. This field is initialized and managed by the transport. Refer to the specific transport implementation to determine how to use this field
proclid	Uint16	Numeric ID of the processor that this transport communicates with. The current processor must have a proclid field that matches the GBL.PROCID property.

If no parameter structure is specified (that is, NULL is used) for the MSGQ_TransportObj, the transport uses its default parameters.

The order of the transports array is by processor. The first entry communicates with processor 0, the next entry with processor 1, and so on. On processor n, the nth entry in the transport array should be MSGQ_NOTTRANSPORT, since there is no transport to itself. The following example shows a configuration for a single-processor application (that is, processor 0). Note that the 0th entry is MSGQ_NOTTRANSPORT

```
#define NUMMSGQUEUES 4 /* # of local message queues*/
#define NUMPROCESSORS 1 /* Single processor system */

static MSGQ_Obj          msgQueues [NUMMSGQUEUES] ;
static MSGQ_TransportObj transports [NUMPROCESSOR] =
                        {MSGQ_NOTTRANSPORT};

MSGQ_Config MSGQ_config = {
    msgQueues,
    transports,
    NUMMSGQUEUES,
    NUMPROCESSORS,
    0,
    MSGQ_INVALIDMSGQ,
    POOL_INVALIDID
};
```

Managing Transports at Run-Time

As described in the previous section, MSGQ uses an array of transports of type MSGQ_TransportObj in the MSGQ_config variable. This array is processor ID based. For example, MSGQ_config->transports[0] is the transport to processor 0. Therefore, if a single binary is used on multiple processors, the array must be changed at run-time.

As with the GBL_setProclD API, the transports array can be managed in the User Init Function (see GBL Module Properties). DSP/BIOS only uses MSGQ_config and the transports array after the User Init Function returns.

There are several ways to manage the transports array. Two common ways are as follows:

- ❑ **Create a static two-dimensional transports array and select the correct one.** Assume a single image will be used for two processors (proclD 0 and 1) in a system with NUMPROCESSORS (3 in this example) processors. The transports array in the single image might look like this:

```
MSGQ_TransportObj transports[2][NUMPROCESSORS] =
{ { MSGQ_NOTTRANSPORT, // proc 0 talk to proc 0
  { ... }, // proc 0 talk to proc 1
  { ... }, // proc 0 talk to proc 2
},
  { { ... }, // proc 1 talk to proc 0
    MSGQ_NOTTRANSPORT, // proc 1 talk to proc 1
    { ... }, // proc 1 talk to proc 2
  }
}
```

In the User Init Function, the application would call GBL_setProclD with the correct processor ID. Then it would assign the correct transport array to MSGQ_config. For example, for processor 1, it would do the following:

```
MSGQ_config.transports = transports[1];
```

Note that this approach does not scale well as the number of processors in the system increases.

- ❑ **Fill in the transports array in the User Init Function.** In the User Init Function, you can fill in the contents of the transports array. You would still statically define a 1-dimensional transports array as follows:

```
MSGQ_TransportObj transports[NUMPROCESSORS];
```

This array would not be initialized. The initialization would occur in the User Init Function. For example on processor 1, it would fill in the transports array as follows.

```
    transports[0].initFxn = ...
    transports[0].fxns = ...
    transports[0].object = ...
    transports[0].params = ...
    transports[0].procId = 0;
    transports[1] = MSGQ_NOTTRANSPORT;//no self-transport
    transports[2].initFxn = ...
    transports[2].fxns = ...
    ...
    transports[2].procId = 2;
    MSGQ_config.transport = transports;
```

Note that some of the parameters may not be able to be determined easily at run-time, therefore you may need to use a mixture of these two options.

Message Queue Management

When a message queue is closed, the threads that located the closing message queue are not notified. No messages should be sent to a closed message queue. Additionally, there should be no active call to `MSGQ_get`, `MSGQ_getAttrs` or `MSGQ_getCount` to a message queue that is being closed. When a message queue is closed, all unread messages in the message queue are freed.

MSGQ Manager Properties

To configure the MSGQ manager, the `MSGQ_Config` structure must be defined in the C code. See “Static Configuration” on page 2-278.

The following global property must also be set in order to use the MSGQ module:

- ❑ **Enable Message Queue Manager.** If `ENABLEMSGQ` is `TRUE`, each transport and message queue specified in the `MSGQ_config` structure (see “Static Configuration” on page 2-278) is initialized.

Tconf Name: `ENABLEMSGQ`

Type: `Bool`

Example: `bios.MSGQ.ENABLEMSGQ = true;`

MSGQ_alloc*Allocate a message***C Interface**

Syntax `status = MSGQ_alloc(poolId, msg, size);`

Parameters

UInt16	poolId;	/* allocate the message from this allocator */
MSGQ_Msg	*msg;	/* pointer to the returned message */
UInt16	size;	/* size of the requested message */

Return Value

Int	status;	/* status */
-----	---------	--------------

Reentrant yes

Description MSGQ_alloc returns a message from the specified allocator. The size is in minimum addressable data units (MADUs).

This function is performed by a writer. This call is non-blocking and can be called from a HWI, SWI or TSK.

All messages must be allocated from an allocator. Once a message is allocated it can be sent. Once a message is received, it must either be freed or re-used.

The poolId must correspond to one of the allocators specified by the allocators field of the POOL_Config structure specified by the application. (See "Static Configuration" on page 2-330.)

If a message is allocated, SYS_OK is returned. Otherwise, SYS_EINVAL is returned if the poolId is invalid, and SYS_EALLOC is returned if no memory is available to meet the request.

Constraints and Calling Context

- ❑ All message definitions must have MSGQ_MsgHeader as its first field. For example:

```
struct MyMsg {
    MSGQ_MsgHeader header; /* Required field */
    ...                    /* User fields */
}
```

Example

```
/* Allocate a message */
status = MSGQ_alloc(STATICPOOLID, (MSGQ_Msg *)&msg,
    sizeof(MyMsg));
if (status != SYS_OK) {
    SYS_abort("Failed to allocate a message");
}
```

See Also MSGQ_free

MSGQ_close*Close a message queue***C Interface**

Syntax `status = MSGQ_close(msgqQueue);`

Parameters `MSGQ_Queue msgqQueue; /* Message queue to close */`

Return Value `Int status; /* status */`

Reentrant `yes`

Description `MSGQ_close` closes a message queue. If any messages are in the message queue, they are deleted.

This function is performed by the reader.

Threads that have located (with `MSGQ_locate` or `MSGQ_locateAsync`) the message queue being closed are not notified about the closure.

If successful, this function returns `SYS_OK`.

Constraints and Calling Context

- ❑ The message queue must have been returned from `MSGQ_open`.

See Also `MSGQ_open`

MSGQ_count*Return the number of messages in a message queue***C Interface**

Syntax `status = MSGQ_count(msgqQueue, count);`

Parameters `MSGQ_Queue msgqQueue; /* Message queue to count */`
`Uns *count; /* Pointer to returned count */`

Return Value `Int status; /* status */`

Reentrant `yes`**Description** This API determines the number of messages in a specific message queue. Only the processor that opened the message queue should call this API to determine the number of messages in the reader's message queue. This API is not thread safe with MSGQ_get when accessing the same message queue, so the caller of MSGQ_count must prevent any calls to MSGQ_get.

If successful, this function returns SYS_OK.

Constraints and Calling Context

- ❑ The message queue must have been returned from a MSGQ_open call.

Example

```
status = MSGQ_count(readerMsgQueue, &count);
if (status != SYS_OK) {
    return;
}
LOG_printf(&trace, "There are %d messages.", count);
```

See Also

MSGQ_open

MSGQ_free*Free a message***C Interface**

Syntax `status = MSGQ_free(msg);`

Parameters `MSGQ_Msg msg; /* Message to be freed */`

Return Value `Int status; /* status */`

Reentrant `yes`

Description `MSGQ_free` frees a message back to the allocator.

If successful, this function returns `SYS_OK`.

This call is non-blocking and can be called from a HWI, SWI or TSK.

Constraints and Calling Context

❑ The message must have been allocated via `MSGQ_alloc`.

Example

```
status = MSGQ_get(readerMsgQueue, (MSGQ_Msg *)msg,
                  SYS_FOREVER);
if (status != SYS_OK) {
    SYS_printf("MSGQ_get call failed.");
}
// process message

MSGQ_free(msg);
```

See Also

`MSGQ_alloc`

MSGQ_get*Receive a message from the message queue***C Interface**

Syntax `status = MSGQ_get(msgqQueue, msg, timeout);`

Parameters

MSGQ_Queue	msgqQueue;	/* Message queue */
MSGQ_Msg	*msg;	/* Pointer to the returned message */
Uns	timeout;	/* Duration to block if no message */

Return Value

Int	status;	/* status */
-----	---------	--------------

Reentrant yes

Description MSGQ_get returns a message sent via MSGQ_put. The order of retrieval is FIFO.

This function is performed by the reader. Once a message has been received, the reader is responsible for freeing or re-sending the message.

If no messages are present, the `pend()` function specified in the `MSGQ_Attrs` passed to `MSGQ_open` for this message queue is called. The `pend()` function blocks up to the timeout value (`SYS_FOREVER = forever`). The timeout units are system clock ticks.

This function is deterministic if timeout is zero. `MSGQ_get` can be called from a TSK with any timeout. It can be called from a HWI or SWI if the timeout is zero.

If successful, this function returns `SYS_OK`. Otherwise, `SYS_ETIMEOUT` is returned if the timeout expires before the message is received.

Constraints and Calling Context

- ❑ Only one reader of a message queue is allowed concurrently.
- ❑ The message queue must have been returned from a `MSGQ_open` call.

Example

```
status = MSGQ_get(readerMsgQueue, (MSGQ_Msg *)&msg, 0);
if (status != SYS_OK) {
    /* No messages to process */
    return;
}
```

See Also

MSGQ_put
MSGQ_open

MSGQ_getAttrs*Returns the attributes of a message queue***C Interface**

Syntax `status = MSGQ_getAttrs(msgqQueue, attrs);`

Parameters

MSGQ_Queue	msgqQueue;	/* Message queue */
MSGQ_Attrs	*attrs;	/* Attributes of message queue */

Return Value `Int status /* status */`

Reentrant yes

Description MSGQ_getAttrs fills in the attrs structure passed to it with the attributes of a local message queue. These attributes are set by MSGQ_open.

The API returns SYS_OK unless the message queue is not local (that is, it was opened on another processor). If the message queue is not local, the API returns SYS_EINVAL and does not change the contents of the passed in attrs structure.

Example

```
status = MSGQ_getAttrs (msgqQueue, &attrs);
if (status != SYS_OK) {
    return;
}
notifyHandle = attrs.notifyHandle;
```

Constraints and Calling Context

- ❑ The message queue must have been returned from a MSGQ_open call and must be valid.
- ❑ This function can be called from a HWI, SWI or TSK.

See Also MSGQ_open

MSGQ_getDstQueue*Get destination message queue field in a message***C Interface****Syntax**

MSGQ_getDstQueue(msg, msgqQueue);

ParametersMSGQ_Msg msg; /* Message */
MSGQ_Queue *msgqQueue; /* Message queue */**Return Value**

Void

Reentrant

yes

Description

This API allows the application to determine the destination message queue of a message. This API is generally used by transports to determine the final destination of a message. This API can also be used by the application once the message is received.

This function can be called from a HWI, SWI or TSK.

Constraints and Calling Context

- ❑ The message must have been sent via MSGQ_put.

MSGQ_getMsgId *Return the message ID from a message***C Interface**

Syntax `msgId = MSGQ_getMsgId(msg);`

Parameters `MSGQ_Msg msg; /* Message */`

Return Value `Uint16 msgId; /* Message ID */`

Reentrant `yes`

Description `MSGQ_getMsgId` returns the message ID from a received message. This message ID is specified via the `MSGQ_setMsgId` function.

This function can be called from a HWI, SWI or TSK.

Example

```
/* Make sure the message is the one expected */
if (MSGQ_getMsgId((MSGQ_Msg)msg) != MESSAGEID) {
    SYS_abort("Unexpected message");
}
```

See Also `MSGQ_setMsgId`

MSGQ_getMsgSize*Return the message size from a message***C Interface**

Syntax size = MSGQ_getMsgSize(msg);

Parameters MSGQ_Msg msg; /* Message */

Return Value Uint16 size; /* Message size */

Reentrant yes

Description MSGQ_getMsgSize returns the size of the message buffer out of the received message. The size is in minimum addressable data units (MADUs).

This function can be used to determine if a message can be re-used.

This function can be called from a HWI, SWI or TSK.

See Also MSGQ_alloc

MSGQ_getSrcQueue*Extract the reply destination from a message***C Interface**

Syntax `status = MSGQ_getSrcQueue(msg, msgQueue);`

Parameters `MSGQ_Msg msg; /* Received message */`
`MSGQ_Queue *msgQueue; /* Message queue */`

Return Value `Int status; /* status */`

Reentrant `yes`

Description

Many times a receiver of a message wants to reply to the sender of the message (for example, to send an acknowledgement). When a valid `msgQueue` is specified in `MSGQ_setSrcQueue`, the receiver of the message can extract the message queue via `MSGQ_getSrcQueue`.

This is basically the same as a `MSGQ_locate` function without knowing the name of the message queue. This function can be used even if the `queueName` used with `MSGQ_open` was `NULL` or non-unique.

Note: The `msgQueue` may not be the sender's message queue handle. The sender is free to use any created message queue handle.

This function can be called from a HWI, SWI or TSK.

If successful, this function returns `SYS_OK`.

Example

```
/* Get the handle and send the message back. */
status = MSGQ_getSrcQueue((MSGQ_Msg)msg, &replyQueue);
if (status != SYS_OK) {
    /* Free the message and abort */
    MSGQ_free((MSGQ_Msg)msg);
    SYS_abort("Failed to get handle from message");
}
status = MSGQ_put(replyQueue, (MSGQ_Msg)msg);
```

See Also

`MSGQ_getAttrs`
`MSGQ_setSrcQueue`

MSGQ_isLocalQueue *Return whether message queue is local or on other processor*

C Interface

Syntax `flag = MSGQ_isLocalQueue(msgqQueue);`

Parameters `MSGQ_Queue msgqQueue; /* Message queue */`

Return Value `Bool flag; /* status */`

Reentrant `yes`

Description This API determines whether the message queue is local (that is, opened on this processor) or remote (that is, opened on a different processor).

If the message queue is local, the flag returned is TRUE. Otherwise, it is FALSE.

Constraints and Calling Context

- ❑ This function can be called from a HWI, SWI or TSK.

Example

```
flag = MSGQ_isLocalQueue(readerMsgQueue);
if (flag == TRUE) {
    /* Message queue is local */
    return;
}
```

See Also `MSGQ_open`

MSGQ_locate*Synchronously find a message queue***C Interface**

Syntax `status = MSGQ_locate(queueName, msgqQueue, locateAttrs);`

Parameters `String queueName; /* Name of message queue to locate */`
`MSGQ_Queue *msgqQueue; /* Return located message queue here */`
`MSGQ_LocateAttrs *locateAttrs; /* Locate attributes */`

Return Value `Int status; /* status */`

Reentrant `yes`

Description

The MSGQ_locate function is used to locate an opened message queue. This function is synchronous (that is, it can block if timeout is non-zero).

This function is performed by a writer. The reader must have already called MSGQ_open for this queueName.

MSGQ_locate firsts searches the local message queues for a name match. If a match is found, that message queue is returned. If no match is found, the transports are queried one at a time. If a transport locates the queueName, that message queue is returned. If the transport does not locate the message queue, the next transport is queried. If no transport can locate the message queue, an error is returned.

In a multiple-processor environment, transports can block when they are queried if you call MSGQ_locate. The timeout in the MSGQ_LocateAttrs structure specifies the maximum time each transport can block. The default is SYS_FOREVER (that is, each transport can block forever). Remember that if you specify 1000 clock ticks as the timeout, the total blocking time could be 1000 * number of transports.

Note that timeout is not a fixed amount of time to wait. It is the maximum time each transport waits for a positive or negative response. For example, suppose your timeout is 1000, but the response (found or not found) comes back in 600 ticks. The transport returns the response then; it does not wait for another 400 ticks to recheck for a change.

If you do not want to allow blocking, call MSGQ_locateAsync instead of MSGQ_locate.

The locateAttrs parameter is of type MSGQ_LocateAttrs. This type has the following structure:

```
typedef struct MSGQ_LocateAttrs {
    Uns          timeout;
} MSGQ_LocateAttrs;
```

The timeout is the maximum time a transport can block on a synchronous locate in system clock ticks. The default attributes are as follows:

```
MSGQ_LocateAttrs  MSGQ_LOCATEATTRS = {SYS_FOREVER};
```

If successful, this function returns SYS_OK. Otherwise, it returns SYS_ENOTFOUND to indicate that it could not locate the specified message queue.

Constraints and Calling Context

- ❑ Cannot be called from main().
- ❑ Cannot be called in a SWI or HWI context.

Example

```
status = MSGQ_locate("reader", &readerMsgQueue, NULL);
if (status != SYS_OK) {
    SYS_abort("Failed to locate reader message queue");
}
```

See Also

MSGQ_locateAsync
MSGQ_open

MSGQ_locateAsync*Asynchronously find a message queue***C Interface**

Syntax `status=MSGQ_locateAsync(queueName, replyQueue, locateAsyncAttrs);`

Parameters String queueName; /* Name of message queue to locate */
 MSGQ_Queue replyQueue; /* Msgq to send locate message */
 MSGQ_LocateAsyncAttrs *locateAsyncAttrs; /* Locate attributes */

Return Value Int status; /* status */

Reentrant yes

Description

MSGQ_locateAsync firsts searches the local message queues for a name match. If one is found, an asynchronous locate message is sent to the specified message queue (in the replyQueue parameter). If it is not, all transports are asked to start an asynchronous locate search. After all transports have been asked to start the search, the API returns.

If a transport locates the message queue, an asynchronous locate message is sent to the specified replyQueue. If no transport can locate the message queue, no message is sent.

This function is performed by a writer. The reader must have already called MSGQ_open for this queueName. An asynchronous locate can be performed from a SWI or TSK. It cannot be performed in main().

The message ID for an asynchronous locate message is:

```
/* Asynchronous locate message ID */
#define MSGQ_ASYNCLOCATEMSGID 0xFF00
```

The MSGQ_LocateAsyncAttrs structure has the following fields:

```
typedef struct MSGQ_LocateAsyncAttrs {
    Uint16 poolId;
    Arg arg;
} MSGQ_LocateAttrs;
```

The default attributes are as follows:

```
MSGQ_LocateAsyncAttrs MSGQ_LOCATEASYNCATTRS = {0, 0};
```

The locate message is allocated from the allocator specified by the locateAsyncAttrs->poolId field.

The locateAsyncAttrs->arg value is included in the asynchronous locate message. This field allows you to correlate requests with the responses.

Once the application receives an asynchronous locate message, it is responsible for freeing the message. The asynchronous locate message received by the replyQueue has the following structure:

```
typedef struct MSGQ_AsyncLocateMsg {
    MSGQ_MsgHeader  header;
    MSGQ_Queue      msgqQueue;
    Arg             arg;
} MSGQ_AsyncLocateMsg;
```

Field	Type	Description
header	MSGQ_MsgHeader	Required field for every message.
msgqQueue	MSGQ_Queue	Located message queue handle.
Arg	Arg	Value specified in MSGQ_LocateAttrs for this asynchronous locate.

This function returns SYS_OK to indicate that an asynchronous locate was started. This status does not indicate whether or not the locate will be successful. The SYS_EALLOC status is returned if the message could not be allocated.

Constraints and Calling Context

- ❑ The allocator must be able to allocate an asynchronous locate message.
- ❑ Cannot be called in the context of main().

Example

The following example shows an asynchronous locate performed in a task. Time spent blocking is dictated by the timeout specified in the MSGQ_get call. (Error handling statements were omitted for brevity.)

```
status = MSGQ_open("myMsgQueue", &myQueue, &msgqAttrs);

locateAsyncAttrs          = MSGQ_LOCATEATTRS;
locateAsyncAttrs.poolId   = STATICPOOLID;

MSGQ_locateAsync("msgQ1", myQueue, &locateAsyncAttrs);
status = MSGQ_get(myQueue, &msg, SYS_FOREVER);
if (MSGQ_getMsgId((MSGQ_Msg)msg) ==
    MSGQ_ASYNCLOCATEMSGID) {
    readerQueue = msg->msgqQueue;
}
MSGQ_free((MSGQ_Msg)msg);
```

See Also

MSGQ_locate
MSGQ_free
MSGQ_open

MSGQ_open*Open a message queue***C Interface**

Syntax `status = MSGQ_open(queueName, msgqQueue, attrs);`

Parameters `String queueName; /* Unique name of the message queue */`
 `MSGQ_Queue *msgqQueue; /* Pointer to returned message queue */`
 `MSGQ_Attrs *attrs; /* Attributes of the message queue */`

Return Value `Int status; /* status */`

Reentrant `yes`

Description MSGQ_open is the function to open a message queue. This function selects and returns a message queue from the array provided in the static configuration (that is, MSGQ_config->msgqQueues).

This function is on the processor where the reader resides. The reader then uses this message queue to receive messages.

If successful, this function returns SYS_OK. Otherwise, it returns SYS_ENOTFOUND to indicate that no empty spot was available in the message queue array.

If the application will use MSGQ_locate or MSGQ_locateAsync to find this message queue, the queueName must be unique. If the application will never need to use the locate APIs, the queueName may be NULL or a non-unique name.

Instead of using a fixed notification mechanism, such as SEM_pend and SEM_post, the MSGQ notification mechanism is supplied in the attrs parameter, which is of type MSGQ_Attrs. If attrs is NULL, the new message queue is assigned a default set of attributes. The structure for MSGQ_Attrs is as follows:

```
typedef struct MSGQ_Attrs {
    Ptr            notifyHandle;
    MSGQ_Pend    pend;
    MSGQ_Post    post;
} MSGQ_Attrs;
```

The MSGQ_Attrs fields are as follows:

Field	Type	Description
notifyHandle	Ptr	Handle to use in the pend() and post() functions.

Pend	MSGQ_Pend	Function pointer to a user-specified pend function.
Post	MSGQ_Post	Function pointer to a user-specified post function.

The default attributes are:

```
MSGQ_Attrs MSGQ_ATTRS = {
    NULL, /* notifyHandle */
    (MSGQ_Pend) SYS_zero, /* NOP pend */
    FXN_F_nop /* NOP post */
};
```

The following typedefs are provided by the MSGQ module to allow easier casting of the pend and post functions:

```
typedef Bool (*MSGQ_Pend)(Ptr notifyHandle, Uns timeout);
typedef Void (*MSGQ_Post)(Ptr notifyHandle);
```

The post() function you specify is always called within MSGQ_put when a writer sends a message.

A reader calls MSGQ_get to receive a message. If there is a message, it returns that message, and the pend() function is not called. The pend() function is only called if there are no messages to receive.

The pend() and post() functions must act in a binary manner. For instance, SEM_pend and SEM_post treat the semaphore as a counting semaphore instead of binary. So SEM_pend and SEM_post are an invalid pend/post pair. The following example, in which the reader calls MSGQ_get with a timeout of SYS_FOREVER, shows why:

- 1) A writer sends 10 messages, making the count 10 in the semaphore.
- 2) The reader then calls MSGQ_get 10 times. Each call returns a message without calling the pend() function.
- 3) The reader then calls MSGQ_get again. Since there are no messages, the pend() function is called. Since the semaphore count was 10, SEM_pend returns TRUE immediately from the pend(). MSGQ would check for messages and there would still be none, so pend() would be called again. This would repeat 9 more times until the count was zero.

If the pend() function were binary (for example, a binary semaphore), the pend() function would be called at most two times in step 3.

So instead of using SEM_pend and SEM_post for synchronous (blocking) opens, you should use SEM_pendBinary and SEM_postBinary.

The following notification attributes could be used if the reader is a SWI function (which cannot block):

```
MSGQ_Attrs attrs = MSGQ_ATTRS; // default attributes
// leave attrs.pend as a NOP
attrs.notifyHandle = (Ptr)swiHandle;
attrs.post         = (MSGQ_Pend)SWI_post;
```

The following notification attributes could be used if the reader is a TSK function (which can block):

```
MSGQ_Attrs attrs = MSGQ_ATTRS; // default attributes
attrs.notifyHandle = (Ptr)semHandle;
attrs.pend         = (MSGQ_Pend)SEM_pendBinary;
attrs.post         = (MSGQ_Post)SEM_postBinary;
```

Constraints and Calling Context

- ❑ The message queue returned is to be used by the caller of `MSGQ_get`. It should not be used by writers to that message queue (that is, callers of `MSGQ_put`). Writers should use the message queue returned by `MSGQ_locate`, `MSGQ_locateAsync`, or `MSGQ_getSrcQueue`.
- ❑ If a `post()` function is specified, the function must be non-blocking.
- ❑ If a `pend()` function is specified, the function must be non-blocking when timeout is zero.
- ❑ Each message queue must have a unique name if the application will use `MSGQ_locate` or `MSGQ_locateAsync`.
- ❑ The `queueName` must be persistent. The `MSGQ` module references this name internally; that is, it does not make a copy of the name.

Example

```
/* Open the reader message queue.
 * Using semaphores as notification mechanism */
msgqAttrs = MSGQ_ATTRS;
msgqAttrs.notifyHandle = (Ptr)readerSemHandle;
msgqAttrs.pend         = (MSGQ_Pend)SEM_pendBinary;
msgqAttrs.post         = (MSGQ_Post)SEM_postBinary;
status = MSGQ_open("reader", &readerMsgQueue,
                  &msgqAttrs);

if (status != SYS_OK) {
    SYS_abort("Failed to open the reader message queue");
}
```

See Also

MSGQ_close
 MSGQ_locate
 MSGQ_locateAsync
 SEM_pendBinary
 SEM_postBinary

MSGQ_put*Place a message on a message queue***C Interface**

Syntax	status = MSGQ_put(msgqQueue, msg);		
Parameters	MSGQ_Queue	msgqQueue;	/* Destination message queue */
	MSGQ_Msg	msg;	/* Message */
Return Value	Int	status;	/* status */

Reentrant yes

Description MSGQ_put places a message into the specified message queue.

This function is performed by a writer. This function is non-blocking, and can be called from a HWI, SWI or TSK.

The post() function for the destination message queue is called as part of the MSGQ_put. The post() function is specified MSGQ_open call in the MSGQ_Attrs parameter.

If successful, this function returns SYS_OK. Otherwise, it may return an error code returned by the transport.

There are several features available when sending a message.

- ❑ A msgId passed to MSGQ_setMsgId can be used to indicate the type of message it is. Such a type is completely application-specific, except for IDs defined for MSGQ_setMsgId. The reader of a message can use MSGQ_getMsgId to get the ID from the message.
- ❑ The source message queue parameter to MSGQ_setSrcQueue allows the sender of the message to specify a source message queue. The receiver of the message can use MSGQ_getSrcQueue to extract the embedded message queue from the message. A client/server application might use this mechanism because it allows the server to reply to a message without first locating the sender. For example, each client would have its own message queue that it specifies as the source message queue when it sends a message to the server. The server can use MSGQ_getSrcQueue to get the message queue to reply back to.

If MSGQ_put returns an error, the user still owns the message and is responsible for freeing the message (or re-sending it).

Constraints and Calling Context

- ❑ The msgqQueue must have been returned from MSGQ_locate, MSGQ_locateAsync or MSGQ_getSrcQueue (or MSGQ_open if the reader of the message queue wants to send themselves a message).

- ❑ If MSGQ_put does not return SYS_OK, the message is still owned by the caller and must either be freed or re-used.

Example

```
/* Send the message back. */
status = MSGQ_put(replyMsgQueue, (MSGQ_Msg)msg);
if (status != SYS_OK) {
    /* Need to free the message */
    MSGQ_free((MSGQ_Msg)msg);
    SYS_abort("Failed to send the message");
}
```

See Also

MSGQ_get
MSGQ_open
MSGQ_setMsgId
MSGQ_getMsgId
MSGQ_setSrcQueue
MSGQ_getSrcQueue

MSGQ_release*Release a located message queue***C Interface****Syntax** `status = MSGQ_release(msgqQueue);`**Parameters** `MSGQ_Queue msgqQueue; /* Message queue to release */`**Return Value** `Int status; /* status */`**Reentrant** `yes`**Description** This function releases a located message queue. That is, it releases a message queue returned from `MSGQ_locate` or `MSGQ_locateAsync`.

This function is performed by a writer.

If successful, this function returns `SYS_OK`. Otherwise, it may return an error code returned by the transport.**Constraints and Calling Context** The handle must have been returned from `MSGQ_locate` or `MSGQ_locateAsync`.**See Also** `MSGQ_locate`
`MSGQ_locateAsync`

MSGQ_setErrorHandler *Set up handling of internal MSGQ errors***C Interface**

Syntax `status = MSGQ_setErrorHandler(errorQueue, poolId);`

Parameters `MSGQ_Queue errorQueue; /* Message queue to receive errors */`
`UInt16 poolId; /* Allocator to allocate error messages */`

Return Value `Int status; /* status */`

Reentrant `yes`

Description

Asynchronous errors that need to be communicated to the application may occur in a transport. If an application calls `MSGQ_setErrorHandler`, all asynchronous errors are then sent to the message queue specified.

The specified message queue receives asynchronous error messages (if they occur) via `MSGQ_get`.

`poolId` specifies the allocator the transport should use to allocate error messages. If the transports cannot allocate a message, no action is performed.

If this function is not called or if `errorHandler` is set to `MSGQ_INVALIDMSGQ`, no error messages will be allocated and sent.

This function can be called multiple times with only the last handler being active.

If successful, this function returns `SYS_OK`.

The message ID for an asynchronous error message is:

```
/* Asynchronous error message ID */
#define MSGQ_ASYNCERRORMSGID 0xFF01
```

The following is the structure for an asynchronous error message:

```
typedef struct MSGQ_AsyncErrorMsg {
    MSGQ_MsgHeader header;
    MSGQ_MqtError  errorType;
    UInt16         mqtId;
    UInt16         parameter;
} MSGQ_AsyncErrorMsg;
```

The following table describes the fields in the MSGQ_AsyncErrorMsg structure:

Field	Type	Description
header	MSGQ_MsgHeader	Required field for every message
errorType	MSGQ_MqtError	Error ID
mqtId	Uint16	ID of the transport that sent the error message
parameter	Uint16	Error-specific field

The following table lists the valid errorType values and the meanings of their arg fields:

errorType	mqtId	parameter
MSGQ_MQTERRorexIT	ID of the transport that is exiting.	Not used.
MSGQ_MQTFAILEDPUT	ID of the transport that failed to send a message.	ID of destination queue. The parameter is 16 bits, so only the lower 16 bits of the msgQueue is logged. The top 16 bits of the msgQueue contain the destination processor ID, which is also the mqtId. You can OR the mqtId shifted over by 16 bits with the parameter to get the full destination msgQueue.
MSGQ_MQTERRORINTERNAL	Generic internal error.	Transport defined.
MSGQ_MQTERRORPHYSICAL	Problem with the physical link.	Transport defined.
MSGQ_MQTERRORALLOC	Transport could not allocate memory.	Size of the requested memory.

MSGQ_open
MSGQ_get

MSGQ_setMsgId *Set the message ID in a message***C Interface**

Syntax MSGQ_setMsgId(msg, msgId);

Parameters MSGQ_MSG msg; /* Message */
 Uint16 msgId; /* Message id */

Return Value Void

Reentrant yes

Description Inside each message is a message id field. This API sets this field. The value of msgId is application-specific. MSGQ_getMsgId can be used to extract this field from a message.

When a message is allocated, the value of this field is MSGQ_INVALIDMSGID. When MSGQ_setMsgId is called, it updates the field accordingly. This API can be called multiple times on a message.

If a message is sent to another processor, the message Id field is converted by the transports accordingly (for example, endian conversion is performed).

The message IDs used when sending messages are application-specific. They can have any value except values in the following ranges:

- Reserved for the MSGQ module messages: 0xFF00 - 0xFF7F
- Reserved for internal transport usage: 0xFF80 - 0xFFFFE
- Used to signify an invalid message ID: 0xFFFF

The following table lists the message IDs currently used by the MSGQ module.

Constant Defined in msgq.h	Value	Description
MSGQ_ASYNCLOCATEMSGID	0xFF00	Used to denote an asynchronous locate message.
MSGQ_ASYNCERRORMSGID	0xFF01	Used to denote an asynchronous transport error.
MSGQ_INVALIDMSGID	0xFFFF	Used as initial value when message is allocated.

Constraints and Calling Context Message must have been allocated originally from MSGQ_alloc.

Example

```
/* Fill in the message */
msg->sequenceNumber = 0;
MSGQ_setMsgId((MSGQ_Msg)msg, MESSAGEID);

/* Send the message */
status = MSGQ_put(readerMsgQueue, (MSGQ_Msg)msg);
    if (status != SYS_OK) {
        SYS_abort("Failed to send the message");
    }
```

See Also

MSGQ_getMsgId
MSGQ_setErrorHandler

MSGQ_setSrcQueue *Set the reply destination in a message***C Interface**

Syntax MSGQ_setSrcQueue(msg, msgQueue);

Parameters MSGQ_MSG msg; /* Message */
MSGQ_Queue msgQueue; /* Message queue */

Return Value Void

Reentrant yes

Description This API allows the sender to specify a message queue that the receiver of the message can reply back to (via MSGQ_getSrcQueue). The msgQueue must have been returned by MSGQ_open.

Inside each message is a source message queue field. When a message is allocated, the value of this field is MSGQ_INVALIDMSGQ. When this API is called, it updates the field accordingly. This API can be called multiple times on a message.

If a message is sent to another processor, the source message queue field is managed by the transports accordingly.

Constraints and Calling Context

- ❑ Message must have been allocated originally from MSGQ_alloc.
- ❑ msgQueue must have been returned from MSGQ_open.

Example

```
/* Fill in the message */  
msg->sequenceNumber = 0;  
MSGQ_setSrcQueue((MSGQ_Msg)msg, writerMsgQueue);  
  
/* Send the message */  
status = MSGQ_put(readerMsgQueue, (MSGQ_Msg)msg);  
    if (status != SYS_OK) {  
        SYS_abort("Failed to send the message");  
    }  
}
```

See Also MSGQ_getSrcQueue

2.20 PIP Module

Important Note: The PIP module is being deprecated and will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the SIO module instead. The PIP module is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

The PIP module is the buffered pipe manager.

Functions

- ❑ **PIP_alloc.** Get an empty frame from the pipe.
- ❑ **PIP_free.** Recycle a frame back to the pipe.
- ❑ **PIP_get.** Get a full frame from the pipe.
- ❑ **PIP_getReaderAddr.** Get the value of the readerAddr pointer of the pipe.
- ❑ **PIP_getReaderNumFrames.** Get the number of pipe frames available for reading.
- ❑ **PIP_getReaderSize.** Get the number of words of data in a pipe frame.
- ❑ **PIP_getWriterAddr.** Get the value of the writerAddr pointer of the pipe.
- ❑ **PIP_getWriterNumFrames.** Get the number of pipe frames available to write to.
- ❑ **PIP_getWriterSize.** Get the number of words that can be written to a pipe frame.
- ❑ **PIP_peek.** Get the pipe frame size and address without actually claiming the pipe frame.
- ❑ **PIP_put.** Put a full frame into the pipe.
- ❑ **PIP_reset.** Reset all fields of a pipe object to their original values.
- ❑ **PIP_setWriterSize.** Set the number of valid words written to a pipe frame.

PIP_Obj Structure Members

- ❑ **Ptr readerAddr.** Pointer to the address to begin reading from after calling PIP_get.
- ❑ **Uns readerSize.** Number of words of data in the frame read with PIP_get.
- ❑ **Uns readerNumFrames.** Number of frames available to be read.

- ❑ **Ptr writerAddr.** Pointer to the address to begin writing to after calling PIP_alloc.
- ❑ **Uns writerSize.** Number of words available in the frame allocated with PIP_alloc.
- ❑ **Uns writerNumFrames.** Number of frames available to be written to.

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the PIP Manager Properties and PIP Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default
OBJMEMSEG	Reference	prog.get("IDRAM")

Instance Configuration Parameters

Name	Type	Default (Enum Options)
comment	String	"<add comments here>"
bufSeg	Reference	prog.get("IDRAM")
bufAlign	Int16	1
frameSize	Int16	8
numFrames	Int16	2
monitor	EnumString	"reader" ("writer", "none")
notifyWriterFxn	Extern	prog.extern("FXN_F_nop")
notifyWriterArg0	Arg	0
notifyWriterArg1	Arg	0
notifyReaderFxn	Extern	prog.extern("FXN_F_nop")
notifyReaderArg0	Arg	0
notifyReaderArg1	Arg	0


Description

The PIP module manages data pipes, which are used to buffer streams of input and output data. These data pipes provide a consistent software data structure you can use to drive I/O between the DSP device and all kinds of real-time peripheral devices.

Each pipe object maintains a buffer divided into a fixed number of fixed length frames, specified by the `numframes` and `framesize` properties. All I/O operations on a pipe deal with one frame at a time; although each frame has a fixed length, the application can put a variable amount of data in each frame up to the length of the frame.

A pipe has two ends, as shown in Figure 2-4. The writer end (also called the producer) is where your program writes frames of data. The reader end (also called the consumer) is where your program reads frames of data

Figure 2-4. Pipe Schematic

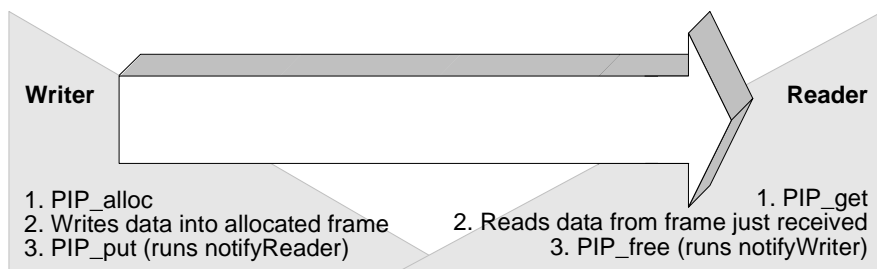

Internally, pipes are implemented as a circular list; frames are reused at the writer end of the pipe after `PIP_free` releases them.

The `notifyReader` and `notifyWriter` functions are called from the context of the code that calls `PIP_put` or `PIP_free`. These functions can be written in C or assembly. To avoid problems with recursion, the `notifyReader` and `notifyWriter` functions normally should not directly call any of the PIP module functions for the same pipe. Instead, they should post a SWI that uses the PIP module functions. However, PIP calls may be made from the `notifyReader` and `notifyWriter` functions if the functions have been protected against re-entrancy.

The following properties can be set for a PIP object in the PIP Object Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **comment.** Type a comment to identify this PIP object.
 Tconf Name: comment Type: String
 Example: `myPip.comment = "my PIP";`
- ❑ **bufseg.** The memory segment that the buffer is allocated within; all frames are allocated from a single contiguous buffer (of size framesize x numframes).
 Tconf Name: bufSeg Type: Reference
 Example: `myPip.bufSeg = prog.get("myMEM");`
- ❑ **bufalign.** The alignment (in words) of the buffer allocated within the specified memory segment.
 Tconf Name: bufAlign Type: Int16
 Example: `myPip.bufAlign = 1;`
- ❑ **framesize.** The length of each frame (in words)
 Tconf Name: frameSize Type: Int16
 Example: `myPip.frameSize = 8;`
- ❑ **numframes.** The number of frames
 Tconf Name: numFrames Type: Int16
 Example: `myPip.numFrames = 2;`
- ❑ **monitor.** The end of the pipe to be monitored by a hidden STS object. Can be set to reader, writer, or nothing. In the Statistics View analysis tool, your choice determines whether the STS display for this pipe shows a count of the number of frames handled at the reader or writer end of the pipe.
 Tconf Name: monitor Type: EnumString
 Options: "reader", "writer", "none"
 Example: `myPip.monitor = "reader";`
- ❑ **notifyWriter.** The function to execute when a frame of free space is available. This function should notify (for example, by calling SWI_andnHook) the object that writes to this pipe that an empty frame is available.

The notifyWriter function is performed as part of the thread that called PIP_free or PIP_alloc. To avoid problems with recursion, the

notifyWriter function should not directly call any of the PIP module functions for the same pipe.

Tconf Name: notifyWriterFxn Type: Extern

Example: `myPip.notifyWriterFxn =
 prog.extern("writerFxn");`

- ❑ **nwarg0, nwarg1.** Two Arg type arguments for the notifyWriter function.

Tconf Name: notifyWriterArg0 Type: Arg

Tconf Name: notifyWriterArg1 Type: Arg

Example: `myPip.notifyWriterArg0 = 0;`

- ❑ **notifyReader.** The function to execute when a frame of data is available. This function should notify (for example, by calling SWI_andnHook) the object that reads from this pipe that a full frame is ready to be processed.

The notifyReader function is performed as part of the thread that called PIP_put or PIP_get. To avoid problems with recursion, the notifyReader function should not directly call any of the PIP module functions for the same pipe.

Tconf Name: notifyReaderFxn Type: Extern

Example: `myPip.notifyReaderFxn =
 prog.extern("readerFxn");`

- ❑ **nrarg0, nrarg1.** Two Arg type arguments for the notifyReader function.

Tconf Name: notifyReaderArg0 Type: Arg

Tconf Name: notifyReaderArg1 Type: Arg

Example: `myPip.notifyReaderArg0 = 0;`

PIP_alloc*Allocate an empty frame from a pipe*

Important Note: This API is being deprecated and will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the SIO module instead. The PIP module is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

PIP_alloc(pipe);

Parameters

PIP_Handle pipe; /* pipe object handle */

Return Value

Void

Reentrant

no

Description

PIP_alloc allocates an empty frame from the pipe you specify. You can write to this frame and then use PIP_put to put the frame into the pipe.

If empty frames are available after PIP_alloc allocates a frame, PIP_alloc runs the function specified by the notifyWriter property of the PIP object. This function should notify (for example, by calling SWI_andnHook) the object that writes to this pipe that an empty frame is available. The notifyWriter function is performed as part of the thread that calls PIP_free or PIP_alloc. To avoid problems with recursion, the notifyWriter function should not directly call any PIP module functions for the same pipe.

Constraints and Calling Context

- ❑ Before calling PIP_alloc, a function should check the writerNumFrames member of the PIP_Obj structure by calling PIP_getWriterNumFrames to make sure it is greater than 0 (that is, at least one empty frame is available).
- ❑ PIP_alloc can only be called one time before calling PIP_put. You cannot operate on two frames from the same pipe simultaneously.

Note:

Registers used by notifyWriter functions might also be modified.

Example

```
Void copy(HST_Obj *input, HST_Obj *output)
{
    PIP_Obj      *in, *out;
    Uns          *src, *dst;
    Uns          size;

    in = HST_getpipe(input);
    out = HST_getpipe(output);

    if (PIP_getReaderNumFrames(in) == 0 ||
        PIP_getWriterNumFrames(out) == 0) {
        error;
    }

    /* get input data and allocate output frame */
    PIP_get(in);
    PIP_alloc(out);

    /* copy input data to output frame */
    src = PIP_getReaderAddr(in);
    dst = PIP_getWriterAddr(out);
    size = PIP_getReaderSize(in);
    PIP_setWriterSize(out, size);
    for (; size > 0; size--) {
        *dst++ = *src++;
    }

    /* output copied data and free input frame */
    PIP_put(out);
    PIP_free(in);
}
```

The example for HST_getpipe, page 2–175, also uses a pipe with host channel objects.

See Also

PIP_free
PIP_get
PIP_put
HST_getpipe

PIP_free*Recycle a frame that has been read to a pipe*

Important Note: This API is being deprecated and will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the SIO module instead. The PIP module is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

PIP_free(pipe);

Parameters

PIP_Handle pipe; /* pipe object handle */

Return Value

Void

Reentrant

no

Description

PIP_free releases a frame after you have read the frame with PIP_get. The frame is recycled so that PIP_alloc can reuse it.

After PIP_free releases the frame, it runs the function specified by the notifyWriter property of the PIP object. This function should notify (for example, by calling SWI_andnHook) the object that writes to this pipe that an empty frame is available. The notifyWriter function is performed as part of the thread that called PIP_free or PIP_alloc. To avoid problems with recursion, the notifyWriter function should not directly call any of the PIP module functions for the same pipe.

Constraints and Calling Context

- ❑ When called within an HWI, the code sequence calling PIP_free must be either wrapped within an HWI_enter/HWI_exit pair or invoked by the HWI dispatcher.

Note:

Registers used by notifyWriter functions might also be modified.

Example

See the example for PIP_alloc, page 2–315. The example for HST_getpipe, page 2–175, also uses a pipe with host channel objects.

See Also

PIP_alloc
 PIP_get
 PIP_put
 HST_getpipe

PIP_get*Get a full frame from the pipe*

Important Note: This API is being deprecated and will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the SIO module instead. The PIP module is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

PIP_get(pipe);

Parameters

PIP_Handle pipe; /* pipe object handle */

Return Value

Void

Reentrant

no

Description

PIP_get gets a frame from the pipe after some other function puts the frame into the pipe with PIP_put.

If full frames are available after PIP_get gets a frame, PIP_get runs the function specified by the notifyReader property of the PIP object. This function should notify (for example, by calling SWI_andnHook) the object that reads from this pipe that a full frame is available. The notifyReader function is performed as part of the thread that calls PIP_get or PIP_put. To avoid problems with recursion, the notifyReader function should not directly call any PIP module functions for the same pipe.

Constraints and Calling Context

- ❑ Before calling PIP_get, a function should check the readerNumFrames member of the PIP_Obj structure by calling PIP_getReaderNumFrames to make sure it is greater than 0 (that is, at least one full frame is available).
- ❑ PIP_get can only be called one time before calling PIP_free. You cannot operate on two frames from the same pipe simultaneously.

Note: Registers used by notifyReader functions might also be modified.

Example

See the example for PIP_alloc, page 2–315. The example for HST_getpipe, page 2–175, also uses a pipe with host channel objects.

See Also

PIP_alloc
 PIP_free
 PIP_put
 HST_getpipe

PIP_getReaderAddr*Get the value of the readerAddr pointer of the pipe*

Important Note: This API is being deprecated and will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the SIO module instead. The PIP module is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
readerAddr = PIP_getReaderAddr(pipe);
```

Parameters

```
PIP_Handle pipe;    /* pipe object handle */
```

Return Value

```
Ptr          readerAddr
```

Reentrant

```
yes
```

Description

PIP_getReaderAddr is a C function that returns the value of the readerAddr pointer of a pipe object. The readerAddr pointer is normally used following a call to PIP_get, as the address to begin reading from.

Example

```
Void audio(PIP_Obj *in, PIP_Obj *out)
{
    Uns          *src, *dst;
    Uns          size;

    if (PIP_getReaderNumFrames(in) == 0 ||
        PIP_getWriterNumFrames(out) == 0) {
        error;
    }
    PIP_get(in);          /* get input data */
    PIP_alloc(out);      /* allocate output buffer */

    /* copy input data to output buffer */
    src = PIP_getReaderAddr(in);
    dst = PIP_getWriterAddr(out);
    size = PIP_getReaderSize(in);
    PIP_setWriterSize(out, size);
    for (; size > 0; size--) {
        *dst++ = *src++;
    }

    /* output copied data and free input buffer */
    PIP_put(out);
    PIP_free(in);
}
}
```

PIP_getReaderNumFrames*Get the number of pipe frames available for reading*

Important Note: This API is being deprecated and will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the SIO module instead. The PIP module is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
num = PIP_getReaderNumFrames(pipe);
```

Parameters

```
PIP_Handle pipe;    /* pip object handle */
```

Return Value

```
Uns      num;    /* number of filled frames to be read */
```

Reentrant

```
yes
```

Description

PIP_getReaderNumFrames is a C function that returns the value of the readerNumFrames element of a pipe object.

Before a function attempts to read from a pipe it should call PIP_getReaderNumFrames to ensure at least one full frame is available.

Example

See the example for PIP_getReaderAddr, page 2–319.

PIP_getReaderSize*Get the number of words of data in a pipe frame*

Important Note: This API is being deprecated and will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the SIO module instead. The PIP module is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
num = PIP_getReaderSize(pipe);
```

Parameters

```
PIP_Handle pipe;    /* pipe object handle*/
```

Return Value

```
Uns      num;    /* number of words to be read from filled frame */
```

Reentrant

```
yes
```

Description

PIP_getReaderSize is a C function that returns the value of the readerSize element of a pipe object.

As a function reads from a pipe it should use PIP_getReaderSize to determine the number of valid words of data in the pipe frame.

Example

See the example for PIP_getReaderAddr, page 2–319.

PIP_getWriterAddr*Get the value of the writerAddr pointer of the pipe*

Important Note: This API is being deprecated and will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the SIO module instead. The PIP module is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
writerAddr = PIP_getWriterAddr(pipe);
```

Parameters

```
PIP_Handle pipe;    /* pipe object handle */
```

Return Value

```
Ptr          writerAddr;
```

Reentrant

yes

Description

PIP_getWriterAddr is a C function that returns the value of the writerAddr pointer of a pipe object.

The writerAddr pointer is normally used following a call to PIP_alloc, as the address to begin writing to.

Example

See the example for PIP_getReaderAddr, page 2–319.

PIP_getWriterNumFrames*Get number of pipe frames available to be written to*

Important Note: This API is being deprecated and will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the SIO module instead. The PIP module is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
num = PIP_getWriterNumFrames(pipe);
```

Parameters

```
PIP_Handle pipe;    /* pipe object handle*/
```

Return Value

```
Uns      num;    /* number of empty frames to be written */
```

Reentrant

```
yes
```

Description

PIP_getWriterNumFrames is a C function that returns the value of the writerNumFrames element of a pipe object.

Before a function attempts to write to a pipe, it should call PIP_getWriterNumFrames to ensure at least one empty frame is available.

Example

See the example for PIP_getReaderAddr, page 2–319.

PIP_getWriterSize*Get the number of words that can be written to a pipe frame*

Important Note: This API is being deprecated and will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the SIO module instead. The PIP module is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
num = PIP_getWriterSize(pipe);
```

Parameters

```
PIP_Handle pipe;    /* pipe object handle*/
```

Return Value

```
Uns      num;    /* num of words to be written in empty frame */
```

Reentrant

```
yes
```

Description

PIP_getWriterSize is a C function that returns the value of the writerSize element of a pipe object.

As a function writes to a pipe, it can use PIP_getWriterSize to determine the maximum number words that can be written to a pipe frame.

Example

```
if (PIP_getWriterNumFrames(rxPipe) > 0) {
    PIP_alloc(rxPipe);
    DSS_rxPtr = PIP_getWriterAddr(rxPipe);
    DSS_rxCnt = PIP_getWriterSize(rxPipe);
}
```

PIP_peek*Get pipe frame size and address without actually claiming pipe frame*

Important Note: This API is being deprecated and will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the SIO module instead. The PIP module is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

```
framesize = PIP_peek(pipe, addr, rw);
```

Parameters

```
PIP_Handle pipe;    /* pipe object handle */
Ptr        *addr;   /* address of variable with frame address */
Uns        rw;      /* flag to indicate the reader or writer side */
```

Return Value

```
Int        framesize; /* the frame size */
```

Description

PIP_peek can be used before calling PIP_alloc or PIP_get to get the pipe frame size and address without actually claiming the pipe frame.

The pipe parameter is the pipe object handle, the addr parameter is the address of the variable that keeps the retrieved frame address, and the rw parameter is the flag that indicates what side of the pipe PIP_peek is to operate on. If rw is PIP_READER, then PIP_peek operates on the reader side of the pipe. If rw is PIP_WRITER, then PIP_peek operates on the writer side of the pipe.

PIP_getReaderNumFrames or PIP_getWriterNumFrames can be called to ensure that a frame exists before calling PIP_peek, although PIP_peek returns -1 if no pipe frame exists.

PIP_peek returns the frame size, or -1 if no pipe frames are available. If the return value of PIP_peek in frame size is not -1, then *addr is the location of the frame address.

See Also

```
PIP_alloc
PIP_free
PIP_get
PIP_put
PIP_reset
```

PIP_put*Put a full frame into the pipe*

Important Note: This API is being deprecated and will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the SIO module instead. The PIP module is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

PIP_put(pipe);

Parameters

PIP_Handle pipe; /* pipe object handle */

Return Value

Void

Reentrant

no

Description

PIP_put puts a frame into a pipe after you have allocated the frame with PIP_alloc and written data to the frame. The reader can then use PIP_get to get a frame from the pipe.

After PIP_put puts the frame into the pipe, it runs the function specified by the notifyReader property of the PIP object. This function should notify (for example, by calling SWI_andnHook) the object that reads from this pipe that a full frame is ready to be processed. The notifyReader function is performed as part of the thread that called PIP_get or PIP_put. To avoid problems with recursion, the notifyReader function should not directly call any of the PIP module functions for the same pipe.

Note: Registers used by notifyReader functions might also be modified.

Constraints and Calling Context

- ❑ When called within an HWI, the code sequence calling PIP_put must be either wrapped within an HWI_enter/HWI_exit pair or invoked by the HWI dispatcher.

Example

See the example for PIP_alloc, page 2–315. The example for HST_getpipe, page 2–175, also uses a pipe with host channel objects.

See Also

PIP_alloc
 PIP_free
 PIP_get
 HST_getpipe

PIP_reset*Reset all fields of a pipe object to their original values*

Important Note: This API is being deprecated and will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the SIO module instead. The PIP module is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

PIP_reset(pipe);

Parameters

PIP_Handle pipe; /* pipe object handle */

Return Value

Void

Description

PIP_reset resets all fields of a pipe object to their original values.

The pipe parameter specifies the address of the pipe object that is to be reset.

Constraints and Calling Context

- PIP_reset should not be called between the PIP_alloc call and the PIP_put call or between the PIP_get call and the PIP_free call.
- PIP_reset should be called when interrupts are disabled to avoid the race condition.

See Also

PIP_alloc
 PIP_free
 PIP_get
 PIP_peek
 PIP_put

PIP_setWriterSize*Set the number of valid words written to a pipe frame*

Important Note: This API is being deprecated and will no longer be supported in the next major release of DSP/BIOS. We recommend that you use the SIO module instead. The PIP module is still supported in DSP/BIOS 5.32 and will be supported in any patch releases or minor enhancements to DSP/BIOS 5.32.

C Interface**Syntax**

PIP_setWriterSize(pipe, size);

ParametersPIP_Handle pipe; /* pipe object handle */
Uns size; /* size to be set */**Return Value**

Void

Reentrant

no

Description

PIP_setWriterSize is a C function that sets the value of the writerSize element of a pipe object.

As a function writes to a pipe, it can use PIP_setWriterSize to indicate the number of valid words being written to a pipe frame.

Example

See the example for PIP_getReaderAddr, page 2–319.

2.21 POOL Module

The POOL module describes the interface that allocators must provide.

Functions

None; this module describes an interface to be implemented by allocators

Constants, Types, and Structures

```
POOL_Config POOL_config;

typedef struct POOL_Config {
    POOL_Obj *allocators;    /* Array of allocators */
    Uint16    numAllocators; /* Num of allocators */
} POOL_Config;

typedef struct POOL_Obj {
    POOL_Init  initFxn; /* Allocator init function */
    POOL_Fxns *fxns;    /* Interface functions */
    Ptr        params;  /* Setup parameters */
    Ptr        object;  /* Allocator's object */
} POOL_Obj, *POOL_Handle;
```

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the POOL Manager Properties heading. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default (Enum Options)
ENABLEPOOL	Bool	false

Description

The POOL module describes standard interface functions that allocators must provide. The allocator interface functions are called internally by the MSGQ module and not by user applications. A simple static allocator, called STATICPOOL, is provided with DSP/BIOS. Other allocators can be implemented by following the standard interface.

Note: This document does not discuss how to write an allocator. Information about designing allocators will be provided in a future document.

All messages sent via the MSGQ module must be allocated by an allocator. The allocator determines where and how the memory for the message is allocated.

An allocator is an instance of an implementation of the allocator interface. An application may instantiate one or more instances of an allocator.

An application can use multiple allocators. The purpose of having multiple allocators is to allow an application to regulate its message usage. For example, an application can allocate critical messages from one pool of fast on-chip memory and non-critical messages from another pool of slower external memory.

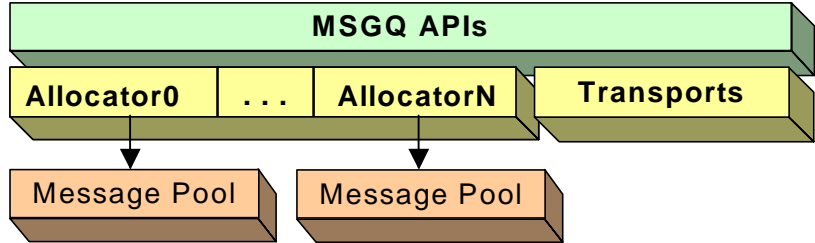


Figure 2-5. Allocators and Message Pools

Static Configuration

In order to use an allocator and the POOL module, you must statically configure the following:

- ❑ ENABLEPOOL property of the POOL module using Tconf (see “POOL Manager Properties” on page 2-333)
- ❑ POOL_config variable in application code (see below)

An application must provide a filled in POOL_config variable if it uses one or more allocators.

```
POOL_Config POOL_config;
```

Where the POOL_Config structure has the following structure:

```
typedef struct POOL_Config {
    POOL_Obj *allocators; /* Array of allocators */
    Uint16 numAllocators; /* Num of allocators */
} POOL_Config;
```

The fields in this structure are as follows:

Field	Type	Description
allocators	POOL_Obj	Array of allocator objects
numAllocators	Uint16	Number of allocators in the allocator array.

If the POOL module is enabled via Tconf and the application does not provide the POOL_config variable, the application cannot be linked successfully.

The following is the POOL_Obj structure:

```
typedef struct POOL_Obj {
    POOL_Init  initFxn; /* Allocator init function */
    POOL_Fxns *fxns;   /* Interface functions */
    Ptr        params; /* Setup parameters */
    Ptr        object; /* Allocator's object */
} POOL_Obj, *POOL_Handle;
```

The fields in the POOL_Obj structure are as follows:

Field	Type	Description
initFxn	POOL_Init	Initialization function for this allocator. This function will be called during DSP/BIOS initialization. More explicitly it is called before main().
fxns	POOL_Fxns *	Pointer to the allocator's interface functions.
params	Ptr	Pointer to the allocator's parameters. This field is allocator-specific. Please see the documentation provided with your allocator for a description of this field.
object	Ptr	State information needed by the allocator. This field is initialized and managed by the allocator. See the allocator documentation to determine how to specify this field.

One allocator implementation (STATICPOOL) is shipped with DSP/BIOS. Additional allocator implementations can be created by application writers.

STATICPOOL Allocator

The STATICPOOL allocator takes a user-specified buffer and allocates fixed-size messages from the buffer. The following are its configuration parameters:

```
typedef struct STATICPOOL_Params {
    Ptr        addr;
    size_t     length;
    size_t     bufferSize;
} STATICPOOL_Params;
```

The following table describes the fields in this structure:

Field	Type	Description
addr	Ptr	User supplied block of memory for allocating messages from. The address will be aligned on an 8 MADU boundary for correct structure alignment on all ISAs. If there is a chance the buffer is not aligned, allow at least 7 extra MADUs of space to allow room for the alignment. You can use the DATA_ALIGN pragma to force alignment yourself.
length	size_t	Size of the block of memory pointed to by addr.
bufferSize	size_t	Size of the buffers in the block of memory. The bufferSize must be a multiple of 8 to allow correct structure alignment.

The following figure shows how the fields in STATICPOOL_Params define the layout of the buffer:

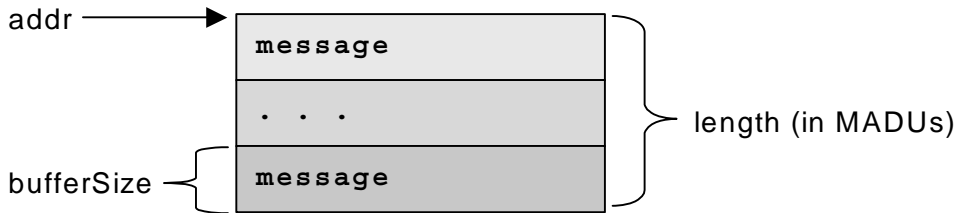


Figure 2-6. Buffer Layout as Defined by STATICPOOL_Params

Since the STATICPOOL buffer is generally used in static systems, the application must provide the memory for the STATICPOOL_Obj. So the object field of the POOL_Obj must be set to STATICPOOL_Obj instead of NULL.

The following is an example of an application that has two allocators (two instances of the STATICPOOL implementation).

```
#define NUMMSGS 8 /* Number of msgs per allocator */

/* Size of messages in the two allocators. Must be a
 * multiple of 8 as required by static allocator. */
#define MSGSIZE0 64
#define MSGSIZE1 128

enum { /* Allocator ID and number of allocators */
    MQASTATICID0 = 0,
    MQASTATICID1,
    NUMALLOCATORS
};
```

```

#pragma DATA_ALIGN(staticBuf0, 8) /* As required */
#pragma DATA_ALIGN(staticBuf1, 8) /* As required */
static Char staticBuf0[MSGSIZE0 * NUMMSGs];
static Char staticBuf1[MSGSIZE1 * NUMMSGs];

static MQASTATIC_Params poolParams0 = {staticBuf0,
    sizeof(staticBuf0), MSGSIZE0};
static MQASTATIC_Params poolParams1 = {staticBuf1,
    sizeof(staticBuf1), MSGSIZE1};

static STATICPOOL_Obj poolObj0, poolObj1;

static POOL_Obj allocators[NumAllocators] =
    {{STATICPOOL_init, (POOL_Fxns *)&STATICPOOL_FXNS,
    &poolParams0, &poolObj0}
    {{STATICPOOL_init, (POOL_Fxns *)&STATICPOOL_FXNS,
    &poolParams1, &poolObj1}}};

POOL_Config POOL_config =
    {allocators, NumAllocators};

```

POOL Manager Properties

To configure the POOL manager, the POOL_Config structure must be defined in the application code. See “Static Configuration” on page 2-330.

The following global property must also be set in order to use the POOL module:

- ❑ **Enable POOL Manager.** If ENABLEPOOL is TRUE, each allocator specified in the POOL_config structure (see “Static Configuration” on page 2-330) is initialized and opened.

Tconf Name: ENABLEPOOL

Type: Bool

Example: bios.POOL.ENABLEPOOL = true;

2.22 PRD Module

The PRD module is the periodic function manager.

Functions

- PRD_getticks. Get the current tick count.
- PRD_start. Arm a periodic function for one-time execution.
- PRD_stop. Stop a periodic function from execution.
- PRD_tick. Advance tick counter, dispatch periodic functions.

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the PRD Manager Properties and PRD Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default
OBJMEMSEG	Reference	prog.get("IDRAM")
USECLK	Bool	true
MICROSECONDS	Int16	1000.0

Instance Configuration Parameters

Name	Type	Default (Enum Options)
comment	String	"<add comments here>"
period	Int16	32767
mode	EnumString	"continuous" ("one-shot")
fxn	Extern	prog.extern("FXN_F_nop")
arg0	Arg	0
arg1	Arg	0
order	Int16	0

Description

While some applications can schedule functions based on a real-time clock, many applications need to schedule functions based on I/O availability or some other programmatic event.

The PRD module allows you to create PRD objects that schedule periodic execution of program functions. The period can be driven by the CLK module or by calls to PRD_tick whenever a specific event occurs.

There can be several PRD objects, but all are driven by the same period counter. Each PRD object can execute its functions at different intervals based on the period counter.

- ❑ **To schedule functions based on a real-time clock.** Set the clock interrupt rate you want to use in the CLK Object Properties. Set the "Use On-chip Clock (CLK)" property of the PRD Manager Properties to true. Set the frequency of execution (in number of clock interrupt ticks) in the period property for the individual period object.
- ❑ **To schedule functions based on I/O availability or some other event.** Set the "Use On-chip Clock (CLK)" property of the PRD Manager Properties to false. Set the frequency of execution (in number of ticks) in the period property for the individual period object. Your program should call PRD_tick to increment the tick counter.

The function executed by a PRD object is statically defined in the configuration. PRD functions are called from the context of the function run by the PRD_swi SWI object. PRD functions can be written in C or assembly and must follow the C calling conventions described in the compiler manual.

The PRD module uses a SWI object (called PRD_swi by default) which itself is triggered on a periodic basis to manage execution of period objects. Normally, this SWI object should have the highest SWI priority to allow this SWI to be performed once per tick. This SWI is automatically created (or deleted) by the configuration if one or more (or no) PRD objects exist. The total time required to perform all PRD functions must be less than the number of microseconds between ticks. Any more lengthy processing should be scheduled as a separate SWI, TSK, or IDL thread.

See the *Code Composer Studio* online tutorial for an example that demonstrates the interaction between the PRD module and the SWI module.

When the PRD_swi object runs its function, the following actions occur:

```
for ("Loop through period objects") {
    if ("time for a periodic function")
        "run that periodic function";
}
```

PRD Manager Properties

The DSP/BIOS Periodic Function Manager allows the creation of an arbitrary number of objects that encapsulate a function, two arguments, and a period specifying the time between successive invocations of the function. The period is expressed in ticks, and a tick is defined as a single invocation of the PRD_tick operation. The time between successive invocations of PRD_tick defines the period represented by a tick.

The following global properties can be set for the PRD module in the PRD Manager Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **Object Memory.** The memory segment containing the PRD objects.
Tconf Name: OBJMEMSEG Type: Reference
Example: `bios.PRD.OBJMEMSEG = prog.get("myMEM");`
- ❑ **Use CLK Manager to drive PRD.** If this property is set to true, the on-device timer hardware (managed by the CLK Module) is used to advance the tick count; otherwise, the application must invoke PRD_tick on a periodic basis. If the CLK module is used to drive PRDs, the ticks are equal to the low-resolution time increment rate.
Tconf Name: USECLK Type: Bool
Example: `bios.PRD.USECLK = true;`
- ❑ **Microseconds/Tick.** The number of microseconds between ticks. If the "Use CLK Manager to drive PRD field" property above is set to true, this property is automatically set by the CLK module; otherwise, you must explicitly set this property. The total time required to perform all PRD functions must be less than the number of microseconds between ticks.
Tconf Name: MICROSECONDS Type: Int16
Example: `bios.PRD.MICROSECONDS = 1000.0;`

PRD Object Properties

To create a PRD object in a configuration script, use the following syntax. The Tconf examples that follow assume the object has been created as shown here.

```
var myPrd = bios.PRD.create("myPrd");
```

If you cannot create a new PRD object (an error occurs or the Insert PRD item is inactive in the DSP/BIOS Configuration Tool), increase the Stack Size property in the MEM Manager Properties before adding a PRD object.

The following properties can be set for a PRD object in the PRD Object Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **comment.** Type a comment to identify this PRD object.
Tconf Name: comment Type: String
Example: `myPrd.comment = "my PRD";`
- ❑ **period (ticks).** The function executes after this number of ticks have elapsed.
Tconf Name: period Type: Int16
Example: `myPrd.period = 32767;`

- ❑ **mode.** If "continuous" is used, the function executes every "period" number of ticks. If "one-shot" is used, the function executes just once after "period" ticks.

Tconf Name: mode Type: EnumString

Options: "continuous", "one-shot"

Example: `myPrd.mode = "continuous";`
- ❑ **function.** The function to be executed. The total time required to perform all PRD functions must be less than the number of microseconds between ticks.

Tconf Name: fxn Type: Extern

Example: `myPrd.fxn = prog.extern("prdFxn");`
- ❑ **arg0, arg1.** Two Arg type arguments for the user-specified function above.

Tconf Name: arg0 Type: Arg

Tconf Name: arg1 Type: Arg

Example: `myPrd.arg0 = 0;`
- ❑ **period (ms).** The number of milliseconds represented by the period specified above. This is an informational property only.

Tconf Name: N/A
- ❑ **order.** Set this property to all PRD objects so that the numbers match the sequence in which PRD functions should be executed.

Tconf Name: order Type: Int16

Example: `myPrd.order = 2;`

PRD_getticks*Get the current tick count***C Interface**

Syntax num = PRD_getticks();

Parameters Void

Return Value LgUns num /* current tick counter */

Reentrant yes

Description PRD_getticks returns the current period tick count as a 32-bit value.

If the periodic functions are being driven by the on-device timer, the tick value is the number of low resolution clock ticks that have occurred since the program started running. When the number of ticks reaches the maximum value that can be stored in 32 bits, the value wraps back to 0. See the CLK Module, page 2–51, for more details.

If the periodic functions are being driven programmatically, the tick value is the number of times PRD_tick has been called.

Example

```
/* ===== showTicks ===== */
Void showTicks
{
    LOG_printf(&trace, "ticks = %d", PRD_getticks());
}
```

See Also

PRD_start
PRD_tick
CLK_gethetime
CLK_gettime
STS_delta

PRD_start*Arm a periodic function for one-shot execution***C Interface**

Syntax PRD_start(prd);

Parameters PRD_Handle prd; /* prd object handle*/

Return Value Void


Reentrant no

Description PRD_start starts a period object that has its mode property set to one-shot in the configuration. Unlike PRD objects that are configured as continuous, one-shot PRD objects do not automatically continue to run. A one-shot PRD object runs its function only after the specified number of ticks have occurred after a call to PRD_start.

For example, you might have a function that should be executed a certain number of periodic ticks after some condition is met.

When you use PRD_start to start a period object, the exact time the function runs can vary by nearly one tick cycle. As Figure 2-7 shows, PRD ticks occur at a fixed rate and the call to PRD_start can occur at any point between ticks

Figure 2-7. PRD Tick Cycles

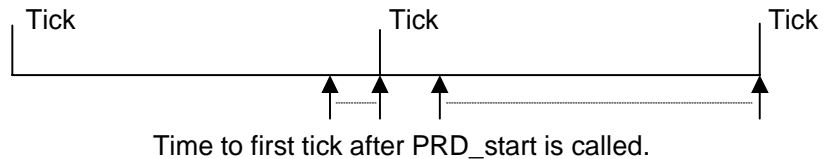

If PRD_start is called again before the period for the object has elapsed, the object's tick count is reset. The PRD object does not run until its "period" number of ticks have elapsed.

Example

```
/* ===== startPRD ===== */
Void startPrd(Int periodID)
{
    if ("condition met") {
        PRD_start(&periodID);
    }
}
```

See Also

PRD_tick
PRD_getticks

PRD_stop*Stop a period object to prevent its function execution***C Interface**

Syntax	PRD_stop(prd);
Parameters	PRD_Handle prd; /* prd object handle*/
Return Value	Void

Reentrant no

Description PRD_stop stops a period object to prevent its function execution. In most cases, PRD_stop is used to stop a period object that has its mode property set to one-shot in the configuration.

Unlike PRD objects that are configured as continuous, one-shot PRD objects do not automatically continue to run. A one-shot PRD object runs its function only after the specified numbers of ticks have occurred after a call to PRD_start.

PRD_stop is the way to stop those one-shot PRD objects once started and before their period counters have run out.

Example PRD_stop(&prd);

See Also PRD_getticks
PRD_start
PRD_tick

PRD_tick*Advance tick counter, enable periodic functions***C Interface****Syntax** PRD_tick();**Parameters** Void**Return Value** Void**Reentrant** no**Description** PRD_tick advances the period counter by one tick. Unless you are driving PRD functions using the on-device clock, PRD objects execute their functions at intervals based on this counter.

For example, an HWI could perform PRD_tick to notify a periodic function when data is available for processing.

Constraints and Calling Context

- ❑ All the registers that are modified by this API should be saved and restored, before and after the API is invoked, respectively.
- ❑ When called within an HWI, the code sequence calling PRD_tick must be either wrapped within an HWI_enter/HWI_exit pair or invoked by the HWI dispatcher.
- ❑ Interrupts need to be disabled before calling PRD_tick.

See AlsoPRD_start
PRD_getticks

2.23 QUE Module

The QUE module is the atomic queue manager.

Functions

- ❑ `QUE_create`. Create an empty queue.
- ❑ `QUE_delete`. Delete an empty queue.
- ❑ `QUE_dequeue`. Remove from front of queue (non-atomically).
- ❑ `QUE_empty`. Test for an empty queue.
- ❑ `QUE_enqueue`. Insert at end of queue (non-atomically).
- ❑ `QUE_get`. Remove element from front of queue (atomically)
- ❑ `QUE_head`. Return element at front of queue.
- ❑ `QUE_insert`. Insert in middle of queue (non-atomically).
- ❑ `QUE_new`. Set a queue to be empty.
- ❑ `QUE_next`. Return next element in queue (non-atomically).
- ❑ `QUE_prev`. Return previous element in queue (non-atomically).
- ❑ `QUE_put`. Put element at end of queue (atomically).
- ❑ `QUE_remove`. Remove from middle of queue (non-atomically).

Constants, Types, and Structures

```
typedef struct QUE_Obj *QUE_Handle; /* queue obj handle */
struct QUE_Attrs{ /* queue attributes */
    Int dummy; /* DUMMY */
};

QUE_Attrs QUE_ATTRS = { /* default attribute values */
    0,
};

typedef QUE_Elem; /* queue element */
```

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the QUE Manager Properties and QUE Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default
OBJMEMSEG	Reference	prog.get("IDRAM")

Instance Configuration Parameters

Name	Type	Default
comment	String	"<add comments here>"

Description

The QUE module makes available a set of functions that manipulate queue objects accessed through handles of type QUE_Handle. Each queue contains an ordered sequence of zero or more elements referenced through variables of type QUE_Elem, which are generally embedded as the first field within a structure. The QUE_Elem item is used as an internal pointer.

For example, the DEV_Frame structure, which is used by the SIO Module and DEV Module to enqueue and dequeue I/O buffers, contains a field of type QUE_Elem:

```

struct DEV_Frame { /* frame object */
    QUE_Elem link; /* must be first field! */
    Ptr addr; /* buffer address */
    size_t size; /* buffer size */
    Arg misc; /* reserved for driver */
    Arg arg; /* user argument */
    Uns cmd; /* mini-driver command */
    Int status; /* status of command */
} DEV_Frame;
    
```

Many QUE module functions either are passed or return a pointer to an element having the structure defined for QUE elements.

The functions QUE_put and QUE_get are atomic in that they manipulate the queue with interrupts disabled. These functions can therefore be used to safely share queues between tasks, or between tasks and SWIs or HWIs. All other QUE functions should only be called by tasks, or by tasks and SWIs or HWIs when they are used in conjunction with some mutual exclusion mechanism (for example, SEM_pend / SEM_post, TSK_disable / TSK_enable).

Once a queue has been created, use MEM_alloc to allocate elements for the queue.

QUE Manager Properties

The following global property can be set for the QUE module in the QUE Manager Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- Object Memory.** The memory segment that contains the QUE objects.
 Tconf Name: OBJMEMSEG Type: Reference
 Example: `bios.QUE.OBJMEMSEG = prog.get("myMEM");`

QUE Object Properties

To create a QUE object in a configuration script, use the following syntax. The Tconf examples that follow assume the object has been created as shown here.

```
var myQue = bios.QUE.create("myQue");
```

The following property can be set for a QUE object in the PRD Object Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **comment.** Type a comment to identify this QUE object.

Tconf Name: comment

Type: String

Example: `myQue.comment = "my QUE";`

QUE_create*Create an empty queue***C Interface**

Syntax `queue = QUE_create(attrs);`

Parameters `QUE_Attrs *attrs; /* pointer to queue attributes */`

Return Value `QUE_Handle queue; /* handle for new queue object */`

Description

QUE_create creates a new queue which is initially empty. If successful, QUE_create returns the handle of the new queue. If unsuccessful, QUE_create returns NULL unless it aborts (for example, because it directly or indirectly calls SYS_error, and SYS_error is configured to abort).

If attrs is NULL, the new queue is assigned a default set of attributes. Otherwise, the queue's attributes are specified through a structure of type QUE_Attrs.

Note:

At present, no attributes are supported for queue objects, and the type QUE_Attrs is defined as a dummy structure.

All default attribute values are contained in the constant QUE_ATTRS, which can be assigned to a variable of type QUE_Attrs prior to calling QUE_create.

You can also create a queue by declaring a variable of type QUE_Obj and initializing the queue with QUE_new.

QUE_create calls MEM_alloc to dynamically create the object's data structure. MEM_alloc must acquire a lock to the memory before proceeding. If another thread already holds a lock to the memory, then there is a context switch. The segment from which the object is allocated is described by the DSP/BIOS objects property in the MEM Module, page 2-243.

Constraints and Calling Context

- QUE_create cannot be called from a SWI or HWI.
- You can reduce the size of your application program by creating objects with the Tconf rather than using the XXX_create functions.

See Also

MEM_alloc
 QUE_empty
 QUE_delete
 SYS_error

QUE_delete*Delete an empty queue***C Interface**

Syntax	QUE_delete(queue);
Parameters	QUE_Handle queue; /* queue handle */
Return Value	Void

Description QUE_delete uses MEM_free to free the queue object referenced by queue.

QUE_delete calls MEM_free to delete the QUE object. MEM_free must acquire a lock to the memory before proceeding. If another task already holds a lock to the memory, then there is a context switch.

Constraints and Calling Context

- ❑ queue must be empty.
- ❑ QUE_delete cannot be called from a SWI or HWI.
- ❑ No check is performed to prevent QUE_delete from being used on a statically-created object. If a program attempts to delete a queue object that was created using Tconf, SYS_error is called.

See Also

QUE_create
QUE_empty

QUE_dequeue*Remove from front of queue (non-atomically)***C Interface**

Syntax `elem = QUE_dequeue(queue);`

Parameters `QUE_Handle queue;` /* queue object handle */

Return Value `Ptr elem;` /* pointer to former first element */

Description `QUE_dequeue` removes the element from the front of `queue` and returns `elem`.

The return value, `elem`, is a pointer to the element at the front of the `QUE`. Such elements have a structure defined similarly to that in the example in the `QUE Module` topic. The first field in the structure must be of type `QUE_Elem` and is used as an internal pointer.

Calling `QUE_dequeue` with an empty queue returns the queue itself. However, `QUE_dequeue` is non-atomic. Therefore, the method described for `QUE_get` of checking to see if a queue is empty and returning the first element otherwise is non-atomic.

Note:

You should use `QUE_get` instead of `QUE_dequeue` if multiple threads share a queue. `QUE_get` runs atomically and is never interrupted; `QUE_dequeue` performs the same action but runs non-atomically. You can use `QUE_dequeue` if you disable interrupts or use a synchronization mechanism such as `LCK` or `SEM` to protect the queue. An HWI or task that preempts `QUE_dequeue` and operates on the same queue can corrupt the data structure.

`QUE_dequeue` is somewhat faster than `QUE_get`, but you should not use it unless you know your `QUE` operation cannot be preempted by another thread that operates on the same queue.

See Also `QUE_get`

QUE_empty

Test for an empty queue

C Interface

Syntax empty = QUE_empty(queue);

Parameters QUE_Handle queue; /* queue object handle */

Return Value Bool empty; /* TRUE if queue is empty */

Description QUE_empty returns TRUE if there are no elements in queue, and FALSE otherwise.

See Also QUE_get

QUE_enqueue*Insert at end of queue (non-atomically)***C Interface****Syntax**

QUE_enqueue(queue, elem);

ParametersQUE_Handle queue; /* queue object handle */
Ptr elem; /* pointer to queue element */**Return Value**

Void

Description

QUE_enqueue inserts elem at the end of queue.

The elem parameter must be a pointer to an element to be placed in the QUE. Such elements have a structure defined similarly to that in the example in the QUE Module topic. The first field in the structure must be of type QUE_Elem and is used as an internal pointer.

Note:

Use QUE_put instead of QUE_enqueue if multiple threads share a queue. QUE_put is never interrupted; QUE_enqueue performs the same action but runs non-atomically. You can use QUE_enqueue if you disable interrupts or use a synchronization mechanism such as LCK or SEM to protect the queue.

QUE_enqueue is somewhat faster than QUE_put, but you should not use it unless you know your QUE operation cannot be preempted by another thread that operates on the same queue.

See Also

QUE_put

QUE_get*Get element from front of queue (atomically)***C Interface****Syntax**`elem = QUE_get(queue);`**Parameters**`QUE_Handle queue; /* queue object handle */`**Return Value**`Void *elem; /* pointer to former first element */`**Description**

QUE_get removes the element from the front of queue and returns elem.

The return value, elem, is a pointer to the element at the front of the QUE. Such elements have a structure defined similarly to that in the example in the QUE Module topic. The first field in the structure must be of type QUE_Elem and is used as an internal pointer.

Since QUE_get manipulates the queue with interrupts disabled, the queue can be shared by multiple tasks, or by tasks and SWIs or HWIs.

Calling QUE_get with an empty queue returns the queue itself. This provides a means for using a single atomic action to check if a queue is empty, and to remove and return the first element if it is not empty:

```
if ((QUE_Handle) (elem = QUE_get(q)) != q)
    ` process elem `
```

Note:

Use QUE_get instead of QUE_dequeue if multiple threads share a queue. QUE_get is never interrupted; QUE_dequeue performs the same action but runs non-atomically. You can use QUE_dequeue if you disable interrupts or use a synchronization mechanism such as LCK or SEM to protect the queue.

QUE_dequeue is somewhat faster than QUE_get, but you should not use it unless you know your QUE operation cannot be preempted by another thread that operates on the same queue.

See Also

QUE_create
QUE_empty
QUE_put

QUE_head*Return element at front of queue***C Interface**

Syntax `elem = QUE_head(queue);`

Parameters `QUE_Handle queue; /* queue object handle */`

Return Value `QUE_Elem *elem; /* pointer to first element */`

Description `QUE_head` returns a pointer to the element at the front of queue. The element is not removed from the queue.

The return value, `elem`, is a pointer to the element at the front of the QUE. Such elements have a structure defined similarly to that in the example in the QUE Module topic. The first field in the structure must be of type `QUE_Elem` and is used as an internal pointer.

Calling `QUE_head` with an empty queue returns the queue itself.

See Also

`QUE_create`
`QUE_empty`
`QUE_put`

QUE_insert*Insert in middle of queue (non-atomically)***C Interface****Syntax**

QUE_insert(qelem, elem);

Parameters

Ptr qelem; /* element already in queue */
Ptr elem; /* element to be inserted in queue */

Return Value

Void

Description

QUE_insert inserts elem in the queue in front of qelem.

The qelem parameter is a pointer to an existing element of the QUE. The elem parameter is a pointer to an element to be placed in the QUE. Such elements have a structure defined similarly to that in the example in the QUE Module topic. The first field in the structure must be of type QUE_Elem and is used as an internal pointer.

Note:

If the queue is shared by multiple tasks, or tasks and SWIs or HWIs, QUE_insert should be used in conjunction with some mutual exclusion mechanism (for example, SEM_pend/SEM_post, TSK_disable/TSK_enable).

See Also

QUE_head
QUE_next
QUE_prev
QUE_remove

QUE_new*Set a queue to be empty***C Interface****Syntax**

QUE_new(queue);

Parameters

QUE_Handle queue; /* pointer to queue object */

Return Value

Void

Description

QUE_new adjusts a queue object to make the queue empty. This operation is not atomic. A typical use of QUE_new is to initialize a queue object that has been statically declared instead of being created with QUE_create. Note that if the queue is not empty, the element(s) in the queue are not freed or otherwise handled, but are simply abandoned.

If you created a queue by declaring a variable of type QUE_Obj, you can initialize the queue with QUE_new.

See Also

QUE_create
QUE_delete
QUE_empty

QUE_next*Return next element in queue (non-atomically)***C Interface**

Syntax `elem = QUE_next(qelem);`

Parameters Ptr `qelem;` */* element in queue */*

Return Value Ptr `elem;` */* next element in queue */*

Description

QUE_next returns elem which points to the element in the queue after qelem.

The qelem parameter is a pointer to an existing element of the QUE. The return value, elem, is a pointer to the next element in the QUE. Such elements have a structure defined similarly to that in the example in the QUE Module topic. The first field in the structure must be of type QUE_Elem and is used as an internal pointer.

Since QUE queues are implemented as doubly linked lists with a dummy node at the head, it is possible for QUE_next to return a pointer to the queue itself. Be careful not to call QUE_remove(elem) in this case.

Note:

If the queue is shared by multiple tasks, or tasks and SWIs or HWIs, QUE_next should be used in conjunction with some mutual exclusion mechanism (for example, SEM_pend/SEM_post, TSK_disable/TSK_enable).

See Also

QUE_get
QUE_insert
QUE_prev
QUE_remove

QUE_prev*Return previous element in queue (non-atomically)***C Interface**

Syntax elem = QUE_prev(qelem);

Parameters Ptr qelem; /* element in queue */

Return Value Ptr elem; /* previous element in queue */

Description QUE_prev returns elem which points to the element in the queue before qelem.

The qelem parameter is a pointer to an existing element of the QUE. The return value, elem, is a pointer to the previous element in the QUE. Such elements have a structure defined similarly to that in the example in the QUE Module topic. The first field in the structure must be of type QUE_Elem and is used as an internal pointer.

Since QUE queues are implemented as doubly linked lists with a dummy node at the head, it is possible for QUE_prev to return a pointer to the queue itself. Be careful not to call QUE_remove(elem) in this case.

Note:

If the queue is shared by multiple tasks, or tasks and SWIs or HWIs, QUE_prev should be used in conjunction with some mutual exclusion mechanism (for example, SEM_pend/SEM_post, TSK_disable/TSK_enable).

See Also

QUE_head
 QUE_insert
 QUE_next
 QUE_remove

QUE_put*Put element at end of queue (atomically)***C Interface****Syntax**

QUE_put(queue, elem);

ParametersQUE_Handle queue; /* queue object handle */
Void *elem; /* pointer to new queue element */**Return Value**

Void

Description

QUE_put puts elem at the end of queue.

The elem parameter is a pointer to an element to be placed at the end of the QUE. Such elements have a structure defined similarly to that in the example in the QUE Module topic. The first field in the structure must be of type QUE_Elem and is used as an internal pointer.

Since QUE_put manipulates queues with interrupts disabled, queues can be shared by multiple tasks, or by tasks and SWIs or HWIs.

Note:

Use QUE_put instead of QUE_enqueue if multiple threads share a queue. QUE_put is never interrupted; QUE_enqueue performs the same action but runs non-atomically. You can use QUE_enqueue if you disable interrupts or use a synchronization mechanism such as LCK or SEM to protect the queue.

QUE_enqueue is somewhat faster than QUE_put, but you should not use it unless you know your QUE operation cannot be preempted by another thread that operates on the same queue.

See AlsoQUE_get
QUE_head

QUE_remove*Remove from middle of queue (non-atomically)***C Interface**

Syntax	QUE_remove(qelem);
Parameters	Ptr qelem; /* element in queue */
Return Value	Void

Description QUE_remove removes qelem from the queue.

The qelem parameter is a pointer to an existing element to be removed from the QUE. Such elements have a structure defined similarly to that in the example in the QUE Module topic. The first field in the structure must be of type QUE_Elem and is used as an internal pointer.

Since QUE queues are implemented as doubly linked lists with a dummy node at the head, be careful not to remove the header node. This can happen when qelem is the return value of QUE_next or QUE_prev. The following code sample shows how qelem should be verified before calling QUE_remove.

```

QUE_Elem *qelem;

/* get pointer to first element in the queue */
qelem = QUE_head(queue);

/* scan entire queue for desired element */
while (qelem != queue) {
    if (' qelem is the elem we're looking for ') {
        break;
    }
    qelem = QUE_next(qelem);
}
/* make sure qelem is not the queue itself */
if (qelem != queue) {
    QUE_remove(qelem);
}

```

Note:

If the queue is shared by multiple tasks, or tasks and SWIs or HWIs, QUE_remove should be used in conjunction with some mutual exclusion mechanism (for example, SEM_pend/SEM_post, TSK_disable/ TSK_enable).

**Constraints and
Calling Context**

QUE_remove should not be called when qelem is equal to the queue itself.

See Also

QUE_head
QUE_insert
QUE_next
QUE_prev

2.24 RTDX Module

The RTDX modules manage the real-time data exchange settings.

RTDX Data Declaration Macros

- RTDX_CreateInputChannel
- RTDX_CreateOutputChannel

Function Macros

- RTDX_disableInput
- RTDX_disableOutput
- RTDX_enableInput
- RTDX_enableOutput
- RTDX_read
- RTDX_readNB
- RTDX_sizeofInput
- RTDX_write

Channel Test Macros

- RTDX_channelBusy
- RTDX_isInputEnabled
- RTDX_isOutputEnabled

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the RTDX Manager Properties and RTDX Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default (Enum Options)
ENABLERTDX	Bool	true
MODE	EnumString	"JTAG" ("HSRTDX", "Simulator")
RTDXDATASEG	Reference	prog.get("IDRAM")
BUFSIZE	Int16	1032
INTERRUPTMASK	Int16	0x00000000

Instance Configuration Parameters

Name	Type	Default (Enum Options)
comment	String	"<add comments here>"
channelMode	EnumString	"output" ("input")

Description

The RTDX module provides the data types and functions for:

- Sending data from the target to the host.
- Sending data from the host to the target.

Data channels are represented by global structures. A data channel can be used for input or output, but not both. The contents of an input or output structure are not known to the user. A channel structure has two states: enabled and disabled. When a channel is enabled, any data written to the channel is sent to the host. Channels are initially disabled.

The RTDX assembly interface, *rtdx.i*, is a macro interface file that can be used to interface to RTDX at the assembly level.

RTDX Manager Properties

The following target configuration properties can be set for the RTDX module in the RTDX Manager Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- Enable Real-Time Data Exchange (RTDX).** This property should be set to true if you want to link RTDX support into your application.

Tconf Name: ENABLERTDX Type: Bool

Example: `bios.RTDX.ENABLERTDX = true;`
- RTDX Mode.** Select the port configuration mode RTDX should use to establish communication between the host and target. The default is JTAG for most targets. Set this to simulator if you use a simulator. The HS-RTDX emulation technology is also available. If this property is set incorrectly, a message says "RTDX target application does not match emulation protocol" when you load the program.

Tconf Name: MODE Type: EnumString

Options: "JTAG", "HSRTDX", "Simulator"

Example: `bios.RTDX.MODE = "JTAG";`
- RTDX Data Segment (.rtdx_data).** The memory segment used for buffering target-to-host data transfers. The RTDX message buffer and state variables are placed in this segment.

Tconf Name: RTDXDATASEG Type: Reference

Example: `bios.RTDX.RTDXDATASEG = prog.get("myMEM");`
- RTDX Buffer Size (MADUs).** The size of the RTDX target-to-host message buffer, in minimum addressable data units (MADUs). The default size is 1032 to accommodate a 1024-byte block and two control words. HST channels using RTDX are limited by this value.

Tconf Name: BUFSIZE Type: Int16

Example: `bios.RTDX.BUFSIZE = 1032;`
- RTDX Interrupt Mask.** This mask interrupts to be temporarily disabled inside critical RTDX sections. The default value of zero (0) disables all interrupts within critical RTDX sections. Such sections are short (usually <100 cycles). Disabling interrupts also temporarily disables other RTDX clients and prevents other RTDX function calls.

You should allow all interrupts to be disabled inside critical RTDX sections if your application makes any RTDX calls from SWI or TSK threads. If your application does not make RTDX calls from SWI or TSK threads, you may modify bits in this mask to enable specific high-priority interrupts. See the RTDX documentation for details.

Tconf Name: INTERRUPTMASK Type: Int16

Example: `bios.RTDX.INTERRUPTMASK = 0x00000000;`

RTDX Object Properties

To create an RTDX object in a configuration script, use the following syntax. The Tconf examples that follow assume the object has been created as shown here.

```
var myRtdx = bios.RTDX.create("myRtdx");
```

The following properties can be set for an RTDX object in the RTDX Object Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- comment.** Type a comment to identify this RTDX object.
Tconf Name: comment Type: String
Example: `myRtdx.comment = "my RTDX";`
- Channel Mode.** Select output if the RTDX channel handles output from the DSP to the host. Select input if the RTDX channel handles input to the DSP from the host.
Tconf Name: channelMode Type: EnumString
Options: "input", "output"
Example: `myRtdx.channelMode = "output";`

Examples

The `rtdx.xls` example is in the `TI_DIR\examples\hostapps\rtdx` folder. The examples are described below.

- Ta_write.asm.** Target to Host transmission example. This example sends 100 consecutive integers starting from 0. In the `rtdx.xls` file, use the `h_read` VB macro to view data on the host.
- Ta_read.asm.** Host to target transmission example. This example reads 100 integers. Use the `h_write` VB macro of the `rtdx.xls` file to send data to the target.
- Ta_readNB.asm.** Host to target transmission example. This example reads 100 integers. Use the `h_write` VB macro of the `rtdx.xls` file to send data to the target. This example demonstrates how to use the non-blocking read, `RTDX_readNB`, function.

Note: Programs must be linked with C run-time libraries and contain the symbol `_main`.

RTDX_channelBusy*Return status indicating whether data channel is busy***C Interface**

Syntax int RTDX_channelBusy(RTDX_inputChannel *pichan);

Parameters pichan /* Identifier for the input data channel */

Return Value int /* Status: 0 = Channel is not busy. */
 /* non-zero = Channel is busy. */

Reentrant yes

Description RTDX_channelBusy is designed to be used in conjunction with RTDX_readNB. The return value indicates whether the specified data channel is currently in use or not. If a channel is busy reading, the test/control flag (TC) bit of status register 0 (STO) is set to 1. Otherwise, the TC bit is set to 0.

Constraints and Calling Context ❑ RTDX_channelBusy cannot be called by an HWI function.

See Also RTDX_readNB

RTDX_CreateInputChannel*Declare input channel structure***C Interface****Syntax** RTDX_CreateInputChannel(ichan);**Parameters** ichan /* Label for the input channel */**Return Value** none**Reentrant** no**Description** This macro declares and initializes to 0, the RTDX data channel for input.

Data channels must be declared as global objects. A data channel can be used either for input or output, but not both. The contents of an input or output data channel are unknown to the user.

A channel can be in one of two states: enabled or disabled. Channels are initialized as disabled.

Channels can be enabled or disabled via a User Interface function. They can also be enabled or disabled remotely from Code Composer or its COM interface.

Constraints and Calling Context

- ❑ RTDX_CreateInputChannel cannot be called by an HWI function.

See Also RTDX_CreateOutputChannel

RTDX_CreateOutputChannel *Declare output channel structure***C Interface**

Syntax RTDX_CreateOutputChannel(ochan);

Parameters ochan /* Label for the output channel */

Return Value none

Reentrant no

Description

This macro declares and initializes the RTDX data channels for output.

Data channels must be declared as global objects. A data channel can be used either for input or output, but not both. The contents of an input or output data channel are unknown to the user.

A channel can be in one of two states: enabled or disabled. Channels are initialized as disabled.

Channels can be enabled or disabled via a User Interface function. They can also be enabled or disabled remotely from Code Composer Studio or its OLE interface.

Constraints and Calling Context

- ❑ RTDX_CreateOutputChannel cannot be called by an HWI function.

See Also

RTDX_CreateInputChannel

RTDX_disableInput *Disable an input data channel***C Interface**

Syntax void RTDX_disableInput(RTDX_inputChannel *ichan);

Parameters ichan /* Identifier for the input data channel */

Return Value void

Reentrant yes

Description A call to a disable function causes the specified input channel to be disabled.

Constraints and Calling Context RTDX_disableInput cannot be called by an HWI function.

See Also RTDX_disableOutput
RTDX_enableInput
RTDX_read

RTDX_disableOutput *Disable an output data channel***C Interface**

Syntax void RTDX_disableOutput(RTDX_outputChannel *ochan);

Parameters ochan /* Identifier for an output data channel */

Return Value void

Reentrant yes

Description A call to a disable function causes the specified data channel to be disabled.

Constraints and Calling Context RTDX_disableOutput cannot be called by an HWI function.

See Also RTDX_disableInput
RTDX_enableOutput
RTDX_read

RTDX_enableInput*Enable an input data channel***C Interface****Syntax**

```
void RTDX_enableInput( RTDX_inputChannel *ichan );
```

Parameters

```
ochan          /* Identifier for an output data channel */  
ichan          /* Identifier for the input data channel */
```

Return Value

```
void
```

Reentrant

```
yes
```

Description

A call to an enable function causes the specified data channel to be enabled.

Constraints and Calling Context

- ❑ RTDX_enableInput cannot be called by an HWI function.

See Also

```
RTDX_disableInput  
RTDX_enableOutput  
RTDX_read
```

RTDX_enableOutput *Enable an output data channel***C Interface**

Syntax void RTDX_enableOutput(RTDX_outputChannel *ochan);

Parameters ochan /* Identifier for an output data channel */

Return Value void

Reentrant yes

Description A call to an enable function causes the specified data channel to be enabled.

Constraints and Calling Context RTDX_enableOutput cannot be called by an HWI function.

See Also RTDX_disableOutput
RTDX_enableInput
RTDX_write

RTDX_isInputEnabled*Return status of the input data channel***C Interface**

Syntax RTDX_isInputEnabled(ichan);

Parameter ichan /* Identifier for an input channel. */

Return Value 0 /* Not enabled. */
non-zero /* Enabled. */

Reentrant yes

Description The RTDX_isInputEnabled macro tests to see if an input channel is enabled and sets the test/control flag (TC bit) of status register 0 to 1 if the input channel is enabled. Otherwise, it sets the TC bit to 0.

Constraints and Calling Context RTDX_isInputEnabled cannot be called by an HWI function.

See Also RTDX_isOutputEnabled

RTDX_isOutputEnabled *Return status of the output data channel***C Interface**

Syntax RTDX_isOutputEnabled(ohan);

Parameter ochan /* Identifier for an output channel. */

Return Value 0 /* Not enabled. */
non-zero /* Enabled. */

Reentrant yes

Description The RTDX_isOutputEnabled macro tests to see if an output channel is enabled and sets the test/control flag (TC bit) of status register 0 to 1 if the output channel is enabled. Otherwise, it sets the TC bit to 0.

Constraints and Calling Context RTDX_isOutputEnabled cannot be called by an HWI function.

See Also RTDX_isInputEnabled

RTDX_readNB*Read from input channel without blocking***C Interface****Syntax** `int RTDX_readNB(RTDX_inputChannel *ichan, void *buffer, int bsize);`**Parameters**

<code>ichan</code>	<code>/* Identifier for the input data channel */</code>
<code>buffer</code>	<code>/* A pointer to the buffer that receives the data */</code>
<code>bsize</code>	<code>/* The size of the buffer in address units */</code>

Return Value

<code>RTDX_OK</code>	<code>/* Success.*/</code>
<code>0 (zero)</code>	<code>/* Failure. The target buffer is full. */</code>
<code>RTDX_READ_ERROR</code>	<code>/*Channel is currently busy reading. */</code>

Reentrant `yes`**Description**
RTDX_readNB is a nonblocking form of the function RTDX_read. RTDX_readNB issues a read request to be posted to the specified input data channel and immediately returns. If the channel is not enabled or the channel is currently busy reading, the function returns RTDX_READ_ERROR. The function returns 0 if it cannot post the read request due to lack of space in the RTDX target buffer.

When the function RTDX_readNB is used, the target application notifies the RTDX Host Library that it is ready to receive data but the target application does not wait. Execution of the target application continues immediately. Use the RTDX_channelBusy and RTDX_sizeofInput functions to determine when the RTDX Host Library has written data into the target buffer.

When RTDX_read is used, the target application notifies the RTDX Host Library that it is ready to receive data and then waits for the RTDX Host Library to write data into the target buffer. When the data is received, the target application continues execution.

Constraints and Calling Context

❑ RTDX_readNB cannot be called by an HWI function.

See Also

RTDX_channelBusy
RTDX_read
RTDX_sizeofInput

RTDX_sizeofInput *Return the number of MADUs read from a data channel***C Interface**

Syntax `int RTDX_sizeofInput(RTDX_inputChannel *pichan);`

Parameters `pichan` */* Identifier for the input data channel */*

Return Value `int` */* Number of sizeof units of data actually */
/* supplied in buffer */*

Reentrant `yes`

Description RTDX_sizeofInput is designed to be used in conjunction with RTDX_readNB after a read operation has completed. The function returns the number of sizeof units actually read from the specified data channel into the accumulator (register A).

Constraints and Calling Context RTDX_sizeofInput cannot be called by an HWI function.

See Also RTDX_readNB

RTDX_write*Write to an output channel***C Interface****Syntax** `int RTDX_write(RTDX_outputChannel *ochan, void *buffer, int bsize);`**Parameters**
`ochan` /* Identifier for the output data channel */
`buffer` /* A pointer to the buffer containing the data */
`bsize` /* The size of the buffer in address units */**Return Value** `int` /* Status: non-zero = Success. 0 = Failure. */**Reentrant** `yes`**Description** RTDX_write causes the specified data to be written to the specified output data channel, provided that channel is enabled. On return from the function, the data has been copied out of the specified user buffer and into the RTDX target buffer. If the channel is not enabled, the write operation is suppressed. If the RTDX target buffer is full, Failure is returned.**Constraints and Calling Context**
 RTDX_write cannot be called by an HWI function.**See Also** `RTDX_read`

2.25 SEM Module

The SEM module is the semaphore manager.

Functions

- ❑ SEM_count. Get current semaphore count
- ❑ SEM_create. Create a semaphore
- ❑ SEM_delete. Delete a semaphore
- ❑ SEM_new. Initialize a semaphore
- ❑ SEM_pend. Wait for a counting semaphore
- ❑ SEM_pendBinary. Wait for a binary semaphore
- ❑ SEM_post. Signal a counting semaphore
- ❑ SEM_postBinary. Signal a binary semaphore
- ❑ SEM_reset. Reset semaphore

Constants, Types, and Structures

```
typedef struct SEM_Obj  *SEM_Handle;
                        /* handle for semaphore object */

struct SEM_Attrs { /* semaphore attributes */
    String name; /* printable name */
};

SEM_Attrs SEM_ATTRS = { /* default attribute values */
    "", /* name */
};
```

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the SEM Manager Properties and SEM Object Properties topics. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default
OBJMEMSEG	Reference	prog.get("IDRAM")

Instance Configuration Parameters

Name	Type	Default
comment	String	"<add comments here>"
count	Int16	0

Description

The SEM module makes available a set of functions that manipulate semaphore objects accessed through handles of type `SEM_Handle`. Semaphores can be used for task synchronization and mutual exclusion.

Semaphores can be counting semaphores or binary semaphores. The APIs for binary and counting semaphores cannot be mixed for a single semaphore.

- ❑ **Counting semaphores** keep track of the number of times the semaphore has been posted with `SEM_post`. This is useful, for example, if you have a group of resources that are shared between tasks. Such tasks might call `SEM_pend` to see if a resource is available before using one. `SEM_pend` and `SEM_post` are for use with counting semaphores.
- ❑ **Binary semaphores** can have only two states: available and unavailable. They can be used to share a single resource between tasks. They can also be used for a basic signaling mechanism, where the semaphore can be posted multiple times and a subsequent call to `SEM_pendBinary` clears the count and returns. Binary semaphores do not keep track of the count; they simply track whether the semaphore has been posted or not. `SEM_pendBinary` and `SEM_postBinary` are for use with binary semaphores.

The MBX module uses a counting semaphore internally to manage the count of free (or full) mailbox elements. Another example of a counting semaphore is an ISR that might fill multiple buffers of data for consumption by a task. After filling each buffer, the ISR puts the buffer on a queue and calls `SEM_post`. The task waiting for the data calls `SEM_pend`, which simply decrements the semaphore count and returns or blocks if the count is 0. The semaphore count thus tracks the number of full buffers available for the task. The GIO and SIO modules follow this model and use counting semaphores.

The internal data structures used for binary and counting semaphores are the same; the only change is whether semaphore values are incremented and decremented or simply set to zero and non-zero.

`SEM_pend` and `SEM_pendBinary` are used to wait for a semaphore. The timeout parameter allows the task to wait until a timeout, wait indefinitely, or not wait at all. The return value is used to indicate if the semaphore was signaled successfully.

`SEM_post` and `SEM_postBinary` are used to signal a semaphore. If a task is waiting for the semaphore, `SEM_post/SEM_postBinary` removes the task from the semaphore queue and puts it on the ready queue. If no

tasks are waiting, SEM_post simply increments the semaphore count and returns. (SEM_postBinary sets the semaphore count to non-zero and returns.)

SEM Manager Properties

The following global property can be set for the SEM module in the SEM Manager Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **Object Memory.** The memory segment that contains the SEM objects created with Tconf.

Tconf Name: OBJMEMSEG Type: Reference

Example: `bios.SEM.OBJMEMSEG = prog.get("myMEM");`

SEM Object Properties

To create a SEM object in a configuration script, use the following syntax. The Tconf examples that follow assume the object has been created as shown here.

```
var mySem = bios.SEM.create("mySem");
```

The following properties can be set for a SEM object in the SEM Object Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **comment.** Type a comment to identify this SEM object.

Tconf Name: comment Type: String

Example: `mySem.comment = "my SEM";`

- ❑ **Initial semaphore count.** Set this property to the desired initial semaphore count.

Tconf Name: count Type: Int16

Example: `mySem.count = 0;`

SEM_count

Get current semaphore count

C Interface

Syntax `count = SEM_count(sem);`

Parameters `SEM_Handle sem; /* semaphore handle */`

Return Value `Int count; /* current semaphore count */`

Description `SEM_count` returns the current value of the semaphore specified by `sem`.

SEM_create*Create a semaphore***C Interface**

Syntax `sem = SEM_create(count, attrs);`

Parameters `Int count; /* initial semaphore count */`
 `SEM_Attrs *attrs; /* pointer to semaphore attributes */`

Return Value `SEM_Handle sem; /* handle for new semaphore object */`

Description

SEM_create creates a new semaphore object which is initialized to count. If successful, SEM_create returns the handle of the new semaphore. If unsuccessful, SEM_create returns NULL unless it aborts (for example, because it directly or indirectly calls SYS_error, and SYS_error is configured to abort).

If attrs is NULL, the new semaphore is assigned a default set of attributes. Otherwise, the semaphore's attributes are specified through a structure of type SEM_Attrs.

```
struct SEM_Attrs { /* semaphore attributes */
    String name; /* printable name */
};
```

Default attribute values are contained in the constant SEM_ATTRS, which can be assigned to a variable of type SEM_Attrs before calling SEM_create.

```
SEM_Attrs SEM_ATTRS = { /* default attribute values */
    "", /* name */
};
```

SEM_create calls MEM_alloc to dynamically create the object's data structure. MEM_alloc must acquire a lock to the memory before proceeding. If another thread already holds a lock to the memory, there is a context switch. The segment from which the object is allocated is described by the DSP/BIOS objects property in the MEM Module.

Constraints and Calling Context

- count must be greater than or equal to 0.
- SEM_create cannot be called from a SWI or HWI.
- You can reduce the size of your application by creating objects with Tconf rather than XXX_create functions.

See Also

MEM_alloc
SEM_delete

SEM_delete*Delete a semaphore***C Interface**

Syntax	SEM_delete(sem);
Parameters	SEM_Handle sem; /* semaphore object handle */
Return Value	Void

Description SEM_delete uses MEM_free to free the semaphore object referenced by sem.

SEM_delete calls MEM_free to delete the SEM object. MEM_free must acquire a lock to the memory before proceeding. If another task already holds a lock to the memory, then there is a context switch.

Constraints and Calling Context

- ❑ No tasks should be pending on sem when SEM_delete is called.
- ❑ SEM_delete cannot be called from a SWI or HWI.
- ❑ No check is performed to prevent SEM_delete from being used on a statically-created object. If a program attempts to delete a semaphore object that was created using Tconf, SYS_error is called.

See Also SEM_create

SEM_new*Initialize semaphore object***C Interface****Syntax**

Void SEM_new(sem, count);

ParametersSEM_Handle sem; /* pointer to semaphore object */
Int count; /* initial semaphore count */**Return Value**

Void

Description

SEM_new initializes the semaphore object pointed to by sem with count. The function should be used on a statically created semaphore for initialization purposes only. No task switch occurs when calling SEM_new.

Constraints and Calling Context

- ❑ count must be greater than or equal to 0
- ❑ no tasks should be pending on the semaphore when SEM_new is called

See Also

QUE_new

- ❑ This API cannot be called from the program's main() function.
- ❑ If you need to call this API within a TSK_disable/TSK_enable block, you must use a timeout of 0.
- ❑ This API should not be called from within an IDL function. Doing so prevents analysis tools from gathering run-time information.

See Also

SEM_pend
SEM_postBinary

SEM_post*Signal a semaphore***C Interface**

Syntax	SEM_post(sem);
Parameters	SEM_Handle sem; /* semaphore object handle */
Return Value	Void

Description

SEM_pend and SEM_post are for use with counting semaphores, which keep track of the number of times the semaphore has been posted. This is useful, for example, if you have a group of resources that are shared between tasks.

In contrast, SEM_pendBinary and SEM_postBinary are for use with binary semaphores, which can have only an available or unavailable state. The APIs for binary and counting semaphores cannot be mixed for a single semaphore.

SEM_post readies the first task waiting for the semaphore. If no task is waiting, SEM_post simply increments the semaphore count and returns.

A task switch occurs when calling SEM_post if a higher priority task is made ready to run.

Constraints and Calling Context

- ❑ When called within an HWI, the code sequence calling SEM_post must be either wrapped within an HWI_enter/HWI_exit pair or invoked by the HWI dispatcher.
- ❑ If SEM_post is called from within a TSK_disable/TSK_enable block, the semaphore operation is not processed until TSK_enable is called.

See Also

SEM_pend
SEM_postBinary

SEM_postBinary*Signal a binary semaphore***C Interface**

Syntax	SEM_postBinary(sem);
Parameters	SEM_Handle sem; /* semaphore object handle */
Return Value	Void

Description

SEM_pendBinary and SEM_postBinary are for use with binary semaphores. These are semaphores that can have only two states: available and unavailable. They can be used to share a single resource between tasks. They can also be used for a basic signaling mechanism, where the semaphore can be posted multiple times and a subsequent call to SEM_pendBinary clears the count and returns. Binary semaphores do not keep track of the count; they simply track whether the semaphore has been posted or not.

In contrast, SEM_pend and SEM_post are for use with counting semaphores, which keep track of the number of times the semaphore has been posted. This is useful, for example, if you have a group of resources that are shared between tasks. The APIs for binary and counting semaphores cannot be mixed for a single semaphore.

SEM_postBinary readies the first task in the list if one or more tasks are waiting. SEM_postBinary sets the semaphore count to non-zero (available) if no tasks are waiting.

A task switch occurs when calling SEM_postBinary if a higher priority task is made ready to run.

Constraints and Calling Context

- ❑ When called within an HWI, the code sequence calling this API must be either wrapped within an HWI_enter/HWI_exit pair or invoked by the HWI dispatcher.
- ❑ If this API is called from within a TSK_disable/TSK_enable block, the semaphore operation is not processed until TSK_enable is called.

See Also

SEM_post
SEM_pendBinary

SEM_reset*Reset semaphore count***C Interface****Syntax**

SEM_reset(sem, count);

ParametersSEM_Handle sem; /* semaphore object handle */
Int count; /* semaphore count */**Return Value**

Void

Description

SEM_reset resets the semaphore count to count.

No task switch occurs when calling SEM_reset.

**Constraints and
Calling Context**

- ❑ count must be greater than or equal to 0.
- ❑ No tasks should be waiting on the semaphore when SEM_reset is called.
- ❑ SEM_reset cannot be called by an HWI or a SWI.

See Also

SEM_create

2.26 SIO Module

The SIO module is the stream input and output manager.

Functions

- ❑ SIO_bufsize. Size of the buffers used by a stream
- ❑ SIO_create. Create stream
- ❑ SIO_ctrl. Perform a device-dependent control operation
- ❑ SIO_delete. Delete stream
- ❑ SIO_flush. Idle a stream by flushing buffers
- ❑ SIO_get. Get buffer from stream
- ❑ SIO_idle. Idle a stream
- ❑ SIO_issue. Send a buffer to a stream
- ❑ SIO_put. Put buffer to a stream
- ❑ SIO_ready. Determine if device is ready
- ❑ SIO_reclaim. Request a buffer back from a stream
- ❑ SIO_reclaimx. Request a buffer and frame status back from a stream
- ❑ SIO_segid. Memory segment used by a stream
- ❑ SIO_select. Select a ready device
- ❑ SIO_staticbuf. Acquire static buffer from stream

Constants, Types, and Structures

```
#define SIO_STANDARD      0 /* open stream for */
                          /* standard streaming model */
#define SIO_ISSUERECCLAIM 1 /* open stream for */
                          /* issue/reclaim streaming model */

#define SIO_INPUT        0 /* open for input */
#define SIO_OUTPUT       1 /* open for output */

typedef SIO_Handle;      /* stream object handle */

typedef DEV_Callback SIO_Callback;

struct SIO_Attrs { /* stream attributes */
    Int    nbufs;      /* number of buffers */
    Int    segid;      /* buffer segment ID */
    size_t align;      /* buffer alignment */
    Bool   flush;     /* TRUE->don't block in DEV_idle*/
    Uns    model;     /* SIO_STANDARD,SIO_ISSUERECCLAIM*/
    Uns    timeout;   /* passed to DEV_reclaim */
    SIO_Callback *callback;
                          /* initializes callback in DEV_Obj */
} SIO_Attrs;
```

```

SIO_Attrs SIO_ATTRS = {
    2,                /* nbufs */
    0,                /* segid */
    0,                /* align */
    FALSE,           /* flush */
    SIO_STANDARD,    /* model */
    SYS_FOREVER      /* timeout */
    NULL             /* callback */
};

```

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the SIO Manager Properties and SIO Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default
OBJMEMSEG	Reference	prog.get("IDRAM")
USEISSUERECLAIM	Bool	false

Instance Configuration Parameters

Name	Type	Default (Enum Options)
comment	String	"<add comments here>"
deviceName	Reference	prog.get("dev-name")
controlParameter	String	""
mode	EnumString	"input" ("output")
bufSize	Int16	0x80
numBufs	Int16	2
bufSegId	Reference	prog.get("SIO.OBJMEMSEG")
bufAlign	EnumInt	1 (2, 4, 8, 16, 32, 64, ..., 32768)
flush	Bool	false
modelName	EnumString	"Standard" ("Issue/Reclaim")
allocStaticBuf	Bool	false
timeout	Int16	-1
useCallBackFxn	Bool	false
callBackFxn	Extern	prog.extern("FXN_F_nop")
arg0	Arg	0
arg1	Arg	0

Description

The stream manager provides efficient real-time device-independent I/O through a set of functions that manipulate stream objects accessed through handles of type `SIO_Handle`. The device independence is afforded by having a common high-level abstraction appropriate for real-time applications, continuous streams of data, that can be associated with a variety of devices. All I/O programming is done in a high-level manner using these stream handles to the devices and the stream manager takes care of dispatching into the underlying device drivers.

For efficiency, streams are treated as sequences of fixed-size buffers of data rather than just sequences of MADUs.

Streams can be opened and closed during program execution using the functions `SIO_create` and `SIO_delete`, respectively.

The `SIO_issue` and `SIO_reclaim` function calls are enhancements to the basic DSP/BIOS device model. These functions provide a second usage model for streaming, referred to as the issue/reclaim model. It is a more flexible streaming model that allows clients to supply their own buffers to a stream, and to get them back in the order that they were submitted. The `SIO_issue` and `SIO_reclaim` functions also provide a user argument that can be used for passing information between the stream client and the stream devices.

Both SWI and TSK threads can be used with the SIO module. However, SWI threads can be used only with the issue/reclaim model, and only then if the timeout parameter is 0. TSK threads can be used with either model.

SIO Manager Properties

The following global properties can be set for the SIO module in the SIO Manager Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **Object Memory.** The memory segment that contains the SIO objects created with Tconf.

Tconf Name: `OBJMEMSEG` Type: Reference

Example: `bios.SIO.OBJMEMSEG = prog.get("myMEM");`

- ❑ **Use Only Issue/Reclaim Model.** Enable this option if you want the SIO module to use only the issue/reclaim model. If this option is false (the default) you can also use the standard model.

Tconf Name: `USEISSUERECLAIM` Type: Bool

Example: `bios.SIO.USEISSUERECLAIM = false;`

SIO Object Properties

To create an SIO object in a configuration script, use the following syntax. The Tconf examples that follow assume the object has been created as shown here.

```
var mySio = bios.SIO.create("mySio");
```

The following properties can be set for an SIO object in the SIO Object Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- comment.** Type a comment to identify this SIO object.
 Tconf Name: comment Type: String
 Example: `mySio.comment = "my SIO";`
- Device.** Select the device to which you want to bind this SIO object. User-defined devices are listed along with DGN and DPI devices.
 Tconf Name: deviceName Type: Reference
 Example: `mySio.deviceName = prog.get("UDEVO");`
- Device Control String.** Type the device suffix to be passed to any devices stacked below the device connected to this stream.
 Tconf Name: controlParameter Type: String
 Example: `mySio.controlParameter =
 "/split4/codec";`
- Mode.** Select input if this stream is to be used for input to the application program and output if this stream is to be used for output.
 Tconf Name: mode Type: EnumString
 Options: "input", "output"
 Example: `mySio.mode = "input";`
- Buffer size.** If this stream uses the Standard model, this property controls the size of buffers (in MADUs) allocated for use by the stream. If this stream uses the Issue/Reclaim model, the stream can handle buffers of any size.
 Tconf Name: bufSize Type: Int16
 Example: `mySio.bufSize = 0x80;`
- Number of buffers.** If this stream uses the Standard model, this property controls the number of buffers allocated for use by the stream. If this stream uses the Issue/Reclaim model, the stream can handle up to the specified Number of buffers.
 Tconf Name: numBufs Type: Int16
 Example: `mySio.numBufs = 2;`
- Place buffers in memory segment.** Select the memory segment to contain the stream buffers if Model is Standard.
 Tconf Name: bufSegId Type: Reference
 Example: `mySio.bufSegId = prog.get("myMEM");`

- Buffer alignment.** Specify the memory alignment to use for stream buffers if Model is Standard. For example, if you select 16, the buffer must begin at an address that is a multiple of 16. The default is 1, which means the buffer can begin at any address.

Tconf Name: bufAlign Type: EnumInt

Options: 1, 2, 4, 8, 16, 32, 64, ..., 32768

Example: `mySio.bufAlign = 1;`

- Flush.** Check this box if you want the stream to discard all pending data and return without blocking if this object is idled at run-time with SIO_idle.

Tconf Name: flush Type: Bool

Example: `mySio.flush = false;`

- Model.** Select Standard if you want all buffers to be allocated when the stream is created. Select Issue/Reclaim if your program is to allocate the buffers and supply them using SIO_issue. Both SWI and TSK threads can be used with the SIO module. However, SWI threads can be used only with the issue/reclaim model, and only then if the timeout parameter is 0. TSK threads can be used with either model.

Tconf Name: modelName Type: EnumString

Options: "Standard", "Issue/Reclaim"

Example: `mySio.modelName = "Standard";`

- Allocate Static Buffer(s).** If this property is set to true, the configuration allocates stream buffers for the user. The SIO_staticbuf function is used to acquire these buffers from the stream. When the Standard model is used, checking this box causes one buffer more than the Number of buffers property to be allocated. When the Issue/Reclaim model is used, buffers are not normally allocated. Checking this box causes the number of buffers specified by the Number of buffers property to be allocated.

Tconf Name: allocStaticBuf Type: Bool

Example: `mySio.allocStaticBuf = false;`

- Timeout for I/O operation.** This parameter specifies the length of time the I/O operations SIO_get, SIO_put, and SIO_reclaim wait for I/O. The device driver's Dxx_reclaim function typically uses this timeout while waiting for I/O. If the timeout expires before a buffer is available, the I/O operation returns (-1 * SYS_ETIMEOUT) and no buffer is returned.

Tconf Name: timeout Type: Int16

Example: `mySio.timeout = -1;`

- ❑ **use callback function.** Check this box if you want to use this SIO object with a callback function. In most cases, the callback function is `SWI_andnHook` or a similar function that posts a SWI. Checking this box allows the SIO object to be used with SWI threads.

Tconf Name: `useCallBackFxn` Type: Bool

Example: `mySio.useCallBackFxn = false;`

- ❑ **callback function.** A function for the SIO object to call. In most cases, the callback function is `SWI_andnHook` or a similar function that posts a SWI. This function gets called by the class driver (see the DIO Adapter) in the class driver's callback function. This callback function in the class driver usually gets called in the mini-driver code as a result of the HWI.

Tconf Name: `callBackFxn` Type: Extern

Example: `mySio.callBackFxn =
prog.extern("SWI_andnHook");`

- ❑ **argument 0.** The first argument to pass to the callback function. If the callback function is `SWI_andnHook`, this argument should be a SWI object handle.

Tconf Name: `arg0` Type: Arg

Example: `mySio.arg0 = prog.get("mySwi");`

- ❑ **argument 1.** The second argument to pass to the callback function. If the callback function is `SWI_andnHook`, this argument should be a value mask.

Tconf Name: `arg1` Type: Arg

Example: `mySio.arg1 = 2;`

SIO_bufsize

Return the size of the buffers used by a stream

C Interface

Syntax `size = SIO_bufsize(stream);`

Parameters `SIO_Handle stream;`

Return Value `size_t size;`

Description `SIO_bufsize` returns the size of the buffers used by stream.
This API can be used only if the model is `SIO_STANDARD`.

See Also `SIO_segid`

SIO_create*Open a stream***C Interface****Syntax**

```
stream = SIO_create(name, mode, bufsize, attrs);
```

Parameters

```
String      name;      /* name of device */
Int         mode;      /* SIO_INPUT or SIO_OUTPUT */
size_t      bufsize;  /* stream buffer size */
SIO_Attrs   *attrs;   /* pointer to stream attributes */
```

Return Value

```
SIO_Handle stream; /* stream object handle */
```

Description

SIO_create creates a new stream object and opens the device specified by name. If successful, SIO_create returns the handle of the new stream object. If unsuccessful, SIO_create returns NULL unless it aborts (for example, because it directly or indirectly calls SYS_error, and SYS_error is configured to abort).

Internally, SIO_create calls Dxx_open to open a device.

The mode parameter specifies whether the stream is to be used for input (SIO_INPUT) or output (SIO_OUTPUT).

If the stream is being opened in SIO_STANDARD mode, SIO_create allocates buffers of size bufsize for use by the stream. Initially these buffers are placed on the device todevice queue for input streams, and the device fromdevice queue for output streams.

If the stream is being opened in SIO_ISSUERECLAIM mode, SIO_create does not allocate any buffers for the stream. In SIO_ISSUERECLAIM mode all buffers must be supplied by the client via the SIO_issue call. It does, however, prepare the stream for a maximum number of buffers of the specified size.

If the attrs parameter is NULL, the new stream is assigned the default set of attributes specified by SIO_ATTRS. The following stream attributes are currently supported:

```

struct SIO_Attrs { /* stream attributes */
    Int    nbufs;      /* number of buffers */
    Int    segid;     /* buffer segment ID */
    size_t align;     /* buffer alignment */
    Bool   flush;    /* TRUE->don't block in DEV_idle */
    Uns    model;    /* SIO_STANDARD, SIO_ISSUERECLAIM */
    Uns    timeout;  /* passed to DEV_reclaim */
    SIO_Callback *callback;
                    /* initialize callback in DEV_Obj */
} SIO_Attrs;

```

- ❑ **nbufs.** Specifies the number of buffers allocated by the stream in the SIO_STANDARD usage model, or the number of buffers to prepare for in the SIO_ISSUERECLAIM usage model. The default value of nbufs is 2. In the SIO_ISSUERECLAIM usage model, nbufs is the maximum number of buffers that can be outstanding (that is, issued but not reclaimed) at any point in time.
- ❑ **segid.** Specifies the memory segment for stream buffers. Use the memory segment names defined in the configuration. The default value is 0, meaning that buffers are to be allocated from the "Segment for DSP/BIOS objects" property in the MEM Manager Properties.
- ❑ **align.** Specifies the memory alignment for stream buffers. The default value is 0, meaning that no alignment is needed.
- ❑ **flush.** Indicates the desired behavior for an output stream when it is deleted. If flush is TRUE, a call to SIO_delete causes the stream to discard all pending data and return without blocking. If flush is FALSE, a call to SIO_delete causes the stream to block until all pending data has been processed. The default value is FALSE.
- ❑ **model.** Indicates the usage model that is to be used with this stream. The two usage models are SIO_ISSUERECLAIM and SIO_STANDARD. The default usage model is SIO_STANDARD.
- ❑ **timeout.** Specifies the length of time the device driver waits for I/O completion before returning an error (for example, SYS_ETIMEOUT). timeout is usually passed as a parameter to SEM_pend by the device driver. The default is SYS_FOREVER which indicates that the driver waits forever. If timeout is SYS_FOREVER, the task remains suspended until a buffer is available to be returned by the stream. The timeout attribute applies to the I/O operations SIO_get, SIO_put, and SIO_reclaim. If timeout is 0, the I/O operation returns immediately. If the timeout expires before a buffer is available to be returned, the I/O operation returns the value of (-1 * SYS_ETIMEOUT). Otherwise the I/O operation returns the number of valid MADUs in the buffer, or -1 multiplied by an error code.

- ❑ **callback.** Specifies a pointer to channel-specific callback information. The SIO_Callback structure is defined by the SIO module to match the DEV_Callback structure. This structure contains the callback function and two function arguments. The callback function is typically SWI_andnHook or a similar function that posts a SWI. Callbacks can only be used with the SIO_ISSUERECLAIM model.

Existing DEV drivers do not use this callback function. While DEV drivers can be modified to use this callback, it is not recommended. Instead, the IOM device driver model is recommended for drivers that need the SIO callback feature. IOM drivers use the DIO module to interface with the SIO functions.

SIO_create calls MEM_alloc to dynamically create the object's data structure. MEM_alloc must acquire a lock to the memory before proceeding. If another thread already holds a lock to the memory, then there is a context switch. The segment from which the object is allocated is set by the "Segment for DSP/BIOS objects" property in the MEM Manager Properties.

Constraints and Calling Context

- ❑ A stream can only be used by one task simultaneously. Catastrophic failure can result if more than one task calls SIO_get (or SIO_issue/SIO_reclaim) on the same input stream, or more than one task calls SIO_put (or SIO_issue / SIO_reclaim) on the same output stream.
- ❑ SIO_create creates a stream dynamically. Do not call SIO_create on a stream that was created with Tconf.
- ❑ You can reduce the size of your application program by creating objects with Tconf rather than using the XXX_create functions. However, streams that are to be used with stacking drivers must be created dynamically with SIO_create.
- ❑ SIO_create cannot be called from a SWI or HWI.

See Also

Dxx_open
 MEM_alloc
 SEM_pend
 SIO_delete
 SIO_issue
 SIO_reclaim
 SYS_error

SIO_ctrl*Perform a device-dependent control operation***C Interface****Syntax** `status = SIO_ctrl(stream, cmd, arg);`**Parameters** `SIO_Handle stream; /* stream handle */`
`Uns cmd; /* command to device */`
`Arg arg; /* arbitrary argument */`**Return Value** `Int status; /* device status */`**Description**

SIO_ctrl causes a control operation to be issued to the device associated with stream. cmd and arg are passed directly to the device.

SIO_ctrl returns SYS_OK if successful, and a non-zero device-dependent error value if unsuccessful.

Internally, SIO_ctrl calls Dxx_ctrl to send control commands to a device.

Constraints and Calling Context

- ❑ SIO_ctrl cannot be called from an HWI.

See Also`Dxx_ctrl`

SIO_flush*Flush a stream***C Interface**

Syntax status = SIO_flush(stream);

Parameters SIO_Handle stream; /* stream handle */

Return Value Int status; /* result of operation */

Description

SIO_flush causes all pending data to be discarded regardless of the mode of the stream. SIO_flush differs from SIO_idle in that SIO_flush never suspends program execution to complete processing of data, even for a stream created in output mode.

The underlying device connected to stream is idled as a result of calling SIO_flush. In general, the interrupt is disabled for the device.

One of the purposes of this function is to provide synchronization with the external environment.

SIO_flush returns SYS_OK if and only if the stream is successfully idled.

Internally, SIO_flush calls Dxx_idle and flushes all pending data.

If a callback was specified in the SIO_Attrs structure used with SIO_create, then SIO_flush performs no processing and returns SYS_OK.

Constraints and Calling Context

- ❑ SIO_flush cannot be called from an HWI.
- ❑ If SIO_flush is called from a SWI, no action is performed.

See Also

Dxx_idle
SIO_create
SIO_idle

SIO_get*Get a buffer from stream***C Interface**

Syntax	<code>nmadus = SIO_get(stream, bufp);</code>
Parameters	<code>SIO_Handle stream /* stream handle */</code> <code>Ptr *bufp; /* pointer to a buffer */</code>
Return Value	<code>Int nmadus; /* number of MADUs read or error if negative */</code>

Description

SIO_get exchanges an empty buffer with a non-empty buffer from stream. The bufp is an input/output parameter which points to an empty buffer when SIO_get is called. When SIO_get returns, bufp points to a new (different) buffer, and nmadus indicates success or failure of the call.

SIO_get blocks until a buffer can be returned to the caller, or until the stream's timeout attribute expires (see SIO_create). If a timeout occurs, the value (-1 * SYS_ETIMEOUT) is returned. If timeout is not equal to SYS_FOREVER or 0, the task suspension time can be up to 1 system clock tick less than timeout due to granularity in system timekeeping.

To indicate success, SIO_get returns a positive value for nmadus. As a success indicator, nmadus is the number of MADUs received from the stream. To indicate failure, SIO_get returns a negative value for nmadus. As a failure indicator, nmadus is the actual error code multiplied by -1.

An inconsistency exists between the sizes of buffers in a stream and the return types corresponding to these sizes. While all buffer sizes in a stream are of type size_t, APIs that return a buffer size return a type of Int. The inconsistency is due to a change in stream buffer sizes and the need to retain the return type for backward compatibility. Because of this inconsistency, it is not possible to return the correct buffer size when the actual buffer size exceeds the size of an Int type. This issue has the following implications:

- ❑ **If the actual buffer size is less than/equal to the maximum positive Int value (31 bits).** Check the return value for negative values, which should be treated as errors. Positive values reflect the correct size.
- ❑ **If the actual buffer size is greater than the maximum positive Int value.** Ignore the return value. There is little room for this situation on 'C6000 since size_t is the same as unsigned int, which is 32 bits. Since the sign in Int takes up one bit, the size_t type contains just one more bit than an Int.

For other architectures, size_t is:

- ❑ 'C28x - unsigned long
- ❑ 'C54x/'C55x/'C6x - unsigned int

Since this operation is generally accomplished by redirection rather than by copying data, references to the contents of the buffer pointed to by bufp must be recomputed after the call to SIO_get.

A task switch occurs when calling SIO_get if there are no non-empty data buffers in stream.

Internally, SIO_get calls Dxx_issue and Dxx_reclaim for the device.

Constraints and Calling Context

- ❑ The stream must not be created with attrs.model set to SIO_ISSUERECLAIM. The results of calling SIO_get on a stream created for the issue/reclaim streaming model are undefined.
- ❑ SIO_get cannot be called from a SWI or HWI.
- ❑ This API is callable from the program's main() function only if the stream's configured timeout attribute is 0, or if it is certain that there is a buffer available to be returned.

See Also

Dxx_issue
Dxx_reclaim
SIO_put

SIO_idle*Idle a stream***C Interface**

Syntax `status = SIO_idle(stream);`

Parameters `SIO_Handle stream; /* stream handle */`

Return Value `Int status; /* result of operation */`

Description

If stream is being used for output, SIO_idle causes any currently buffered data to be transferred to the output device associated with stream. SIO_idle suspends program execution for as long as is required for the data to be consumed by the underlying device.

If stream is being used for input, SIO_idle causes any currently buffered data to be discarded. The underlying device connected to stream is idled as a result of calling SIO_idle. In general, the interrupt is disabled for this device.

If discarding of unrendered output is desired, use SIO_flush instead.

One of the purposes of this function is to provide synchronization with the external environment.

SIO_idle returns SYS_OK if and only if the stream is successfully idled.

Internally, SIO_idle calls Dxx_idle to idle the device.

If a callback was specified in the SIO_Attrs structure used with SIO_create, then SIO_idle performs no processing and returns SYS_OK.

Constraints and Calling Context

- SIO_idle cannot be called from an HWI.
- If SIO_idle is called from a SWI, no action is performed.

See Also

Dxx_idle
SIO_create
SIO_flush

the data that it was issued with. `arg` provides a user argument as a method for a client to associate additional information with a particular buffer of data.

SIO_issue is used in conjunction with SIO_reclaim to operate a stream opened in SIO_ISSUERECLAIM mode. The SIO_issue call sends a buffer to a stream, and SIO_reclaim retrieves a buffer from a stream. In normal operation each SIO_issue call is followed by an SIO_reclaim call. Short bursts of multiple SIO_issue calls can be made without an intervening SIO_reclaim call, but over the life of the stream SIO_issue and SIO_reclaim must be called the same number of times.

At any given point in the life of a stream, the number of SIO_issue calls can exceed the number of SIO_reclaim calls by a maximum of `nbufs`. The value of `nbufs` is determined by the SIO_create call or by setting the Number of buffers property for the object in the configuration.

Note:

An SIO_reclaim call should not be made without at least one outstanding SIO_issue call. Calling SIO_reclaim with no outstanding SIO_issue calls has undefined results.

Constraints and Calling Context

- ❑ The stream must be created with `attrs.model` set to SIO_ISSUERECLAIM.
- ❑ SIO_issue cannot be called from an HWI.

See Also

Dxx_issue
SIO_create
SIO_reclaim

SIO_put*Put a buffer to a stream***C Interface**

Syntax `nmadus = SIO_put(stream, bufp, nmadus);`

Parameters

`SIO_Handle stream;` /* stream handle */
`Ptr *bufp;` /* pointer to a buffer */
`size_t nmadus;` /* number of MADUs in the buffer */

Return Value `Int nmadus;` /* number of MADUs, negative if error */

Description

SIO_put exchanges a non-empty buffer with an empty buffer. The bufp parameter is an input/output parameter that points to a non-empty buffer when SIO_put is called. When SIO_put returns, bufp points to a new (different) buffer, and nmadus indicates success or failure of the call.

SIO_put blocks until a buffer can be returned to the caller, or until the stream's timeout attribute expires (see SIO_create). If a timeout occurs, the value (-1 * SYS_ETIMEOUT) is returned. If timeout is not equal to SYS_FOREVER or 0, the task suspension time can be up to 1 system clock tick less than timeout due to granularity in system timekeeping.

To indicate success, SIO_put returns a positive value for nmadus. As a success indicator, nmadus is the number of valid MADUs in the buffer returned by the stream (usually zero). To indicate failure, SIO_put returns a negative value (the actual error code multiplied by -1).

An inconsistency exists between the sizes of buffers in a stream and the return types corresponding to these sizes. While all buffer sizes in a stream are of type size_t, APIs that return a buffer size return a type of Int. The inconsistency is due to a change in stream buffer sizes and the need to retain the return type for backward compatibility. Because of this inconsistency, it is not possible to return the correct buffer size when the actual buffer size exceeds the size of an Int type. This issue has the following implications:

- ❑ **If the actual buffer size is less than/equal to the maximum positive Int value (31 bits).** Check the return value for negative values, which should be treated as errors. Positive values reflect the correct size.
- ❑ **If the actual buffer size is greater than the maximum positive Int value.** Ignore the return value. There is little room for this situation on 'C6000 since size_t is the same as unsigned int, which is 32 bits. Since the sign in Int takes up one bit, the size_t type contains just one more bit than an Int.

Since this operation is generally accomplished by redirection rather than by copying data, references to the contents of the buffer pointed to by `bufp` must be recomputed after the call to `SIO_put`.

A task switch occurs when calling `SIO_put` if there are no empty data buffers in the stream.

Internally, `SIO_put` calls `Dxx_issue` and `Dxx_reclaim` for the device.

Constraints and Calling Context

- ❑ The stream must not be created with `attrs.model` set to `SIO_ISSUERECLAIM`. The results of calling `SIO_put` on a stream created for the issue/reclaim model are undefined.
- ❑ `SIO_put` cannot be called from a SWI or HWI.
- ❑ This API is callable from the program's `main()` function only if the stream's configured timeout attribute is 0, or if it is certain that there is a buffer available to be returned.

See Also

`Dxx_issue`
`Dxx_reclaim`
`SIO_get`

SIO_ready*Determine if device for stream is ready***C Interface****Syntax** `status = SIO_ready(stream);`**Parameters** `SIO_Handle stream;`**Return Value** `Int status; /* result of operation */`**Description**

SIO_ready returns TRUE if a stream is ready for input or output.

If you are using SIO objects with SWI threads, you may want to use SIO_ready to avoid calling SIO_reclaim when it may fail because no buffers are available.

SIO_ready is similar to SIO_select, except that it does not block. You can prevent SIO_select from blocking by setting the timeout to zero, however, SIO_ready is more efficient because SIO_select performs SEM_pend with a timeout of zero. SIO_ready simply polls the stream to see if the device is ready.

See Also

SIO_select

SIO_reclaim*Request a buffer back from a stream***C Interface**

Syntax `nmadus = SIO_reclaim(stream, pbufp, parg);`

Parameters

<code>SIO_Handle</code>	<code>stream;</code>	<code>/* stream handle */</code>
<code>Ptr</code>	<code>*pbufp;</code>	<code>/* pointer to the buffer */</code>
<code>Arg</code>	<code>*parg;</code>	<code>/* pointer to a user argument */</code>

Return Value `Int` `nmadus;` `/* number of MADUs or error if negative */`

Description

SIO_reclaim is used to request a buffer back from a stream. It returns a pointer to the buffer, the number of valid MADUs in the buffer, and a user argument (parg). After the SIO_reclaim call parg points to the same value that was passed in with this buffer using the SIO_issue call.

If you want to return a frame-specific status along with the buffer, use SIO_reclaimx instead of SIO_reclaim.

Internally, SIO_reclaim calls Dxx_reclaim, then it gets the frame from the driver's device->fromdevice queue.

If a stream was created in SIO_OUTPUT mode, then SIO_reclaim returns an empty buffer, and nmadus is zero, since the buffer is empty. If a stream was opened in SIO_INPUT mode, SIO_reclaim returns a non-empty buffer, and nmadus is the number of valid MADUs of data in the buffer.

If SIO_reclaim is called from a TSK thread, it blocks (in either mode) until a buffer can be returned to the caller, or until the stream's timeout attribute expires (see SIO_create), and it returns a positive number or zero (indicating success), or a negative number (indicating an error condition). If timeout is not equal to SYS_FOREVER or 0, the task suspension time can be up to 1 system clock tick less than timeout due to granularity in system timekeeping.

If SIO_reclaim is called from a SWI thread, it returns an error if it is called when no buffer is available. SIO_reclaim never blocks when called from a SWI.

To indicate success, SIO_reclaim returns a positive value for nmadus. As a success indicator, nmadus is the number of valid MADUs in the buffer. To indicate failure, SIO_reclaim returns a negative value for nmadus. As a failure indicator, nmadus is the actual error code multiplied by -1.

Failure of SIO_reclaim indicates that no buffer was returned to the client. Therefore, if SIO_reclaim fails, the client should not attempt to de-reference pbufp, since it is not guaranteed to contain a valid buffer pointer.

An inconsistency exists between the sizes of buffers in a stream and the return types corresponding to these sizes. While all buffer sizes in a stream are of type size_t, APIs that return a buffer size return a type of Int. The inconsistency is due to a change in stream buffer sizes and the need to retain the return type for backward compatibility. Because of this inconsistency, it is not possible to return the correct buffer size when the actual buffer size exceeds the size of an Int type. This issue has the following implications:

- ❑ **If the actual buffer size is less than/equal to the maximum positive Int value (31 bits).** Check the return value for negative values, which should be treated as errors. Positive values reflect the correct size.
- ❑ **If the actual buffer size is greater than the maximum positive Int value.** Ignore the return value. There is little room for this situation on 'C6000 since size_t is the same as unsigned int, which is 32 bits. Since the sign in Int takes up one bit, the size_t type contains just one more bit than an Int.

SIO_reclaim is used in conjunction with SIO_issue to operate a stream opened in SIO_ISSUERECLAIM mode. The SIO_issue call sends a buffer to a stream, and SIO_reclaim retrieves a buffer from a stream. In normal operation each SIO_issue call is followed by an SIO_reclaim call. Short bursts of multiple SIO_issue calls can be made without an intervening SIO_reclaim call, but over the life of the stream SIO_issue and SIO_reclaim must be called the same number of times. The number of SIO_issue calls can exceed the number of SIO_reclaim calls by a maximum of nbufs at any given time. The value of nbufs is determined by the SIO_create call or by setting the Number of buffers property for the object in the configuration.

Note:

An SIO_reclaim call should not be made without at least one outstanding SIO_issue call. Calling SIO_reclaim with no outstanding SIO_issue calls has undefined results.

SIO_reclaim only returns buffers that were passed in using SIO_issue. It also returns the buffers in the same order that they were issued.

A task switch occurs when calling SIO_reclaim if timeout is not set to 0, and there are no data buffers available to be returned.

Constraints and Calling Context

- ❑ The stream must be created with `attrs.model` set to `SIO_ISSUERECLAIM`.
- ❑ There must be at least one outstanding SIO_issue when an SIO_reclaim call is made.
- ❑ SIO_reclaim returns an error if it is called from a SWI when no buffer is available. SIO_reclaim does not block if called from a SWI.
- ❑ All frames issued to a stream must be reclaimed before closing the stream.
- ❑ SIO_reclaim cannot be called from a HWI.
- ❑ This API is callable from the program's `main()` function only if the stream's configured timeout attribute is 0, or if it is certain that there is a buffer available to be returned.

See Also

Dxx_reclaim
SIO_issue
SIO_create
SIO_reclaimx

SIO_reclaimx*Request a buffer back from a stream, including frame status***C Interface****Syntax**

```
nmadus = SIO_reclaimx(stream, *pbufp, *parg, *pfstatus);
```

Parameters

```
SIO_Handle stream; /* stream handle */  
Ptr        *pbufp; /* pointer to the buffer */  
Arg        *parg;  /* pointer to a user argument */  
Int        *pfstatus; /* pointer to frame status */
```

Return Value

```
Int        nmadus; /* number of MADUs or error if negative */
```

Description

SIO_reclaimx is identical to SIO_reclaim, except that it also returns a frame-specific status in the Int pointed to by the pfstatus parameter.

The device driver can use the frame-specific status to pass frame-specific status information to the application. This allows the device driver to fill in the status for each frame, and gives the application access to that status.

The returned frame status is valid only if SIO_reclaimx() returns successfully. If the nmadus value returned is negative, the frame status should not be considered accurate.

Constraints and Calling Context

- ❑ The stream must be created with attrs.model set to SIO_ISSUERECLAIM.
- ❑ There must be at least one outstanding SIO_issue when an SIO_reclaimx call is made.
- ❑ SIO_reclaimx returns an error if it is called from a SWI when no buffer is available. SIO_reclaimx does not block if called from a SWI.
- ❑ All frames issued to a stream must be reclaimed before closing the stream.
- ❑ SIO_reclaimx cannot be called from a HWI.
- ❑ This API is callable from the program's main() function only if the stream's configured timeout attribute is 0, or if it is certain that there is a buffer available to be returned.

See Also

SIO_reclaim

SIO_segid*Return the memory segment used by the stream***C Interface****Syntax** `segid = SIO_segid(stream);`**Parameters** `SIO_Handle stream;`**Return Value** `Int segid; /* memory segment ID */`**Description** `SIO_segid` returns the identifier of the memory segment that stream uses for buffers.**See Also** `SIO_bufsize`

SIO_select*Select a ready device***C Interface**

Syntax mask = SIO_select(streamtab, nstreams, timeout);

Parameters SIO_Handle streamtab; /* stream table */
 Int nstreams; /* number of streams */
 Uns timeout; /* return after this many system clock ticks */

Return Value Uns mask; /* stream ready mask */

Description

SIO_select waits until one or more of the streams in the streamtab[] array is ready for I/O (that is, it does not block when an I/O operation is attempted).

streamtab[] is an array of streams where nstreams < 16. The timeout parameter indicates the number of system clock ticks to wait before a stream becomes ready. If timeout is 0, SIO_select returns immediately. If timeout is SYS_FOREVER, SIO_select waits until one of the streams is ready. Otherwise, SIO_select waits for up to 1 system clock tick less than timeout due to granularity in system timekeeping.

The return value is a mask indicating which streams are ready for I/O. A 1 in bit position j indicates the stream streamtab[j] is ready.

SIO_select results in a context switch if no streams are ready for I/O.

Internally, SIO_select calls Dxx_ready to determine if the device is ready for an I/O operation.

SIO_ready is similar to SIO_select, except that it does not block. You can prevent SIO_select from blocking by setting the timeout to zero, however, SIO_ready is more efficient in this situation because SIO_select performs SEM_pend with a timeout of zero. SIO_ready simply polls the stream to see if the device is ready.

For the SIO_STANDARD model in SIO_INPUT mode only, if stream I/O has not been started (that is, if SIO_get has not been called), SIO_select calls Dxx_issue for all empty frames to start the device.

**Constraints and
Calling Context**

- ❑ streamtab must contain handles of type SIO_Handle returned from prior calls to SIO_create.
- ❑ streamtab[] is an array of streams; streamtab[i] corresponds to bit position i in mask.
- ❑ SIO_select cannot be called from an HWI.
- ❑ SIO_select can only be called from a SWI if the timeout value is zero.

See Also

Dxx_ready
SIO_get
SIO_put
SIO_ready
SIO_reclaim

SIO_staticbuf*Acquire static buffer from stream***C Interface**

Syntax `nmadus = SIO_staticbuf(stream, bufp);`

Parameters `SIO_Handle stream; /* stream handle */`
`Ptr *bufp; /* pointer to a buffer */`

Return Value `Int nmadus; /* number of MADUs in buffer */`

Description

SIO_staticbuf returns buffers for static streams that were configured statically. Buffers are allocated for static streams by checking the Allocate Static Buffer(s) check box for the related SIO object.

SIO_staticbuf returns the size of the buffer or 0 if no more buffers are available from the stream.

An inconsistency exists between the sizes of buffers in a stream and the return types corresponding to these sizes. While all buffer sizes in a stream are of type size_t, APIs that return a buffer size return a type of Int. This due to a change in stream buffer sizes and the need to retain the return type for backward compatibility. Because of this inconsistency, it is not possible to return the correct buffer size when the actual buffer size exceeds the size of an Int type. This issue has the following implications:

- ❑ **If the actual buffer size is less than/equal to the maximum positive Int value (31 bits).** Check the return value for negative values, which indicate errors. Positive values reflect the correct size.
- ❑ **If the actual buffer size is greater than the maximum positive Int value.** Ignore the return value. There is little room for this situation on 'C6000 since size_t is the same as unsigned int, which is 32 bits. Since the sign in Int takes up one bit, the size_t type contains just one more bit than an Int.

SIO_staticbuf can be called multiple times for SIO_ISSUERECLAIM model streams.

SIO_staticbuf must be called to acquire all static buffers before calling SIO_get, SIO_put, SIO_issue or SIO_reclaim.

Constraints and Calling Context

- ❑ SIO_staticbuf should only be called for streams that are defined statically using Tconf.
- ❑ SIO_staticbuf should only be called for static streams whose "Allocate Static Buffer(s)" property has been set to true.
- ❑ SIO_staticbuf cannot be called after SIO_get, SIO_put, SIO_issue or SIO_reclaim have been called for the given stream.
- ❑ SIO_staticbuf cannot be called from an HWI.

See Also

SIO_get

2.27 STS Module

The STS module is the statistics objects manager.

Functions

- ❑ STS_add. Update statistics using provided value
- ❑ STS_delta. Update statistics using difference between provided value and setpoint
- ❑ STS_reset. Reset values stored in STS object
- ❑ STS_set. Save a setpoint value

Constants, Types, and Structures

```
struct STS_Obj {
    LgInt    num;        /* count */
    LgInt    acc;        /* total value */
    LgInt    max;        /* maximum value */
}
```

Note:

STS objects should not be shared across threads. Therefore, STS_add, STS_delta, STS_reset, and STS_set are not reentrant.

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the STS Manager Properties and STS Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default
OBJMEMSEG	Reference	prog.get("IDRAM")

Instance Configuration Parameters

Name	Type	Default (Enum Options)
comment	String	"<add comments here>"
previousVal	Int32	0
unitType	EnumString	"Not time based" ("High resolution time based", "Low resolution time based")
operation	EnumString	"Nothing" ("A * x", "A * x + B", "(A * x + B) / C")
numA	Int32	1

Name	Type	Default (Enum Options)
numB	Int32	0
numC	Int32	1

Description

The STS module manages objects called statistics accumulators. Each STS object accumulates the following statistical information about an arbitrary 32-bit wide data series:

- Count.** The number of values in an application-supplied data series
- Total.** The sum of the individual data values in this series
- Maximum.** The largest value already encountered in this series

Using the count and total, the Statistics View analysis tool calculates the average on the host.

Statistics are accumulated in 32-bit variables on the target and in 64-bit variables on the host. When the host polls the target for real-time statistics, it resets the variables on the target. This minimizes space requirements on the target while allowing you to keep statistics for long test runs.

Default STS Tracing

In the RTA Control Panel, you can enable statistics tracing for the following modules by marking the appropriate checkbox. You can also set the HWI Object Properties to perform various STS operations on registers, addresses, or pointers.

Except for tracing TSK execution, your program does not need to include any calls to STS functions in order to gather these statistics. The default units for the statistics values are shown in Table 2-8.

Table 2-8. *Statistics Units for HWI, PIP, PRD, and SWI Modules*

Module	Units
HWI	Gather statistics on monitored values within HWIs
PIP	Number of frames read from or written to data pipe (count only)
PRD	Number of ticks elapsed from time that the PRD object is ready to run to end of execution
SWI	Instruction cycles elapsed from time posted to completion
TSK	Instruction cycles elapsed from time TSK is made ready to run until the application calls TSK_deltatime.

Custom STS Objects

You can create custom STS objects using Tconf. The STS_add operation updates the count, total, and maximum using the value you provide. The STS_set operation sets a previous value. The STS_delta operation

accumulates the difference between the value you pass and the previous value and updates the previous value to the value you pass.

By using custom STS objects and the STS operations, you can do the following:

- ❑ **Count the number of occurrences of an event.** You can pass a value of 0 to STS_add. The count statistic tracks how many times your program calls STS_add for this STS object.
- ❑ **Track the maximum and average values for a variable in your program.** For example, suppose you pass amplitude values to STS_add. The count tracks how many times your program calls STS_add for this STS object. The total is the sum of all the amplitudes. The maximum is the largest value. The Statistics View calculates the average amplitude.
- ❑ **Track the minimum value for a variable in your program.** Negate the values you are monitoring and pass them to STS_add. The maximum is the negative of the minimum value.
- ❑ **Time events or monitor incremental differences in a value.** For example, suppose you want to measure the time between hardware interrupts. You would call STS_set when the program begins running and STS_delta each time the interrupt routine runs, passing the result of CLK_gettime each time. STS_delta subtracts the previous value from the current value. The count tracks how many times the interrupt routine was performed. The maximum is the largest number of clock counts between interrupt routines. The Statistics View also calculates the average number of clock counts.
- ❑ **Monitor differences between actual values and desired values.** For example, suppose you want to make sure a value stays within a certain range. Subtract the midpoint of the range from the value and pass the absolute value of the result to STS_add. The count tracks how many times your program calls STS_add for this STS object. The total is the sum of all deviations from the middle of the range. The maximum is the largest deviation. The Statistics View calculates the average deviation.

You can further customize the statistics data by setting the STS Object Properties to apply a printf format to the Total, Max, and Average fields in the Statistics View window and choosing a formula to apply to the data values on the host.

Statistics Data Gathering by the Statistics View Analysis Tool


The statistics manager allows the creation of any number of statistics objects, which in turn can be used by the application to accumulate simple statistics about a time series. This information includes the 32-bit

maximum value, the last 32-bit value passed to the object, the number of samples (up to $2^{32} - 1$ samples), and the 32-bit sum of all samples.

These statistics are accumulated on the target in real-time until the host reads and clears these values on the target. The host, however, continues to accumulate the values read from the target in a host buffer which is displayed by the Statistics View real-time analysis tool. Provided that the host reads and clears the target statistics objects faster than the target can overflow the 32-bit wide values being accumulated, no information loss occurs.

Using Tconf, you can select a Host Operation for an STS object. The statistics are filtered on the host using the operation and variables you specify. Figure 2-8 shows the effects of the $(A \times X + B) / C$ operation.

Figure 2-8. Statistics Accumulation on the Host

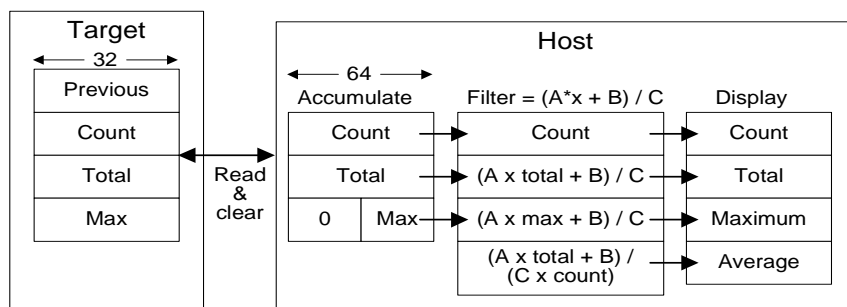

STS Manager Properties

The following global property can be set for the STS module in the STS Manager Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **Object Memory.** The memory segment that contains STS objects.
Tconf Name: OBJMEMSEG Type: Reference
Example: `bios.STS.OBJMEMSEG = prog.get("myMEM");`

STS Object Properties

To create an STS object in a configuration script, use the following syntax. The Tconf examples that follow assume the object has been created as shown here.

```
var mySts = bios.STS.create("mySts");
```

The following properties can be set for an STS object in the STS Object Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **comment.** Type a comment to identify this STS object.
Tconf Name: comment Type: String
Example: `mySts.comment = "my STS";`

- ❑ **prev.** The initial 32-bit history value to use in this object.
 Tconf Name: `previousVal` Type: `Int32`
 Example: `mySts.previousVal = 0;`
- ❑ **unit type.** The unit type property enables you to choose the type of time base units.

 - Not time based. If you select this unit type, the values are displayed in the Statistics View without applying any conversion.
 - High-resolution time based. If you select this type, the Statistics View, by default, presents results in units of instruction cycles.
 - Low-resolution time based. If you select this unit type, the default Statistics View presents results in timer interrupt units.

Tconf Name: `unitType` Type: `EnumString`
 Options: `"Not time based", "High resolution time based", "Low resolution time based"`
 Example: `mySts.unitType = "Not time based";`
- ❑ **host operation.** The expression evaluated (by the host) on the data for this object before it is displayed by the Statistics View real-time analysis tool. The operation can be:

 - $A \times X$
 - $A \times X + B$
 - $(A \times X + B) / C$

Tconf Name: `operation` Type: `EnumString`
 Options: `"Nothing", "A * x", "A * x + B", "(A * x + B) / C"`
 Example: `mySts.operation = "Nothing";`
- ❑ **A, B, C.** The integer parameters used by the expression specified by the Host Operation property above.

Tconf Name: `numA` Type: `Int32`
 Tconf Name: `numB` Type: `Int32`
 Tconf Name: `numC` Type: `Int32`
 Example: `mySts.numA = 1;`
 `mySts.numB = 0;`
 `mySts.numC = 1;`

STS_add*Update statistics using the provided value***C Interface****Syntax** STS_add(sts, value);**Parameters** STS_Handle sts; /* statistics object handle */
LgInt value; /* new value to update statistics object */**Return Value** Void**Reentrant** no**Description** STS_add updates a custom STS object's Total, Count, and Max fields using the data value you provide.

For example, suppose your program passes 32-bit amplitude values to STS_add. The Count field tracks how many times your program calls STS_add for this STS object. The Total field tracks the total of all the amplitudes. The Max field holds the largest value passed to this point. The Statistics View analysis tool calculates the average amplitude.

You can count the occurrences of an event by passing a dummy value (such as 0) to STS_add and watching the Count field.

You can view the statistics values with the Statistics View analysis tool by enabling statistics in the DSP/BIOS→RTA Control Panel window and choosing your custom STS object in the DSP/BIOS→Statistics View window.

See Also STS_delta
STS_reset
STS_set
TRC_disable
TRC_enable

STS_delta*Update statistics using difference between provided value & setpoint***C Interface****Syntax** STS_delta(sts,value);**Parameters** STS_Handle sts; /* statistics object handle */
LgInt value; /* new value to update statistics object */**Return Value** Void**Reentrant** no**Description**

Each STS object contains a previous value that can be initialized with Tconf or with a call to STS_set. A call to STS_delta subtracts the previous value from the value it is passed and then invokes STS_add with the result to update the statistics. STS_delta also updates the previous value with the value it is passed.

STS_delta can be used in conjunction with STS_set to monitor the difference between a variable and a desired value or to benchmark program performance. You can benchmark code by using paired calls to STS_set and STS_delta that pass the value provided by CLK_gettime.

```
STS_set(&sts, CLK_gettime());  
    "processing to be benchmarked"  
STS_delta(&sts, CLK_gettime());
```

Constraints and Calling Context

- ❑ Before the first call to STS_delta is made, the previous value of the STS object should be initialized either with a call to STS_set or by setting the prev property of the STS object using Tconf.

Example

```
STS_set(&sts, targetValue);  
    "processing"  
STS_delta(&sts, currentValue);  
    "processing"  
STS_delta(&sts, currentValue);
```

See Also

STS_add
STS_reset
STS_set
CLK_gettime
CLK_gettime
PRD_getticks
TRC_disable
TRC_enable

STS_reset*Reset the values stored in an STS object***C Interface**

Syntax	STS_reset(sts);
Parameters	STS_Handle sts; /* statistics object handle */
Return Value	Void

Reentrant no

Description STS_reset resets the values stored in an STS object. The Count and Total fields are set to 0 and the Max field is set to the largest negative number. STS_reset does not modify the value set by STS_set.

After the Statistics View analysis tool polls statistics data on the target, it performs STS_reset internally. This keeps the 32-bit total and count values from wrapping back to 0 on the target. The host accumulates these values as 64-bit numbers to allow a much larger range than can be stored on the target.

Example STS_reset(&sts);
 STS_set(&sts, value);

See Also STS_add
 STS_delta
 STS_set
 TRC_disable
 TRC_enable

STS_set*Save a value for STS_delta***C Interface**

Syntax	<code>STS_set(sts, value);</code>
Parameters	<code>STS_Handle sts;</code> /* statistics object handle */ <code>LgInt value;</code> /* new value to update statistics object */
Return Value	Void

Reentrant	no
------------------	----

Description	<p>STS_set can be used in conjunction with STS_delta to monitor the difference between a variable and a desired value or to benchmark program performance. STS_set saves a value as the previous value in an STS object. STS_delta subtracts this saved value from the value it is passed and invokes STS_add with the result.</p>
--------------------	--

STS_delta also updates the previous value with the value it was passed. Depending on what you are measuring, you can need to use STS_set to reset the previous value before the next call to STS_delta.

You can also set a previous value for an STS object in the configuration. STS_set changes this value.

See STS_delta for details on how to use the value you set with STS_set.

Example	<p>This example gathers performance information for the processing between STS_set and STS_delta.</p>
----------------	---

```
STS_set(&sts, CLK_gettime());
    "processing to be benchmarked"
STS_delta(&sts, CLK_gettime());
```

This example gathers information about a value's deviation from the desired value.

```
STS_set(&sts, targetValue);
    "processing"
STS_delta(&sts, currentValue);
    "processing"
STS_delta(&sts, currentValue);
    "processing"
STS_delta(&sts, currentValue);
```

This example gathers information about a value's difference from a base value.


```
STS_set(&sts, baseValue);  
    "processing"  
STS_delta(&sts, currentValue);  
STS_set(&sts, baseValue);  
    "processing"  
STS_delta(&sts, currentValue);  
STS_set(&sts, baseValue);
```

See Also

```
STS_add  
STS_delta  
STS_reset  
TRC_disable  
TRC_enable
```

2.28 SWI Module

The SWI module is the software interrupt manager.

Functions

- ❑ `SWI_andn`. Clear bits from SWI's mailbox; post if becomes 0.
- ❑ `SWI_andnHook`. Specialized version of `SWI_andn` for use as hook function for configured DSP/BIOS objects. Both its arguments are of type `(Arg)`.
- ❑ `SWI_create`. Create a software interrupt.
- ❑ `SWI_dec`. Decrement SWI's mailbox value; post if becomes 0.
- ❑ `SWI_delete`. Delete a software interrupt.
- ❑ `SWI_disable`. Disable software interrupts.
- ❑ `SWI_enable`. Enable software interrupts.
- ❑ `SWI_getattrs`. Get attributes of a software interrupt.
- ❑ `SWI_getmbox`. Return the mailbox value of the SWI when it started running.
- ❑ `SWI_getpri`. Return a SWI's priority mask.
- ❑ `SWI_inc`. Increment SWI's mailbox value and post the SWI.
- ❑ `SWI_isSWI`. Check current thread calling context.
- ❑ `SWI_or`. Or mask with value contained in SWI's mailbox and post the SWI.
- ❑ `SWI_orHook`. Specialized version of `SWI_or` for use as hook function for configured DSP/BIOS objects. Both its arguments are of type `(Arg)`.
- ❑ `SWI_post`. Post a software interrupt.
- ❑ `SWI_raisepri`. Raise a SWI's priority.
- ❑ `SWI_restorepri`. Restore a SWI's priority.
- ❑ `SWI_self`. Return address of currently executing SWI object.
- ❑ `SWI_setattrs`. Set attributes of a software interrupt.

Constants, Types, and Structures

```
typedef struct SWI_Obj SWI_Handle;

SWI_MINPRI = 1; /* Minimum execution priority */
SWI_MAXPRI = 14 /* Maximum execution priority */
```

```

struct SWI_Attrs {      /* SWI attributes */
    SWI_Fxn  fxn;      /* address of SWI function */
    Arg      arg0;     /* first arg to function */
    Arg      arg1;     /* second arg to function */
    Int      priority; /* Priority of SWI object */
    Uns      mailbox; /* check for SWI posting */
};

SWI_Attrs SWI_ATTRS = { /* Default attribute values */
    (SWI_Fxn)FXN_F_nop, /* SWI function */
    0,                  /* arg0 */
    0,                  /* arg1 */
    1,                  /* priority */
    0                   /* mailbox */
};

```

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the SWI Manager Properties and SWI Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default
OBJMEMSEG	Reference	prog.get("IDRAM")

Instance Configuration Parameters

Name	Type	Default (Enum Options)
comment	String	"<add comments here>"
fxn	Extern	prog.extern("FXN_F_nop")
priority	EnumInt	1 (0 to 14)
mailbox	Int16	0
arg0	Arg	0
arg1	Arg	0

Description

The SWI module manages software interrupt service routines, which are patterned after HWI hardware interrupt service routines.

DSP/BIOS manages four distinct levels of execution threads: hardware interrupt service routines, software interrupt routines, tasks, and background idle functions. A software interrupt is an object that encapsulates a function to be executed and a priority. Software interrupts are prioritized, preempt tasks, and are preempted by hardware interrupt service routines.

Note:

SWI functions are called after the processor register state has been saved. SWI functions can be written in C or assembly and must follow the C calling conventions described in the compiler manual.

Note: RTS Functions Callable from TSK Threads Only

Many runtime support (RTS) functions use lock and unlock functions to prevent reentrancy. However, DSP/BIOS SWI and HWI threads cannot call `LCK_pend` and `LCK_post`. As a result, RTS functions that call `LCK_pend` or `LCK_post` *must not be called in the context of a SWI or HWI thread*. For a list of RTS functions that should not be called from a SWI or an HWI function, see “`LCK_pend`” on page 2-213.

The C++ `new` operator calls `malloc`, which in turn calls `LCK_pend`. As a result, the `new` operator cannot be used in the context of a SWI or HWI thread.

The processor registers that are saved before SWI functions are called include a0-a9 and b0-b9. These registers are the parent-preserved registers mentioned in the *TMS320C6000 Optimizing Compiler User's Guide*. The child-preserved registers, a10-a15 and b10-b15, are not saved.

Each software interrupt has a priority level. A software interrupt preempts any lower-priority software interrupt currently executing.

A target program uses an API call to post a SWI object. This causes the SWI module to schedule execution of the software interrupt's function. When a SWI is posted by an API call, the SWI object's function is not executed immediately. Instead, the function is scheduled for execution. DSP/BIOS uses the SWI's priority to determine whether to preempt the thread currently running. Note that if a SWI is posted several times before it begins running, (because HWIs and higher priority interrupts are running,) when the SWI does eventually run, it will run only one time.

Software interrupts can be posted for execution with a call to `SWI_post` or a number of other SWI functions. Each SWI object has a 32-bit mailbox which is used either to determine whether to post the SWI or as a value that can be evaluated within the SWI's function. `SWI_andn` and `SWI_dec` post the SWI if the mailbox value transitions to 0. `SWI_or` and `SWI_inc` also modify the mailbox value. (`SWI_or` sets bits, and `SWI_andn` clears bits.)

	Treat mailbox as bitmask	Treat mailbox as counter	Does not modify mailbox
Always post	SWI_or	SWI_inc	SWI_post
Post if becomes 0	SWI_andn	SWI_dec	

The SWI_disable and SWI_enable operations allow you to post several SWIs and enable them all for execution at the same time. The SWI priorities then determine which SWI runs first.

All SWIs run to completion; you cannot suspend a SWI while it waits for something (for example, a device) to be ready. So, you can use the mailbox to tell the SWI when all the devices and other conditions it relies on are ready. Within a SWI processing function, a call to SWI_getmbox returns the value of the mailbox when the SWI started running. Note that the mailbox is automatically reset to its original value when a SWI runs; however, SWI_getmbox will return the saved mailbox value from when the SWI started execution.

Software interrupts can have up to 15 priority levels. The highest level is SWI_MAXPRI (14). The lowest is SWI_MINPRI (0). The priority level of 0 is reserved for the KNL_swi object, which runs the task (TSK) scheduler.

A SWI preempts any currently running SWI with a lower priority. If two SWIs with the same priority level have been posted, the SWI that was posted first runs first. HWIs in turn preempt any currently running SWI, allowing the target to respond quickly to hardware peripherals.

Interrupt threads (including HWIs and SWIs) are all executed using the same stack. A context switch is performed when a new thread is added to the top of the stack. The SWI module automatically saves the processor's registers before running a higher-priority SWI that preempts a lower-priority SWI. After the higher-priority SWI finishes running, the registers are restored and the lower-priority SWI can run if no other higher-priority SWI has been posted. (A separate task stack is used by each task thread.)

See the *Code Composer Studio* online tutorial for more information on how to post SWIs and scheduling issues for the Software Interrupt manager.

SWI Manager Properties

The following global property can be set for the SWI module in the SWI Manager Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **Object Memory.** The memory segment that contains the SWI objects.

Tconf Name: OBJMEMSEG Type: Reference

Example: `bios.SWI.OBJMEMSEG = prog.get("myMEM");`

SWI Object Properties

To create a SWI object in a configuration script, use the following syntax. The Tconf examples that follow assume the object has been created as shown here.

```
var mySwi = bios.SWI.create("mySwi");
```

If you cannot create a new SWI object (an error occurs or the Insert SWI item is inactive in the DSP/BIOS Configuration Tool), try increasing the Stack Size property in the MEM Manager Properties before adding a SWI object or a SWI priority level.

The following properties can be set for a SWI object in the SWI Object Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **comment.** Type a comment to identify this SWI object.

Tconf Name: comment Type: String

Example: `mySwi.comment = "my SWI";`

- ❑ **function.** The function to execute. If this function is written in C and you are using the DSP/BIOS Configuration Tool, use a leading underscore before the C function name. (The DSP/BIOS Configuration Tool generates assembly code, which must use leading underscores when referencing C functions or labels.) If you are using Tconf, do not add an underscore before the function name; Tconf adds the underscore needed to call a C function from assembly internally.

Tconf Name: fxn Type: Extern

Example: `mySwi.fxn = prog.extern("swiFxn");`

- ❑ **priority.** This property shows the numeric priority level for this SWI object. SWIs can have up to 15 priority levels. The highest level is SWI_MAXPRI (14). The lowest is SWI_MINPRI (0). The priority level of 0 is reserved for the KNL_swi object, which runs the task scheduler. Instead of typing a number in the DSP/BIOS Configuration Tool, you change the relative priority levels of SWI objects by dragging the objects in the ordered collection view.

Tconf Name: priority Type: EnumInt

Options: 0 to 14

Example: `mySwi.priority = 1;`

- ❑ **mailbox**. The initial value of the 32-bit word used to determine if this SWI should be posted.
Tconf Name: mailbox Type: Int16
Example: `mySwi.mailbox = 7;`
- ❑ **arg0, arg1**. Two arbitrary pointer type (Arg) arguments to the above configured user function.
Tconf Name: arg0 Type: Arg
Tconf Name: arg1 Type: Arg
Example: `mySwi.arg0 = 0;`

SWI_andn*Clear bits from SWI's mailbox and post if mailbox becomes 0***C Interface**

Syntax SWI_andn(swi, mask);

Parameters SWI_Handle swi; /* SWI object handle*/
Uns mask /* inverse value to be ANDed */

Return Value Void

Reentrant yes

Description SWI_andn is used to conditionally post a software interrupt. SWI_andn clears the bits specified by a mask from SWI's internal mailbox. If SWI's mailbox becomes 0, SWI_andn posts the SWI. The bitwise logical operation performed is:

```
mailbox = mailbox AND (NOT MASK)
```

For example, if multiple conditions that all be met before a SWI can run, you should use a different bit in the mailbox for each condition. When a condition is met, clear the bit for that condition.


SWI_andn results in a context switch if the SWI's mailbox becomes zero and the SWI has higher priority than the currently executing thread.

You specify a SWI's initial mailbox value in the configuration. The mailbox value is automatically reset when the SWI executes.

Note:

Use the specialized version, SWI_andnHook, when SWI_andn functionality is required for a DSP/BIOS object hook function.

The following figure shows an example of how a mailbox with an initial value of 3 can be cleared by two calls to SWI_andn with values of 2 and 1. The entire mailbox could also be cleared with a single call to SWI_andn with a value of 3.

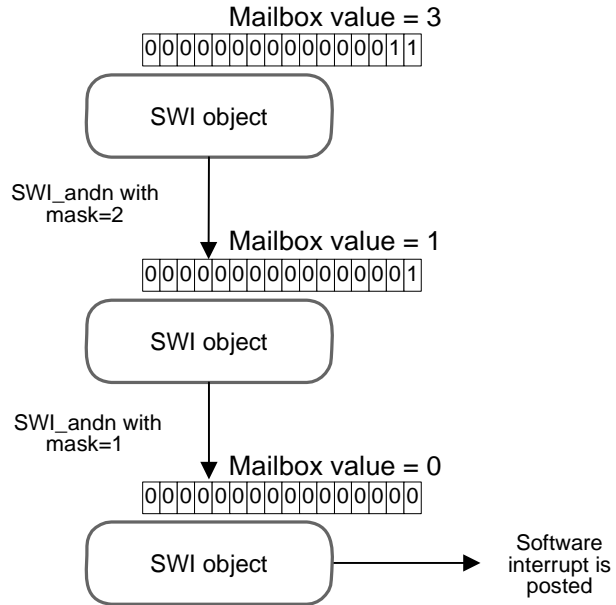

Constraints and Calling Context

- ❑ If this function is invoked outside the context of an HWI, interrupts must be enabled.
- ❑ When called within an HWI, the code sequence calling SWI_andn must be either wrapped within an HWI_enter/HWI_exit pair or invoked by the HWI dispatcher.

Example

```
/* ===== ioReady ===== */
void ioReady(unsigned int mask)
{
    /* clear bits of "ready mask" */
    SWI_andn(&copySWI, mask);
}
```

See Also

SWI_andnHook
 SWI_dec
 SWI_getmbox
 SWI_inc
 SWI_or
 SWI_orHook
 SWI_post
 SWI_self

SWI_andnHook*Clear bits from SWI's mailbox and post if mailbox becomes 0***C Interface**

Syntax SWI_andnHook(swi, mask);

Parameters

Arg	swi;	/* SWI object handle*/
Arg	mask	/* value to be ANDed */

Return Value Void

Reentrant yes

Description

SWI_andnHook is a specialized version of SWI_andn for use as hook function for configured DSP/BIOS objects. SWI_andnHook clears the bits specified by a mask from SWI's internal mailbox and also moves the arguments to the correct registers for proper interface with low level DSP/BIOS assembly code. If SWI's mailbox becomes 0, SWI_andnHook posts the SWI. The bitwise logical operation performed is:

```
mailbox = mailbox AND (NOT MASK)
```

For example, if there are multiple conditions that must all be met before a SWI can run, you should use a different bit in the mailbox for each condition. When a condition is met, clear the bit for that condition.

SWI_andnHook results in a context switch if the SWI's mailbox becomes zero and the SWI has higher priority than the currently executing thread.

You specify a SWI's initial mailbox value in the configuration. The mailbox value is automatically reset when the SWI executes.

Constraints and Calling Context

- ❑ If this macro (API) is invoked outside the context of an HWI, interrupts must be enabled.
- ❑ When called within an HWI, the code sequence calling SWI_andnHook must be either wrapped within an HWI_enter/HWI_exit pair or invoked by the HWI dispatcher.

Example

```
/* ===== ioReady ===== */

Void ioReady(unsigned int mask)
{
    /* clear bits of "ready mask" */
    SWI_andnHook(&copySWI, mask);
}
```

See Also

SWI_andn
SWI_orHook

SWI_create*Create a software interrupt***C Interface**

Syntax `swi = SWI_create(attrs);`

Parameters `SWI_Attrs *attrs; /* pointer to swi attributes */`

Return Value `SWI_Handle swi; /* handle for new swi object */`

Description

SWI_create creates a new SWI object. If successful, SWI_create returns the handle of the new SWI object. If unsuccessful, SWI_create returns NULL unless it aborts. For example, SWI_create can abort if it directly or indirectly calls SYS_error, and SYS_error is configured to abort.

The attrs parameter, which can be either NULL or a pointer to a structure that contains attributes for the object to be created, facilitates setting the SWI object's attributes. The SWI object's attributes are specified through a structure of type SWI_attrs defined as follows:

```
struct SWI_Attrs {
    SWI_Fxn  fxn;
    Arg      arg0;
    Arg      arg1;
    Int      priority;
    Uns      mailbox;
};
```

If attrs is NULL, the new SWI object is assigned the following default attributes.

```
SWI_Attrs SWI_ATTRS = { /* Default attribute values */
    (SWI_Fxn)FXN_F_nop, /* SWI function */
    0, /* arg0 */
    0, /* arg1 */
    1, /* priority */
    0 /* mailbox */
};
```

The fxn attribute, which is the address of the SWI function, serves as the entry point of the software interrupt service routine.

The arg0 and arg1 attributes specify the arguments passed to the SWI function, fxn.

The priority attribute specifies the SWI object's execution priority and must range from 0 to 14. The highest level is SWI_MAXPRI (14). The lowest is SWI_MINPRI (0). The priority level of 0 is reserved for the KNL_swi object, which runs the task scheduler.

The mailbox attribute is used either to determine whether to post the SWI or as a value that can be evaluated within the SWI function.

All default attribute values are contained in the constant SWI_ATTRS, which can be assigned to a variable of type SWI_Attrs prior to calling SWI_create.

SWI_create calls MEM_alloc to dynamically create the object's data structure. MEM_alloc must acquire a lock to the memory before proceeding. If another thread already holds a lock to the memory, then there is a context switch. The segment from which the object is allocated is described by the DSP/BIOS objects property in the MEM Module, page 2–243.

Constraints and Calling Context

- ❑ SWI_create cannot be called from a SWI or HWI.
- ❑ The fxn attribute cannot be NULL.
- ❑ The priority attribute must be less than or equal to 14 and greater than or equal to 1.

See Also

SWI_delete
SWI_getattrs
SWI_setattrs
SYS_error

SWI_dec*Decrement SWI's mailbox value and post if mailbox becomes 0***C Interface**

Syntax SWI_dec(swi);

Parameters SWI_Handle swi; /* SWI object handle*/

Return Value Void

Reentrant yes

Description SWI_dec is used to conditionally post a software interrupt. SWI_dec decrements the value in SWI's mailbox by 1. If SWI's mailbox value becomes 0, SWI_dec posts the SWI. You can increment a mailbox value by using SWI_inc, which always posts the SWI.

For example, you would use SWI_dec if you wanted to post a SWI after a number of occurrences of an event.

You specify a SWI's initial mailbox value in the configuration. The mailbox value is automatically reset when the SWI executes.

SWI_dec results in a context switch if the SWI's mailbox becomes zero and the SWI has higher priority than the currently executing thread.

Constraints and Calling Context

- ❑ If this macro (API) is invoked outside the context of an HWI, interrupts must be enabled.
- ❑ When called within an HWI, the code sequence calling SWI_dec must be either wrapped within an HWI_enter/HWI_exit pair or invoked by the HWI dispatcher.

Example

```
/* ===== strikeOrBall ===== */

Void strikeOrBall(unsigned int call)
{
    if (call == 1) {
        /* initial mailbox value is 3 */
        SWI_dec(&strikeoutSwi);
    }
    if (call == 2) {
        /* initial mailbox value is 4 */
        SWI_dec(&walkSwi);
    }
}
```

See Also SWI_inc

SWI_delete*Delete a software interrupt***C Interface**

Syntax	SWI_delete(swi);
Parameters	SWI_Handle swi; /* SWI object handle */
Return Value	Void

Description

SWI_delete uses MEM_free to free the SWI object referenced by swi.

SWI_delete calls MEM_free to delete the SWI object. MEM_free must acquire a lock to the memory before proceeding. If another task already holds a lock to the memory, then there is a context switch.

Constraints and Calling Context

- ❑ swi cannot be the currently executing SWI object (SWI_self)
- ❑ SWI_delete cannot be called from a SWI or HWI.
- ❑ SWI_delete must not be used to delete a statically-created SWI object. No check is performed to prevent SWI_delete from being used on a statically-created object. If a program attempts to delete a SWI object that was created using Tconf, SYS_error is called.

See Also

SWI_create
SWI_getattrs
SWI_setattrs
SYS_error

SWI_disable*Disable software interrupts***C Interface****Syntax** SWI_disable();**Parameters** Void**Return Value** Void**Reentrant** yes

Description SWI_disable and SWI_enable control software interrupt processing. SWI_disable disables all other SWI functions from running until SWI_enable is called. Hardware interrupts can still run.

SWI_disable and SWI_enable let you ensure that statements that must be performed together during critical processing are not interrupted. In the following example, the critical section is not preempted by any SWIs.

```
SWI_disable();
    ~critical section~
SWI_enable();
```

You can also use SWI_disable and SWI_enable to post several SWIs and have them performed in priority order. See the following example.

SWI_disable calls can be nested. The number of nesting levels is stored internally. SWI handling is not reenabled until SWI_enable has been called as many times as SWI_disable.

Constraints and Calling Context

- ❑ The calls to HWI_enter and HWI_exit required in any HWIs that schedule SWIs automatically disable and reenables SWI handling. You should not call SWI_disable or SWI_enable within a HWI.
- ❑ SWI_disable cannot be called from the program's main() function.
- ❑ Do not call SWI_enable when SWIs are already enabled. If you do, a subsequent call to SWI_disable does not disable SWI processing.

Example

```
/* ===== postEm ===== */
Void postEm
{
    SWI_disable();
    SWI_post(&encoderSwi);
    SWI_andn(&copySwi, mask);
    SWI_dec(&strikeoutSwi);
    SWI_enable();
}
```

See Also

HWI_disable
SWI_enable

SWI_enable*Enable software interrupts***C Interface****Syntax** SWI_enable();**Parameters** Void**Return Value** Void**Reentrant** yes**Description**

SWI_disable and SWI_enable control software interrupt processing. SWI_disable disables all other SWI functions from running until SWI_enable is called. Hardware interrupts can still run. See the SWI_disable section for details.

SWI_disable calls can be nested. The number of nesting levels is stored internally. SWI handling is not be reenabled until SWI_enable has been called as many times as SWI_disable.

SWI_enable results in a context switch if a higher-priority SWI is ready to run.

Constraints and Calling Context

- ❑ The calls to HWI_enter and HWI_exit are required in any HWI that schedules SWIs. They automatically disable and reenable SWI handling. You should not call SWI_disable or SWI_enable within a HWI.
- ❑ SWI_enable cannot be called from the program's main() function.
- ❑ Do not call SWI_enable when SWIs are already enabled. If you do so, the subsequent call to SWI_disable will not disable SWI processing.

See Also

HWI_disable
HWI_enable
SWI_disable

SWI_getattrs*Get attributes of a software interrupt***C Interface**

Syntax SWI_getattrs(swi, attrs);

Parameters SWI_Handle swi; /* handle of the swi */
 SWI_Attrs *attrs; /* pointer to swi attributes */

Return Value Void

Description SWI_getattrs retrieves attributes of an existing SWI object.

The swi parameter specifies the address of the SWI object whose attributes are to be retrieved. The attrs parameter, which is the pointer to a structure that contains the retrieved attributes for the SWI object, facilitates retrieval of the attributes of the SWI object.

The SWI object's attributes are specified through a structure of type SWI_attrs defined as follows:

```
struct SWI_Attrs {
    SWI_Fxn  fxn;
    Arg      arg0;
    Arg      arg1;
    Int      priority;
    Uns      mailbox;
};
```

The fxn attribute, which is the address of the SWI function, serves as the entry point of the software interrupt service routine.

The arg0 and arg1 attributes specify the arguments passed to the SWI function, fxn.

The priority attribute specifies the SWI object's execution priority and ranges from 0 to 14. The highest level is SWI_MAXPRI (14). The lowest is SWI_MINPRI (0). The priority level of 0 is reserved for the KNL_swi object, which runs the task scheduler.

The mailbox attribute is used either to determine whether to post the SWI or as a value that can be evaluated within the SWI function.

The following example uses SWI_getattrs:

```
extern SWI_Handle swi;
SWI_Attrs attrs;

SWI_getattrs(swi, &attrs);
attrs.priority = 5;
SWI_setattrs(swi, &attrs);
```

**Constraints and
Calling Context**

- ❑ SWI_getattrs cannot be called from a SWI or HWI.
- ❑ The attrs parameter cannot be NULL.

See Also

SWI_create
SWI_delete
SWI_setattrs

SWI_getmbox*Return a SWI's mailbox value***C Interface**

Syntax num = Uns SWI_getmbox();

Parameters Void

Return Value Uns num /* mailbox value */

Reentrant yes

Description SWI_getmbox returns the value that SWI's mailbox had when the SWI started running. DSP/BIOS saves the mailbox value internally so that SWI_getmbox can access it at any point within a SWI object's function. DSP/BIOS then automatically resets the mailbox to its initial value (defined with Tconf) so that other threads can continue to use the SWI's mailbox.

SWI_getmbox should only be called within a function run by a SWI object.

When called from with the context of a SWI, the value returned by SWI_getmbox is zero if the SWI was posted by a call to SWI_andn, SWI_andnHook, or SWI_dec. Therefore, SWI_getmbox provides relevant information only if the SWI was posted by a call to SWI_inc, SWI_or, SWI_orHook, or SWI_post.

Constraints and Calling Context

- ❑ SWI_getmbox cannot be called from the context of an HWI or TSK.
- ❑ SWI_getmbox cannot be called from a program's main() function.

Example

This call could be used within a SWI object's function to use the mailbox value within the function. For example, if you use SWI_or or SWI_inc to post a SWI, different mailbox values can require different processing.

```
swicount = SWI_getmbox();
```

See Also

SWI_andn
 SWI_andnHook
 SWI_dec
 SWI_inc
 SWI_or
 SWI_orHook
 SWI_post
 SWI_self

SWI_getpri*Return a SWI's priority mask***C Interface**

Syntax `key = SWI_getpri(swi);`

Parameters `SWI_Handle swi; /* SWI object handle*/`

Return Value `Uns key /* Priority mask of swi */`

Reentrant `yes`

Description `SWI_getpri` returns the priority mask of the SWI passed in as the argument.

Example

```
/* Get the priority key of swi1 */
key = SWI_getpri(&swi1);

/* Get the priorities of swi1 and swi3 */
key = SWI_getpri(&swi1) | SWI_getpri(&swi3);
```

See Also `SWI_raisepri`
`SWI_restorepri`

SWI_inc*Increment SWI's mailbox value and post the SWI***C Interface**

Syntax SWI_inc(swi);

Parameters SWI_Handle swi; /* SWI object handle*/

Return Value Void

Reentrant no

Description SWI_inc increments the value in SWI's mailbox by 1 and posts the SWI regardless of the resulting mailbox value. You can decrement a mailbox value using SWI_dec, which only posts the SWI if the mailbox value is 0.

If a SWI is posted several times before it has a chance to begin executing, because HWIs and higher priority SWIs are running, the SWI only runs one time. If this situation occurs, you can use SWI_inc to post the SWI. Within the SWI's function, you could then use SWI_getmbox to find out how many times this SWI has been posted since the last time it was executed.

You specify a SWI's initial mailbox value in the configuration. The mailbox value is automatically reset when the SWI executes. To get the mailbox value, use SWI_getmbox.

SWI_inc results in a context switch if the SWI is higher priority than the currently executing thread.

Constraints and Calling Context

- ❑ If this macro (API) is invoked outside the context of an HWI, interrupts must be enabled.
- ❑ When called within an HWI, the code sequence calling SWI_inc must be either wrapped within an HWI_enter/HWI_exit pair or invoked by the HWI dispatcher.

Example

```
extern SWI_ObjMySwi;
/* ===== AddAndProcess ===== */
Void AddAndProcess(int count)

    int i;
    for (i = 1; I <= count; ++i)
        SWI_inc(&MySwi);
}
```

See Also

SWI_dec
SWI_getmbox

SWI_isSWI

Check to see if called in the context of a SWI

C Interface

Syntax result = SWI_isSWI(Void);

Parameters Void

Return Value Bool result; /* TRUE if in SWI context, FALSE otherwise */

Reentrant yes

Description This macro returns TRUE when it is called within the context of a SWI or PRD function. This applies no matter whether the SWI was posted by an HWI, TSK, or IDL thread. This macro returns FALSE in all other contexts.

In previous versions of DSP/BIOS, calling SWI_isSWI() from a task switch hook resulted in TRUE. This is no longer the case; task switch hooks are identified as part of the TSK context.

See Also HWI_isHWI
 TSK_isTSK

SWI_or*OR mask with the value contained in SWI's mailbox field***C Interface**

Syntax SWI_or(swi, mask);

Parameters SWI_Handle swi; /* SWI object handle*/
Uns mask; /* value to be ORed */

Return Value Void

Reentrant no

Description SWI_or is used to post a software interrupt. SWI_or sets the bits specified by a mask in SWI's mailbox. SWI_or posts the SWI regardless of the resulting mailbox value. The bitwise logical operation performed on the mailbox value is:

```
mailbox = mailbox OR mask
```

You specify a SWI's initial mailbox value in the configuration. The mailbox value is automatically reset when the SWI executes. To get the mailbox value, use SWI_getmbox.

For example, you might use SWI_or to post a SWI if any of three events should cause a SWI to be executed, but you want the SWI's function to be able to tell which event occurred. Each event would correspond to a different bit in the mailbox.

SWI_or results in a context switch if the SWI is higher priority than the currently executing thread.

Note:

Use the specialized version, SWI_orHook, when SWI_or functionality is required for a DSP/BIOS object hook function.

Constraints and Calling Context

- ❑ If this macro (API) is invoked outside the context of an HWI, interrupts must be enabled.
- ❑ When called within an HWI, the code sequence calling SWI_or must be either wrapped within an HWI_enter/HWI_exit pair or invoked by the HWI dispatcher.

See Also

SWI_andn
SWI_orHook

SWI_orHook*OR mask with the value contained in SWI's mailbox field***C Interface**

Syntax SWI_orHook(swi, mask);

Parameters

Arg	swi;	/* SWI object handle*/
Arg	mask;	/* value to be ORed */

Return Value Void

Reentrant no**Description**

SWI_orHook is used to post a software interrupt, and should be used when hook functionality is required for DSP/BIOS hook objects. SWI_orHook sets the bits specified by a mask in SWI's mailbox and also moves the arguments to the correct registers for interfacing with low level DSP/BIOS assembly code. SWI_orHook posts the SWI regardless of the resulting mailbox value. The bitwise logical operation performed on the mailbox value is:

```
mailbox = mailbox OR mask
```

You specify a SWI's initial mailbox value in the configuration. The mailbox value is automatically reset when the SWI executes. To get the mailbox value, use SWI_getmbox.

For example, you might use SWI_orHook to post a SWI if any of three events should cause a SWI to be executed, but you want the SWI's function to be able to tell which event occurred. Each event would correspond to a different bit in the mailbox.

SWI_orHook results in a context switch if the SWI is higher priority than the currently executing thread.

Note:

Use the specialized version, SWI_orHook, when SWI_or functionality is required for a DSP/BIOS object hook function.

Constraints and Calling Context

- If this macro (API) is invoked outside the context of an HWI, interrupts must be enabled.
- When called within an HWI, the code sequence calling SWI_orHook must be either wrapped within an HWI_enter/HWI_exit pair or invoked by the HWI dispatcher.

See Also

SWI_andnHook
SWI_or

SWI_post*Post a software interrupt***C Interface**

Syntax SWI_post(swi);

Parameters SWI_Handle swi; /* SWI object handle*/

Return Value Void

Reentrant yes

Description SWI_post is used to post a software interrupt regardless of the mailbox value. No change is made to the SWI object's mailbox value.

To have a PRD object post a SWI object's function, you can set `_SWI_post` as the function property of a PRD object and the name of the SWI object you want to post its function as the `arg0` property.

SWI_post results in a context switch if the SWI is higher priority than the currently executing thread.

Constraints and Calling Context

- ❑ If this macro (API) is invoked outside the context of an HWI, interrupts must be enabled.
- ❑ When called within an HWI, the code sequence calling SWI_post must be either wrapped within an HWI_enter/HWI_exit pair or invoked by the HWI dispatcher.

See Also

SWI_andn
 SWI_dec
 SWI_getmbox
 SWI_inc
 SWI_or
 SWI_self

SWI_raisepri*Raise a SWI's priority***C Interface**

Syntax key = SWI_raisepri(mask);

Parameters Uns mask; /* mask of desired priority level */

Return Value Uns key; /* key for use with SWI_restorepri */

Reentrant yes

Description

SWI_raisepri is used to raise the priority of the currently running SWI to the priority mask passed in as the argument. SWI_raisepri can be used in conjunction with SWI_restorepri to provide a mutual exclusion mechanism without disabling SWIs.

SWI_raisepri should be called before a shared resource is accessed, and SWI_restorepri should be called after the access to the shared resource.

A call to SWI_raisepri not followed by a SWI_restorepri keeps the SWI's priority for the rest of the processing at the raised level. A SWI_post of the SWI posts the SWI at its original priority level.

A SWI object's execution priority must range from 0 to 14. The highest level is SWI_MAXPRI (14). The lowest is SWI_MINPRI (0). Priority zero (0) is reserved for the KNL_swi object, which runs the task scheduler.

SWI_raisepri never lowers the current SWI priority.

Constraints and Calling Context

❑ SWI_raisepri cannot be called from an HWI or TSK level.

Example

```
/* raise priority to the priority of swi_1 */
key = SWI_raisepri(SWI_getpri(&swi_1));
--- access shared resource ---
SWI_restore(key);
```

See Also

SWI_getpri
SWI_restorepri

SWI_restorepri*Restore a SWI's priority***C Interface**

Syntax SWI_restorepri(key);

Parameters Uns key; /* key to restore original priority level */

Return Value Void

Reentrant yes

Description SWI_restorepri restores the priority to the SWI's priority prior to the SWI_raisepri call returning the key. SWI_restorepri can be used in conjunction with SWI_raisepri to provide a mutual exclusion mechanism without disabling all SWIs.

SWI_raisepri should be called right before the shared resource is referenced, and SWI_restorepri should be called after the reference to the shared resource.

Constraints and Calling Context

- ❑ SWI_restorepri cannot be called from an HWI or TSK level.
- ❑ SWI_restorepri cannot be called from the program's main() function.

Example

```
/* raise priority to the priority of swi_1 */
key = SWI_raisepri(SWI_getpri(&swi_1));
--- access shared resource ---
SWI_restore(key);
```

See Also

SWI_getpri
SWI_raisepri

SWI_self*Return address of currently executing SWI object***C Interface****Syntax** `curswi = SWI_self();`**Parameters** Void**Return Value** SWI_Handle swi; /* handle for current swi object */**Reentrant** yes**Description** SWI_self returns the address of the currently executing SWI.**Constraints and Calling Context**

- ❑ SWI_self cannot be called from an HWI or TSK level.
- ❑ SWI_self cannot be called from the program's main() function.

Example You can use SWI_self if you want a SWI to repost itself:

```
SWI_post(SWI_self());
```

See Also

- SWI_andn
- SWI_getmbox
- SWI_post

SWI_setattrs*Set attributes of a software interrupt***C Interface**

Syntax SWI_setattrs(swi, attrs);

Parameters SWI_Handle swi; /* handle of the swi */
SWI_Attrs *attrs; /* pointer to swi attributes */

Return Value Void

Description SWI_setattrs sets attributes of an existing SWI object.

The swi parameter specifies the address of the SWI object whose attributes are to be set.

The attrs parameter, which can be either NULL or a pointer to a structure that contains attributes for the SWI object, facilitates setting the attributes of the SWI object. If attrs is NULL, the new SWI object is assigned a default set of attributes. Otherwise, the SWI object's attributes are specified through a structure of type SWI_attr defined as follows:

```
struct SWI_Attrs {
    SWI_Fxn  fxn;
    Arg      arg0;
    Arg      arg1;
    Int      priority;
    Uns      mailbox;
};
```

The fxn attribute, which is the address of the swi function, serves as the entry point of the software interrupt service routine.

The arg0 and arg1 attributes specify the arguments passed to the swi function, fxn.

The priority attribute specifies the SWI object's execution priority and must range from 1 to 14. Priority 14 is the highest priority. You cannot use a priority of 0; that priority is reserved for the system SWI that runs the TSK scheduler.

The mailbox attribute is used either to determine whether to post the SWI or as a value that can be evaluated within the SWI function.

All default attribute values are contained in the constant SWI_ATTRS, which can be assigned to a variable of type SWI_Attrs prior to calling SWI_setattrs.

The following example uses SWI_setattrs:

```
extern SWI_Handle swi;  
SWI_Attrs attrs;  
  
SWI_getattrs(swi, &attrs);  
attrs.priority = 5;  
SWI_setattrs(swi, &attrs);
```

**Constraints and
Calling Context**

- ❑ SWI_setattrs must not be used to set the attributes of a SWI that is preempted or is ready to run.
- ❑ The fxn attribute cannot be NULL.
- ❑ The priority attribute must be less than or equal to 14 and greater than or equal to 1.

See Also

SWI_create
SWI_delete
SWI_getattrs

2.29 SYS Module

The SYS modules manages system settings.

Functions

- ❑ `SYS_abort`. Abort program execution
- ❑ `SYS_atexit`. Stack an exit handler
- ❑ `SYS_error`. Flag error condition
- ❑ `SYS_exit`. Terminate program execution
- ❑ `SYS_printf`. Formatted output
- ❑ `SYS_putchar`. Output a single character
- ❑ `SYS_sprintf`. Formatted output to string buffer
- ❑ `SYS_vprintf`. Formatted output, variable argument list
- ❑ `SYS_vsprintf`. Output formatted data

Constants, Types, and Structures

```
#define SYS_FOREVER    (Uns)-1 /* wait forever */
#define SYS_POLL      (Uns)0  /* don't wait */

#define SYS_OK        0 /* no error */
#define SYS_EALLOC    1 /* memory alloc error */
#define SYS_EFREE     2 /* memory free error */
#define SYS_ENODEV    3 /* dev driver not found */
#define SYS_EBUSY     4 /* device driver busy */
#define SYS_EINVAL    5 /* invalid parameter */
#define SYS_EBADIO    6 /* I/O failure */
#define SYS_EMODE     7 /* bad mode for driver */
#define SYS_EDOMAIN   8 /* domain error */
#define SYS_ETIMEOUT  9 /* call timed out */
#define SYS_EEOF      10 /* end-of-file */
#define SYS_EDEAD     11 /* deleted obj */
#define SYS_EBADOBJ   12 /* invalid object */
#define SYS_ENOTIMPL  13 /* action not implemented */
#define SYS_ENOTFOUND 14 /* resource not found */

#define SYS_EUSER    256 /* user errors start here */

#define SYS_NUMHANDLERS 8 /* # of atexit handlers */

extern String SYS_errors[]; /* error string array */
```

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the SYS Manager Properties heading. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default
TRACESIZE	Numeric	512
TRACESEG	Reference	prog.get("IDRAM")
ABORTFXN	Extern	prog.extern("UTL_doAbort")
ERRORFXN	Extern	prog.extern("UTL_doError")
EXITFXN	Extern	prog.extern("UTL_halt")
PUTCFXN	Extern	prog.extern("UTL_doPutc")

Description

The SYS module makes available a set of general-purpose functions that provide basic system services, such as halting program execution and printing formatted text. In general, each SYS function is patterned after a similar function normally found in the standard C library.

SYS does not directly use the services of any other DSP/BIOS module and therefore resides at the bottom of the system. Other DSP/BIOS modules use the services provided by SYS in lieu of similar C library functions. The SYS module provides hooks for binding system-specific code. This allows programs to gain control wherever other DSP/BIOS modules call one of the SYS functions.

SYS Manager Properties

The following global properties can be set for the SYS module in the SYS Manager Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script.

- ❑ **Trace Buffer Size.** The size of the buffer that contains system trace information. This system trace buffer can be viewed only by looking for the SYS_PUTCBEG symbol in the Code Composer Studio memory view. For example, by default the Putc function writes to the trace buffer.

Tconf Name: TRACESIZE

Type: Numeric

Example: `bios.SYS.TRACESIZE = 512;`

- ❑ **Trace Buffer Memory.** The memory segment that contains system trace information.

Tconf Name: TRACESEG

Type: Reference

Example: `bios.SYS.TRACESEG = prog.get("myMEM");`

- ❑ **Abort Function.** The function to run if the application aborts by calling `SYS_abort`. The default function is `_UTL_doAbort`, which logs an error message and calls `_halt`. If you are using `Tconf`, do not add an underscore before the function name; `Tconf` adds the underscore needed to call a C function from assembly internally. The prototype for this function should be:

```
Void myAbort(String fmt, va_list ap);
```

Tconf Name: `ABORTFXN` Type: Extern

```
Example:  bios.SYS.ABORTFXN =
           prog.extern("myAbort");
```

- ❑ **Error Function.** The function to run if an error flagged by `SYS_error` occurs. The default function is `_UTL_doError`, which logs an error message and returns. The prototype for this function should be:

```
Void myError(String s, Int errno, va_list ap);
```

Tconf Name: `ERRORFXN` Type: Extern

```
Example:  bios.SYS.ERRORFXN =
           prog.extern("myError");
```

- ❑ **Exit Function.** The function to run when the application exits by calling `SYS_exit`. The default function is `UTL_halt`, which loops forever with interrupts disabled and prevents other processing. The prototype for this function should be:

```
Void myExit(Int status);
```

Tconf Name: `EXITFXN` Type: Extern

```
Example:  bios.SYS.EXITFXN =
           prog.extern("myExit");
```

- ❑ **Putc Function.** The function to run if the application calls `SYS_putchar`, `SYS_printf`, or `SYS_vprintf`. The default function is `_UTL_doPutc`, which writes a character to the system trace buffer. This system trace buffer can be viewed only by looking for the `SYS_PUTCBEG` symbol in the Code Composer Studio memory view. The prototype for this function should be:

```
Void myPutc(Char c);
```

Tconf Name: `PUTCFXN` Type: Extern

```
Example:  bios.SYS.PUTCFXN =
           prog.extern("myPutc");
```

SYS Object Properties The SYS module does not support the creation of individual SYS objects.

SYS_abort*Abort program execution***C Interface**

Syntax SYS_abort(format, [arg,] ...);

Parameters String format; /* format specification string */
 Arg arg; /* optional argument */

Return Value Void

Description

SYS_abort aborts program execution by calling the function bound to the configuration parameter Abort function, where vargs is of type va_list (a void pointer which can be interpreted as an argument list) and represents the sequence of arg parameters originally passed to SYS_abort.

```
(*Abort_function)(format, vargs)
```

The function bound to Abort function can elect to pass the format and vargs parameters directly to SYS_vprintf or SYS_vsprintf prior to terminating program execution.

The default Abort function for the SYS manager is _UTL_doAbort, which logs an error message and calls UTL_halt, which is defined in the boot.c file. The UTL_halt function performs an infinite loop with all processor interrupts disabled.

Constraints and Calling Context

- ❑ If the function bound to Abort function is not reentrant, SYS_abort must be called atomically.

See Also

SYS_exit
SYS_printf

SYS_atexit*Stack an exit handler***C Interface**

Syntax	<code>success = SYS_atexit(handler);</code>
Parameters	<code>Fxn handler /* exit handler function */</code>
Return Value	<code>Bool success /* handler successfully stacked */</code>

Description

SYS_atexit pushes handler onto an internal stack of functions to be executed when SYS_exit is called. Up to SYS_NUMHANDLERS(8) functions can be specified in this manner. SYS_exit pops the internal stack until empty and calls each function as follows, where status is the parameter passed to SYS_exit:

```
(*handler) (status)
```

SYS_atexit returns TRUE if handler has been successfully stacked; FALSE if the internal stack is full.

The handlers on the stack are called only if either of the following happens:

- SYS_exit is called.
- All tasks for which the Don't shut down system while this task is still running property is TRUE have exited. (By default, this includes the TSK_idle task, which manages communication between the target and analysis tools.)
- handler cannot be NULL.

Constraints and Calling Context

SYS_error*Flag error condition***C Interface**

Syntax	<code>SYS_error(s, errno, [arg], ...);</code>
Parameters	<code>String s; /* error string */</code> <code>Int errno; /* error code */</code> <code>Arg arg; /* optional argument */</code>
Return Value	<code>Void</code>

Description

SYS_error is used to flag DSP/BIOS error conditions. Application programs should call SYS_error to handle program errors. Internal functions also call SYS_error.

SYS_error calls a function to handle errors. The default error function for the SYS manager is _UTL_doError, which logs an error message and returns. The default function can be replaced with your own error function by setting the SYS.ERRORFXN configuration property.

The default error function or an alternate configured error function is called as follows, where vargs is of type va_list (a void pointer which can be interpreted as an argument list) and represents the sequence of arg parameters originally passed to SYS_error.

```
(*Error_function)(s, errno, vargs)
```

Constraints and Calling Context

- ❑ The only valid error numbers are the error constants defined in sys.h (SYS_E*) or numbers greater than or equal to SYS_EUSER. Passing any other error values to SYS_error can cause DSP/BIOS to crash.

SYS_exit*Terminate program execution***C Interface**

Syntax SYS_exit(status);

Parameters Int status; /* termination status code */

Return Value Void

Description

SYS_exit first pops a stack of handlers registered through the function SYS_atexit, and then terminates program execution by calling the function bound to the configuration parameter Exit function, passing on its original status parameter.

```
(*handlerN) (status)
...
(*handler2) (status)
(*handler1) (status)

(*(Exit_function)) (status)
```

The default Exit function for the SYS manager is UTL_halt, which performs an infinite loop with all processor interrupts disabled.

Constraints and Calling Context

- If the function bound to Exit function or any of the handler functions is not reentrant, SYS_exit must be called atomically.

See Also

SYS_abort
SYS_atexit

SYS_printf*Output formatted data***C Interface**

Syntax	SYS_printf(format, [arg,] ...);		
Parameters	String	format;	/* format specification string */
	Arg	arg;	/* optional argument */
Return Value	Void		

Description SYS_printf provides a subset of the capabilities found in the standard C library function printf.

Note:

SYS_printf and the related functions are code-intensive. If possible, applications should use the LOG Module functions to reduce code size and execution time.

Conversion specifications begin with a % and end with a conversion character. The conversion characters recognized by SYS_printf are limited to the characters shown in Table 2-9.

Table 2-9. Conversion Characters Recognized by SYS_printf

Character	Corresponding Output Format
d	signed decimal integer
u	unsigned decimal integer
f	decimal floating point
o	octal integer
x	hexadecimal integer
c	single character
s	NULL-terminated string
p	pointer

Note that the %f conversion character is supported only on devices that have a native floating point type (for example, the 'C67x).

Between the % and the conversion character, the following symbols or specifiers contained in square brackets can appear, in the order shown.

`%[-][0][width]type`

A dash (-) symbol causes the converted argument to be left-justified within a field of width characters with blanks following. A 0 (zero) causes the converted argument to be right-justified within a field of size width with leading 0s. If neither a dash nor 0 are given, the converted argument is right-justified in a field of size width, with leading blanks. The width is a decimal integer. The converted argument is not modified if it has more than width characters, or if width is not given.

The length modifier `l` can precede `%d`, `%u`, `%o`, and `%x` if the corresponding argument is a 40-bit long integer. If the argument is a 32-bit long integer (`LgInt` or `LgUns`), the `l` modifier should not be used.

`SYS_vprintf` is equivalent to `SYS_printf`, except that the optional set of arguments is replaced by a `va_list` on which the standard C macro `va_start` has already been applied. `SYS_sprintf` and `SYS_vsprintf` are counterparts of `SYS_printf` and `SYS_vprintf`, respectively, in which output is placed in a specified buffer.

Both `SYS_printf` and `SYS_vprintf` internally call the function `SYS_putchar` to output individual characters via the `Putc` function configured in the `SYS` Manager Properties. The default `Putc` function is `_UTL_doPutc`, which writes a character to the system trace buffer. The size and memory segment for the system trace buffer can also be set in the `SYS` Manager Properties. This system trace buffer can be viewed only by looking for the `SYS_PUTCBEG` symbol in the Code Composer Studio memory view.

Constraints and Calling Context

- ❑ On a DSP with floating-point support, `SYS_printf` prints an error for floating point numbers whose absolute value is greater than the maximum long int (defined as `LONG_MAX` in the `<limits.h>` ANSI header). This is because the integer part is computed by simply casting the float parameter to a long int local variable.
- ❑ On a DSP with floating-point support, `SYS_printf` only prints four digits after the decimal point for floating point numbers. Since `SYS_printf` does not support `%e`, floating point numbers have to be scaled approximately before being passed to `SYS_printf`.
- ❑ The function bound to `Exit` function or any of the handler functions are not reentrant; `SYS_exit` must be called atomically.

See Also

`SYS_sprintf`
`SYS_vprintf`
`SYS_vsprintf`

SYS_sprintf*Output formatted data***C Interface**

Syntax	SYS_sprintf (buffer, format, [arg,] ...);		
Parameters	String	buffer;	/* output buffer */
	String	format;	/* format specification string */
	Arg	arg;	/* optional argument */
Return Value	Void		

Description SYS_sprintf provides a subset of the capabilities found in the standard C library function printf.

Note:

SYS_sprintf and the related functions are code-intensive. If possible, applications should use LOG Module module functions to reduce code size and execution time.

Conversion specifications begin with a % and end with a conversion character. The conversion characters recognized by SYS_sprintf are limited to the characters in Table 2-10.

Table 2-10. Conversion Characters Recognized by SYS_sprintf

Character	Corresponding Output Format
d	signed decimal integer
u	unsigned decimal integer
f	decimal floating point
o	octal integer
x	hexadecimal integer
c	single character
s	NULL-terminated string
p	pointer

Note that the %f conversion character is supported only on devices that have a native floating point type (for example, the 'C67x).

Between the % and the conversion character, the following symbols or specifiers contained within square brackets can appear, in the order shown.

% [-] [0] [width] type

A dash (-) symbol causes the converted argument to be left-justified within a field of width characters with blanks following. A 0 (zero) causes the converted argument to be right-justified within a field of size width with leading 0s. If neither a dash nor 0 are given, the converted argument is right-justified in a field of size width, with leading blanks. The width is a decimal integer. The converted argument is not modified if it has more than width characters, or if width is not given.

The length modifier l can precede %d, %u, %o, and %x if the corresponding argument is a 40-bit long integer. If the argument is a 32-bit long integer (LgInt or LgUns), the l modifier should not be used.

SYS_vprintf is equivalent to SYS_printf, except that the optional set of arguments is replaced by a va_list on which the standard C macro va_start has already been applied. SYS_sprintf and SYS_vsprintf are counterparts of SYS_printf and SYS_vprintf, respectively, in which output is placed in a specified buffer.

Both SYS_printf and SYS_vprintf internally call the function SYS_putchar to output individual characters in a system-dependent fashion via the configuration parameter Putc function. This parameter is bound to a function that displays output on a debugger if one is running, or places output in an output buffer between PUTCEND and PUTCBEG.

Constraints and Calling Context

- ❑ On a DSP with floating-point support, SYS_printf prints an error for floating point numbers whose absolute value is greater than the maximum long int (defined as LONG_MAX in the <limits.h> ANSI header). This is because the integer part is computed by simply casting the float parameter to a long int local variable.
- ❑ On a DSP with floating-point support, SYS_printf only prints four digits after the decimal point for floating point numbers. Since SYS_printf does not support %e, floating point numbers have to be scaled approximately before being passed to SYS_printf.
- ❑ The function bound to Exit function or any of the handler functions are not reentrant; SYS_exit must be called atomically.

See Also

SYS_printf
 SYS_vprintf
 SYS_vsprintf

SYS_vprintf*Output formatted data***C Interface**

Syntax SYS_vprintf(format, vars);

Parameters String format; /* format specification string */
 va_list vars; /* variable argument list reference */

Return Value Void

Description SYS_vprintf provides a subset of the capabilities found in the standard C library function printf.

Note:

SYS_vprintf and the related functions are code-intensive. If possible, applications should use LOG Module functions to reduce code size and execution time.

Conversion specifications begin with a % and end with a conversion character. The conversion characters recognized by SYS_vprintf are limited to the characters in Table 2-11.

Table 2-11. Conversion Characters Recognized by SYS_vprintf

Character	Corresponding Output Format
d	signed decimal integer
u	unsigned decimal integer
f	decimal floating point
o	octal integer
x	hexadecimal integer
c	single character
s	NULL-terminated string
p	pointer

Note that the %f conversion character is supported only on devices that have a native floating point type (for example, the 'C67x).

Between the % and the conversion character, the following symbols or specifiers contained within square brackets can appear, in the order shown.

```
% [-] [0] [width] type
```

A dash (-) symbol causes the converted argument to be left-justified within a field of width characters with blanks following. A 0 (zero) causes the converted argument to be right-justified within a field of size width with leading 0s. If neither a dash nor 0 are given, the converted argument is right-justified in a field of size width, with leading blanks. The width is a decimal integer. The converted argument is not modified if it has more than width characters, or if width is not given.

The length modifier l can precede %d, %u, %o, and %x if the corresponding argument is a 40-bit long integer. If the argument is a 32-bit long integer (LgInt or LgUns), the l modifier should not be used.

SYS_vprintf is equivalent to SYS_printf, except that the optional set of arguments is replaced by a va_list on which the standard C macro va_start has already been applied. SYS_sprintf and SYS_vsprintf are counterparts of SYS_printf and SYS_vprintf, respectively, in which output is placed in a specified buffer.

Both SYS_printf and SYS_vprintf internally call the function SYS_putchar to output individual characters via the Putc function configured in the SYS Manager Properties. The default Putc function is _UTL_doPutc, which writes a character to the system trace buffer. The size and memory segment for the system trace buffer can also be set in the SYS Manager Properties. This system trace buffer can be viewed only by looking for the SYS_PUTCBEG symbol in the Code Composer Studio memory view.

Constraints and Calling Context

- ❑ On a DSP with floating-point support, SYS_printf prints an error for floating point numbers whose absolute value is greater than the maximum long int (defined as LONG_MAX in the <limits.h> ANSI header). This is because the integer part is computed by simply casting the float parameter to a long int local variable.
- ❑ On a DSP with floating-point support, SYS_printf only prints four digits after the decimal point for floating point numbers. Since SYS_printf does not support %e, floating point numbers have to be scaled approximately before being passed to SYS_printf.
- ❑ The function bound to Exit function or any of the handler functions are not reentrant; SYS_exit must be called atomically.

See Also

SYS_printf
 SYS_sprintf
 SYS_vsprintf

SYS_vsprintf*Output formatted data***C Interface**

Syntax SYS_vsprintf(buffer, format, vargs);

Parameters

String	buffer;	/* output buffer */
String	format;	/* format specification string */
va_list	vargs;	/* variable argument list reference */

Return Value Void

Description SYS_vsprintf provides a subset of the capabilities found in the standard C library function printf.

Note:

SYS_vsprintf and the related functions are code-intensive. If possible, applications should use LOG Module functions to reduce code size and execution time.

Conversion specifications begin with a % and end with a conversion character. The conversion characters recognized by SYS_vsprintf are limited to the characters in Table 2-12.

Table 2-12. Conversion Characters Recognized by SYS_vsprintf

Character	Corresponding Output Format
d	signed decimal integer
u	unsigned decimal integer
f	decimal floating point
o	octal integer
x	hexadecimal integer
c	single character
s	NULL-terminated string
p	pointer

Note that the %f conversion character is supported only on devices that have a native floating point type (for example, the 'C67x).

Between the % and the conversion character, the following symbols or specifiers contained within square brackets can appear, in the order shown.

% [-] [0] [width] type

A dash (-) symbol causes the converted argument to be left-justified within a field of width characters with blanks following. A 0 (zero) causes the converted argument to be right-justified within a field of size width with leading 0s. If neither a dash nor 0 are given, the converted argument is right-justified in a field of size width, with leading blanks. The width is a decimal integer. The converted argument is not modified if it has more than width characters, or if width is not given.

The length modifier l can precede %d, %u, %o, and %x if the corresponding argument is a 40-bit long integer. If the argument is a 32-bit long integer (LgInt or LgUns), the l modifier should not be used.

SYS_vsprintf is equivalent to SYS_printf, except that the optional set of arguments is replaced by a va_list on which the standard C macro va_start has already been applied. SYS_sprintf and SYS_vsprintf are counterparts of SYS_printf and SYS_vsprintf, respectively, in which output is placed in a specified buffer.

Both SYS_printf and SYS_vsprintf internally call the function SYS_putchar to output individual characters in a system-dependent fashion via the configuration parameter Putc function. This parameter is bound to a function that displays output on a debugger if one is running, or places output in an output buffer between PUTCEND and PUTCBEG.

Constraints and Calling Context

- ❑ On a DSP with floating-point support, SYS_printf prints an error for floating point numbers whose absolute value is greater than the maximum long int (defined as LONG_MAX in the <limits.h> ANSI header). This is because the integer part is computed by simply casting the float parameter to a long int local variable.
- ❑ On a DSP with floating-point support, SYS_printf only prints four digits after the decimal point for floating point numbers. Since SYS_printf does not support %e, floating point numbers have to be scaled approximately before being passed to SYS_printf.
- ❑ The function bound to Exit function or any of the handler functions are not reentrant; SYS_exit must be called atomically.

See Also

SYS_printf
 SYS_sprintf
 SYS_vsprintf

SYS_putchar*Output a single character***C Interface**

Syntax	SYS_putchar(c);
Parameters	Char c; /* next output character */
Return Value	Void

Description

SYS_putchar outputs the character c by calling the system-dependent function bound to the configuration parameter Putc function.

```
((Putc function))(c)
```

For systems with limited I/O capabilities, the function bound to Putc function might simply place c into a global buffer that can be examined after program termination.

The default Putc function for the SYS manager is _UTL_doPutc, which writes a character to the system trace buffer. The size and memory segment for the system trace buffer can be set in the SYS Manager Properties. This system trace buffer can be viewed only by looking for the SYS_PUTCBEG symbol in the Code Composer Studio memory view.

SYS_putchar is also used internally by SYS_printf and SYS_vprintf when generating their output.

Constraints and Calling Context

- ❑ If the function bound to Putc function is not reentrant, SYS_putchar must be called atomically.

See Also

SYS_printf

2.30 TRC Module

The TRC module is the trace manager.

Functions

- TRC_disable. Disable trace class(es)
- TRC_enable. Enable trace type(s)
- TRC_query. Query trace class(es)

Description

The TRC module manages a set of trace control bits which control the real-time capture of program information through event logs and statistics accumulators. For greater efficiency, the target does not store log or statistics information unless tracing is enabled.

Table 2-13 lists events and statistics that can be traced. The constants defined in trc.h, trc.h62, and trc.h64 are shown in the left column.

Table 2-13. *Events and Statistics Traced by TRC*

Constant	Tracing Enabled/Disabled	Default
TRC_LOGCLK	Log timer interrupts	off
TRC_LOGPRD	Log periodic ticks and start of periodic functions	off
TRC_LOGSWI	Log events when a SWI is posted and completes	off
TRC_LOGTSK	Log events when a task is made ready, starts, becomes blocked, resumes	off
TRC_STSHWI	Gather statistics on monitored values within HWIs	off
TRC_STSPIP	Count number of frames read from or written to data pipe	off
TRC_STSPRD	Gather statistics on number of ticks elapsed during execution	off
TRC_STSSWI	Gather statistics on length of SWI execution	off
TRC_STSTSK	Gather statistics on length of TSK execution. Statistics are gathered from the time TSK is made ready to run until the application calls TSK_deltatime.	off
TRC_USER0 and TRC_USER1	Your program can use these bits to enable or disable sets of explicit instrumentation actions. You can use TRC_query to check the settings of these bits and either perform or omit instrumentation calls based on the result.	off
TRC_GBLHOST	This bit must be set in order for any implicit instrumentation to be performed. Simultaneously starts or stops gathering of all enabled types of tracing. This can be important if you are trying to correlate events of different types. This	off
TRC_GBLTARG	This bit must also be set for any implicit instrumentation to be performed. This bit can only be set by the target program and is enabled by default.	on
TRC_STSSWI	Gather statistics on length of SWI execution	off

All trace constants except TRC_GBLTARG are switched off initially. To enable tracing you can use calls to TRC_enable or the DSP/BIOS→RTA Control Panel, which uses the TRC module internally. You do not need to enable tracing for messages written with LOG_printf or LOG_event and statistics added with STS_add or STS_delta.

Your program can call the TRC_enable and TRC_disable operations to explicitly start and stop event logging or statistics accumulation in response to conditions encountered during real-time execution. This enables you to preserve the specific log or statistics information you need to see.

TRC_disable*Disable trace class(es)***C Interface**

Syntax TRC_disable(mask);

Parameters Uns mask; /* trace type constant */

Return Value Void

Reentrant no

Description TRC_disable disables tracing of one or more trace types. Trace types are specified with a 32-bit mask. (See the TRC Module topic for a list of constants to use in the mask.)

The following C code would disable tracing of statistics for software interrupts and periodic functions:

```
TRC_disable(TRC_LOGSWI | TRC_LOGPRD);
```

Internally, DSP/BIOS uses a bitwise AND NOT operation to disable multiple trace types.

For example, you might want to use TRC_disable with a circular log and disable tracing when an unwanted condition occurs. This allows test equipment to retrieve the log events that happened just before this condition started.

See Also

TRC_enable
 TRC_query
 LOG_printf
 LOG_event
 STS_add
 STS_delta

TRC_enable*Enable trace type(s)***C Interface**

Syntax TRC_enable(mask);

Parameters Uns mask; /* trace type constant */

Return Value Void

Reentrant no

Description

TRC_enable enables tracing of one or more trace types. Trace types are specified with a 32-bit mask. (See the TRC Module topic for a list of constants to use in the mask.)

The following C code would enable tracing of statistics for software interrupts and periodic functions:

```
TRC_enable (TRC_STSSWI | TRC_STSPRD);
```

Internally, DSP/BIOS uses a bitwise OR operation to enable multiple trace types.

For example, you might want to use TRC_enable with a fixed log to enable tracing when a specific condition occurs. This allows test equipment to retrieve the log events that happened just after this condition occurred.

See Also

TRC_disable
TRC_query
LOG_printf
LOG_event
STS_add
STS_delta

TRC_query*Query trace class(es)***C Interface**

Syntax	<code>result = TRC_query(mask);</code>
Parameters	Uns mask; <i>/* trace type constant mask */</i>
Return Value	Int result <i>/* indicates whether all trace types enabled */</i>
Reentrant	yes

Description

TRC_query determines whether particular trace types are enabled. TRC_query returns 0 if all trace types in the mask are enabled. If any trace types in the mask are disabled, TRC_query returns a value with a bit set for each trace type in the mask that is disabled. (See the TRC Module topic for a list of constants to use in the mask.)

Trace types are specified with a 32-bit mask. The full list of constants you can use is included in the description of the TRC module.

For example, the following C code returns 0 if statistics tracing for the PRD class is enabled:

```
result = TRC_query(TRC_STSPRD);
```

The following C code returns 0 if both logging and statistics tracing for the SWI class are enabled:

```
result = TRC_query(TRC_LOGSWI | TRC_STSSWI);
```

Note that TRC_query does not return 0 unless the bits you are querying and the TRC_GBLHOST and TRC_GBLTARG bits are set. TRC_query returns non-zero if either TRC_GBLHOST or TRC_GBLTARG are disabled. This is because no tracing is done unless these bits are set.

For example, if the TRC_GBLHOST, TRC_GBLTARG, and TRC_LOGSWI bits are set, this C code returns the results shown:

```
result = TRC_query(TRC_LOGSWI); /* returns 0 */
result = TRC_query(TRC_LOGPRD); /* returns non-zero */
```

However, if only the TRC_GBLHOST and TRC_LOGSWI bits are set, the same C code returns the results shown:

```
result = TRC_query(TRC_LOGSWI); /* returns non-zero */
result = TRC_query(TRC_LOGPRD); /* returns non-zero */
```

See Also

TRC_enable
TRC_disable

2.31 TSK Module

The TSK module is the task manager.

Functions

- ❑ TSK_checkstacks. Check for stack overflow
- ❑ TSK_create. Create a task ready for execution
- ❑ TSK_delete. Delete a task
- ❑ TSK_deltatime. Update task STS with time difference
- ❑ TSK_disable. Disable DSP/BIOS task scheduler
- ❑ TSK_enable. Enable DSP/BIOS task scheduler
- ❑ TSK_exit. Terminate execution of the current task
- ❑ TSK_getenv. Get task environment
- ❑ TSK_geterr. Get task error number
- ❑ TSK_getname. Get task name
- ❑ TSK_getpri. Get task priority
- ❑ TSK_getsts. Get task STS object
- ❑ TSK_isTSK. Check current thread calling context
- ❑ TSK_itick. Advance system alarm clock (interrupt only)
- ❑ TSK_self. Get handle of currently executing task
- ❑ TSK_setenv. Set task environment
- ❑ TSK_seterr. Set task error number
- ❑ TSK_setpri. Set a task's execution priority
- ❑ TSK_settime. Set task STS previous time
- ❑ TSK_sleep. Delay execution of the current task
- ❑ TSK_stat. Retrieve the status of a task
- ❑ TSK_tick. Advance system alarm clock
- ❑ TSK_time. Return current value of system clock
- ❑ TSK_yield. Yield processor to equal priority task

Task Hook Functions

```
Void TSK_createFxn(TSK_Handle task);  
Void TSK_deleteFxn(TSK_Handle task);  
Void TSK_exitFxn(Void);  
Void TSK_readyFxn(TSK_Handle newtask);
```

Constants, Types, and Structures

```

Void TSK_switchFxn(TSK_Handle oldtask,
                  TSK_Handle newtask);

typedef struct TSK_OBJ *TSK_Handle;
/* handle for task object */

struct TSK_Attrs { /* task attributes */
    Int    priority; /* execution priority */
    Ptr    stack;    /* pre-allocated stack */
    size_t stacksize; /* stack size in MADUs */
    Int    stackseg; /* mem seg for stack allocation */
    Ptr    environ;  /* global environment data struct */
    String name;     /* printable name */
    Bool   exitflag; /* program termination requires */
                /* this task to terminate */
    Bool   initstackflag; /* initialize task stack? */
};

Int TSK_pid; /* MP processor ID */

Int TSK_MAXARGS = 8; /* max number of task arguments */
Int TSK_IDLEPRI = 0; /* used for idle task */
Int TSK_MINPRI = 1; /* minimum execution priority */
Int TSK_MAXPRI = 15; /* maximum execution priority */
Int TSK_STACKSTAMP = 0xBEBEBEBE
TSK_Attrs TSK_ATTRS = { /* default attribute values */
    TSK->PRIORITY, /* priority */
    NULL, /* stack */
    TSK->STACKSIZE, /* stacksize */
    TSK->STACKSEG, /* stackseg */
    NULL, /* environ */
    "", /* name */
    TRUE, /* exitflag */
    TRUE, /* initstackflag */
};

enum TSK_Mode { /* task execution modes */
    TSK_RUNNING, /* task currently executing */
    TSK_READY, /* task scheduled for execution */
    TSK_BLOCKED, /* task suspended from execution */
    TSK_TERMINATED, /* task terminated from execution */
};

struct TSK_Stat { /* task status structure */
    TSK_Attrs attrs; /* task attributes */
    TSK_Mode mode; /* task execution mode */
    Ptr sp; /* task stack pointer */
    size_t used; /* task stack used */
};

```

Configuration Properties

The following list shows the properties that can be configured in a Tconf script, along with their types and default values. For details, see the TSK Manager Properties and TSK Object Properties headings. For descriptions of data types, see Section 1.4, *DSP/BIOS Tconf Overview*, page 1-4.

Module Configuration Parameters

Name	Type	Default (Enum Options)
ENABLETSK	Bool	true
OBJMEMSEG	Reference	prog.get("IDRAM")
STACKSIZE	Int16	1024
STACKSEG	Reference	prog.get("IDRAM")
PRIORITY	EnumInt	1 (1 to 15)
DRIVETSKTICK	EnumString	"PRD" ("User")
CREATEFXN	Extern	prog.extern("FXN_F_nop")
DELETFXN	Extern	prog.extern("FXN_F_nop")
EXITFXN	Extern	prog.extern("FXN_F_nop")
CALLSWITCHFXN	Bool	false
SWITCHFXN	Extern	prog.extern("FXN_F_nop")
CALLREADYFXN	Bool	false
READYFXN	Extern	prog.extern("FXN_F_nop")

Instance Configuration Parameters

Name	Type	Default (Enum Options)
comment	String	"<add comments here>"
autoAllocateStack	Bool	true
manualStack	Extern	prog.extern("null","asm")
stackSize	Int16	1024
stackMemSeg	Reference	prog.get("IDRAM")
priority	EnumInt	0 (-1, 0, 1 to 15)
fxn	Extern	prog.extern("FXN_F_nop")
arg0	Arg	0
arg7	Arg	0
envPointer	Arg	0x00000000
exitFlag	Bool	true
allocateTaskName	Bool	false
order	Int16	0

Description

The TSK module makes available a set of functions that manipulate task objects accessed through handles of type `TSK_Handle`. Tasks represent independent threads of control that conceptually execute functions in parallel within a single C program; in reality, concurrency is achieved by switching the processor from one task to the next.

When you create a task, it is provided with its own run-time stack, used for storing local variables as well as for further nesting of function calls. The `TSK_STACKSTAMP` value is used to initialize the run-time stack. When creating a task dynamically, you need to initialize the stack with `TSK_STACKSTAMP` only if the stack is allocated manually and `TSK_checkstacks` or `TSK_stat` is to be called. Each stack must be large enough to handle normal subroutine calls as well as a single task preemption context. A task preemption context is the context that gets saved when one task preempts another as a result of an interrupt thread readying a higher-priority task. All tasks executing within a single program share a common set of global variables, accessed according to the standard rules of scope defined for C functions.

Each task is in one of four modes of execution at any point in time: running, ready, blocked, or terminated. By design, there is always one (and only one) task currently running, even if it is a dummy idle task managed internally by TSK. The current task can be suspended from execution by calling certain TSK functions, as well as functions provided by other modules like the SEM Module and the SIO Module; the current task can also terminate its own execution. In either case, the processor is switched to the next task that is ready to run.

You can assign numeric priorities to tasks through TSK. Tasks are readied for execution in strict priority order; tasks of the same priority are scheduled on a first-come, first-served basis. As a rule, the priority of the currently running task is never lower than the priority of any ready task. Conversely, the running task is preempted and re-scheduled for execution whenever there exists some ready task of higher priority.

You can use `Tconf` to specify one or more sets of application-wide hook functions that run whenever a task state changes in a particular way. For the TSK module, these functions are the `Create`, `Delete`, `Exit`, `Switch`, and `Ready` functions. The `HOOK` module adds an additional Initialization function.

A single set of hook functions can be specified for the TSK module itself. To create additional sets of hook functions, use the `HOOK` Module. When you create the first `HOOK` object, any TSK module hook functions you have specified are automatically placed in a `HOOK` object called `HOOK_KNL`. To set any properties of this object other than the Initialization function, use the TSK module properties. To set the

Initialization function property of the HOOK_KNL object, use the HOOK object properties. If you configure only a single set of hook functions using the TSK module, the HOOK module is not used.

The TSK_create topic describes the Create function. The TSK_delete topic describes the Delete function. The TSK_exit topic describes the Exit function.

If a Switch function is specified, it is invoked when a new task becomes the TSK_RUNNING task. The Switch function gives the application access to both the current and next task handles at task switch time. The function should use these argument types:

```
Void mySwitchFxn(TSK_Handle currTask,  
                TSK_Handle nextTask);
```

This function can be used to save/restore additional task context (for example, external hardware registers), to check for task stack overflow, to monitor the time used by each task, etc.

If a Ready function is specified, it is invoked whenever a task is made ready to run. Even if a higher-priority thread is running, the Ready function runs. The Ready function is called with a handle to the task being made ready to run as its argument. This example function prints the name of both the task that is ready to run and the task that is currently running:

```
Void myReadyFxn(TSK_Handle task)  
{  
    String      nextName, currName;  
    TSK_Handle  currTask = TSK_self();  
  
    nextName = TSK_getname(task);  
    LOG_printf(&trace, "Task %s Ready", nextName);  
  
    currName = TSK_getname(currTask);  
    LOG_printf(&trace, "Task %s Running", currName);  
}
```

The Switch function and Ready function are called in such a way that they can use only functions allowed within a SWI handler. See Appendix A, Function Callability Table, for a list of functions that can be called by SWI handlers. There are no real constraints on what functions are called via the Create function, Delete function, or Exit function.

TSK Manager Properties

The following global properties can be set for the TSK module in the TSK Manager Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

- ❑ **Enable TSK Manager.** If no tasks are used by the program other than TSK_idle, you can optimize the program by disabling the task manager. The program must then not use TSK objects created with either Tconf or the TSK_create function. If the task manager is disabled, the idle loop still runs and uses the system stack instead of a task stack.

Tconf Name: ENABLETSK Type: Bool

Example: `bios.TSK.ENABLETSK = true;`

- ❑ **Object Memory.** The memory segment that contains the TSK objects created with Tconf.

Tconf Name: OBJMEMSEG Type: Reference

Example: `bios.TSK.OBJMEMSEG = prog.get("myMEM");`

- ❑ **Default stack size.** The default size of the stack (in MADUs) used by tasks. You can override this value for an individual task you create with Tconf or TSK_create. The estimated minimum task size is shown in the status bar of the DSP/BIOS Configuration Tool. This property applies to TSK objects created both with Tconf and with TSK_create.

Tconf Name: STACKSIZE Type: Int16

Example: `bios.TSK.STACKSIZE = 1024;`

- ❑ **Stack segment for dynamic tasks.** The default memory segment to contain task stacks created at run-time with the TSK_create function. The TSK_Attrs structure passed to the TSK_create function can override this default. If you select MEM_NULL for this property, creation of task objects at run-time is disabled.

Tconf Name: STACKSEG Type: Reference

Example: `bios.TSK.STACKSEG = prog.get("myMEM");`

- ❑ **Default task priority.** The default priority level for tasks that are created dynamically with TSK_create. This property applies to TSK objects created both with Tconf and with TSK_create.

Tconf Name: PRIORITY Type: EnumInt

Options: 1 to 15

Example: `bios.TSK.PRIORITY = 1;`

- TSK tick driven by.** Choose whether you want the system clock to be driven by the PRD module or by calls to TSK_tick and TSK_itick. This clock is used by TSK_sleep and functions such as SEM_pend that accept a timeout argument.

Tconf Name: DRIVETSKTICK Type: EnumString

Options: "PRD", "User"

Example: `bios.TSK.DRIVETSKTICK = "PRD";`

- Create function.** The name of a function to call when any task is created. This includes tasks that are created statically and those created dynamically using TSK_create. If you are using Tconf, do not add an underscore before the function name; Tconf adds the underscore needed to call a C function from assembly internally. The TSK_create topic describes the Create function.

Tconf Name: CREATEFXN Type: Extern

Example: `bios.TSK.CREATEFXN =
prog.extern("tskCreate");`

- Delete function.** The name of a function to call when any task is deleted at run-time with TSK_delete. The TSK_delete topic describes the Delete function.

Tconf Name: DELETEFXN Type: Extern

Example: `bios.TSK.DELETEFXN =
prog.extern("tskDelete");`

- Exit function.** The name of a function to call when any task exits. The TSK_exit topic describes the Exit function.

Tconf Name: EXITFXN Type: Extern

Example: `bios.TSK.EXITFXN =
prog.extern("tskExit");`

- Call switch function.** Check this box if you want a function to be called when any task switch occurs.

Tconf Name: CALLSWITCFXN Type: Bool

Example: `bios.TSK.CALLSWITCFXN = false;`

- Switch function.** The name of a function to call when any task switch occurs. This function can give the application access to both the current and next task handles. The TSK Module topic describes the Switch function.

Tconf Name: SWITCHFXN Type: Extern

Example: `bios.TSK.SWITCHFXN =
prog.extern("tskSwitch");`

- Call ready function.** Check this box if you want a function to be called when any task becomes ready to run.

Tconf Name: CALLREADYFXN Type: Bool

Example: `bios.TSK.CALLREADYFXN = false;`

- Ready function.** The name of a function to call when any task becomes ready to run. The TSK Module topic describes the Ready function.

Tconf Name: READYFXN Type: Extern

Example: `bios.TSK.READYFXN =
prog.extern("tskReady");`

TSK Object Properties

To create a TSK object in a configuration script, use the following syntax. The Tconf examples that follow assume the object has been created as shown here.

```
var myTsk = bios.TSK.create("myTsk");
```

The following properties can be set for a TSK object in the TSK Object Properties dialog of the DSP/BIOS Configuration Tool or in a Tconf script:

General tab

- comment.** Type a comment to identify this TSK object.

Tconf Name: comment Type: String

Example: `myTsk.comment = "my TSK";`

- Automatically allocate stack.** Check this box if you want the task's private stack space to be allocated automatically when this task is created. The task's context is saved in this stack before any higher-priority task is allowed to block this task and run.

Tconf Name: autoAllocateStack Type: Bool

Example: `myTsk.autoAllocateStack = true;`

- Manually allocated stack.** If you did not check the box to Automatically allocate stack, type the name of the manually allocated stack to use for this task.

Tconf Name: manualStack Type: Extern

Example: `myTsk.manualStack =
prog.extern("myStack");`

- Stack size.** Enter the size (in MADUs) of the stack space to allocate for this task. You must enter the size whether the application allocates the stack manually or automatically. Each stack must be large enough to handle normal subroutine calls as well as a single

task preemption context. A task preemption context is the context that gets saved when one task preempts another as a result of an interrupt thread readying a higher priority task.

Tconf Name: `stackSize` Type: Int16

Example: `myTsk.stackSize = 1024;`

- ❑ **Stack Memory Segment.** If you set the "Automatically allocate stack" property to true, specify the memory segment to contain the stack space for this task.

Tconf Name: `stackMemSeg` Type: Reference

Example: `myTsk.stackMemSeg = prog.get("myMEM");`

- ❑ **Priority.** The priority level for this task. A priority of -1 causes a task to be suspended until its priority is raised programmatically.

Tconf Name: `priority` Type: EnumInt

Options: `-1, 0, 1 to 15`

Example: `myTsk.priority = 1;`

Function tab

- ❑ **Task function.** The function to be executed when the task runs. If this function is written in C and you are using the DSP/BIOS Configuration Tool, use a leading underscore before the C function name. (The DSP/BIOS Configuration Tool generates assembly code which must use the leading underscore when referencing C functions or labels.) If you are using Tconf, do not add an underscore before the function name; Tconf adds the underscore needed to call a C function from assembly internally. If you compile C programs with the `-pm` or `-op2` options, you should precede C functions called by task threads with the `FUNC_EXT_CALLED` pragma. See the online help for the C compiler for details.

Tconf Name: `fxn` Type: Extern

Example: `myTsk.fxn = prog.extern("tskFxn");`

- ❑ **Task function argument 0-7.** The arguments to pass to the task function. Arguments can be integers or labels.

Tconf Name: `arg0 to arg7` Type: Arg

Example: `myTsk.arg0 = 0;`

Advanced tab

- ❑ **Environment pointer.** A pointer to a globally-defined data structure this task can access. The task can get and set the task environment pointer with the `TSK_getenv` and `TSK_setenv` functions. If your program uses multiple HOOK objects, `HOOK_setenv` allows you to set individual environment pointers for each HOOK and TSK object combination.

Tconf Name: `envPointer` Type: Arg

Example: `myTsk.envPointer = 0;`

- ❑ **Don't shut down system while this task is still running.** Check this box if you do not want the application to be able to end if this task is still running. The application can still abort. For example, you might clear this box for a monitor task that collects data whenever all other tasks are blocked. The application does not need to explicitly shut down this task.

Tconf Name: `exitFlag`

Type: Bool

Example: `myTsk.exitFlag = true;`

- ❑ **Allocate Task Name on Target.** Check this box if you want the name of this TSK object to be retrievable by the `TSK_getname` function. Clearing this box saves a small amount of memory. The task name is available in analysis tools in either case.

Tconf Name: `allocateTaskName`

Type: Bool

Example: `myTsk.allocateTaskName = false;`

- ❑ **order.** Set this property for all TSK objects so that the numbers match the sequence in which TSK functions with the same priority level should be executed.

Tconf Name: `order`

Type: Int16

Example: `myTsk.order = 2;`

TSK_checkstacks *Check for stack overflow***C Interface**

Syntax	<code>TSK_checkstacks(oldtask, newtask);</code>
Parameters	<code>TSK_Handle oldtask; /* handle of task switched from */</code> <code>TSK_Handle newtask; /* handle of task switched to */</code>
Return Value	Void

Description

`TSK_checkstacks` calls `SYS_abort` with an error message if either `oldtask` or `newtask` has a stack in which the last location no longer contains the initial value `TSK_STACKSTAMP`. The presumption in one case is that `oldtask`'s stack overflowed, and in the other that an invalid store has corrupted `newtask`'s stack.

`TSK_checkstacks` requires that the stack was initialized by DSP/BIOS. For dynamically-created tasks, initialization is controlled by the `initstackflag` attribute in the `TSK_Attrs` structure passed to `TSK_create`. Statically configured tasks always initialize the stack.

You can call `TSK_checkstacks` directly from your application. For example, you can check the current task's stack integrity at any time with a call like the following:

```
TSK_checkstacks(TSK_self(), TSK_self());
```

However, it is more typical to call `TSK_checkstacks` in the task `Switch` function specified for the TSK manager in your configuration file. This provides stack checking at every context switch, with no alterations to your source code.

If you want to perform other operations in the `Switch` function, you can do so by writing your own function (`myswitchfxn`) and then calling `TSK_checkstacks` from it.

```
Void myswitchfxn(TSK_Handle oldtask,  
                TSK_Handle newtask)  
{  
    `your additional context switch operations`  
    TSK_checkstacks(oldtask, newtask);  
    ...  
}
```

Constraints and Calling Context

- ❑ `TSK_checkstacks` cannot be called from an HWI or SWI.

TSK_create*Create a task ready for execution***C Interface****Syntax**

```
task = TSK_create(fxn, attrs, [arg,] ...);
```

Parameters

```
Fxn      fxn;      /* pointer to task function */
TSK_Attrs *attrs;  /* pointer to task attributes */
Arg      arg;      /* task arguments */
```

Return Value

```
TSK_Handle task;  /* task object handle */
```

Description

TSK_create creates a new task object. If successful, TSK_create returns the handle of the new task object. If unsuccessful, TSK_create returns NULL unless it aborts (for example, because it directly or indirectly calls SYS_error, and SYS_error is configured to abort).

The fxn parameter uses the Fxn type to pass a pointer to the function the TSK object should run. For example, if myFxn is a function in your program, you can create a TSK object to call that function as follows:

```
task = TSK_create((Fxn)myFxn, NULL);
```

You can use Tconf to specify an application-wide Create function that runs whenever a task is created. This includes tasks that are created statically and those created dynamically using TSK_create. The default Create function is a no-op function.

For TSK objects created statically, the Create function is called during the BIOS_start portion of the program startup process, which runs after the main() function and before the program drops into the idle loop.

For TSK objects created dynamically, the Create function is called after the task handle has been initialized but before the task has been placed on its ready queue.

Any DSP/BIOS function can be called from the Create function. DSP/BIOS passes the task handle of the task being created to the Create function. The Create function declaration should be similar to this:

```
Void myCreateFxn(TSK_Handle task);
```

The new task is placed in TSK_READY mode, and is scheduled to begin concurrent execution of the following function call:

```
(*fxn)(arg1, arg2, ... argN) /* N = TSK_MAXARGS = 8 */
```

As a result of being made ready to run, the task runs the application-wide Ready function if one has been specified.

TSK_exit is automatically called if and when the task returns from fxn.

If attrs is NULL, the new task is assigned a default set of attributes. Otherwise, the task's attributes are specified through a structure of type TSK_Attrs, which is defined as follows.

```
struct TSK_Attrs { /* task attributes */
    Int    priority; /* execution priority */
    Ptr    stack;    /* pre-allocated stack */
    size_t stacksize; /* stack size in MADUs */
    Int    stackseg; /* mem seg for stack alloc */
    Ptr    environ;  /* global environ data struct */
    String name;     /* printable name */
    Bool   exitflag; /* prog termination requires */
                    /* this task to terminate */
    Bool   initstackflag; /* initialize task stack? */
};
```

The priority attribute specifies the task's execution priority and must be less than or equal to TSK_MAXPRI (15); this attribute defaults to the value of the configuration parameter Default task priority (preset to TSK_MINPRI). If priority is less than 0, the task is barred from execution until its priority is raised at a later time by TSK_setpri. A priority value of 0 is reserved for the TSK_idle task defined in the default configuration. You should not use a priority of 0 for any other tasks.

The stack attribute specifies a pre-allocated block of stacksize MADUs to be used for the task's private stack; this attribute defaults to NULL, in which case the task's stack is automatically allocated using MEM_alloc from the memory segment given by the stackseg attribute.

The stacksize attribute specifies the number of MADUs to be allocated for the task's private stack; this attribute defaults to the value of the configuration parameter Default stack size (preset to 1024). Each stack must be large enough to handle normal subroutine calls as well as a single task preemption context. A task preemption context is the context that gets saved when one task preempts another as a result of an interrupt thread readying a higher priority task.

The stackseg attribute specifies the memory segment to use when allocating the task stack with MEM_alloc; this attribute defaults to the value of the configuration parameter Default stack segment.

The environ attribute specifies the task's global environment through a generic pointer that references an arbitrary application-defined data structure; this attribute defaults to NULL.

The name attribute specifies the task's printable name, which is a NULL-terminated character string; this attribute defaults to the empty string "". This name can be returned by TSK_getname.

The `exitflag` attribute specifies whether the task must terminate before the program as a whole can terminate; this attribute defaults to `TRUE`.

The `initstackflag` attribute specifies whether the task stack is initialized to enable stack depth checking by `TSK_checkstacks`. This attribute applies both in cases where the stack attribute is `NULL` (stack is allocated by `TSK_create`) and where the stack attribute is used to specify a pre-allocated stack. If your application does not call `TSK_checkstacks`, you can reduce the time consumed by `TSK_create` by setting this attribute to `FALSE`.

All default attribute values are contained in the constant `TSK_ATTRS`, which can be assigned to a variable of type `TSK_Attrs` prior to calling `TSK_create`.

A task switch occurs when calling `TSK_create` if the priority of the new task is greater than the priority of the current task.

`TSK_create` calls `MEM_alloc` to dynamically create an object's data structure. `MEM_alloc` must lock the memory before proceeding. If another thread already holds a lock to the memory, then there is a context switch. The segment from which the object is allocated is described by the DSP/BIOS objects property in the MEM Module, page 2–243.

Constraints and Calling Context

- ❑ `TSK_create` cannot be called from a SWI or HWI.
- ❑ The `fxn` parameter and the name attribute cannot be `NULL`.
- ❑ The priority attribute must be less than or equal to `TSK_MAXPRI` and greater than or equal to `TSK_MINPRI`. The priority can be less than zero (0) for tasks that should not execute.
- ❑ The string referenced through the name attribute cannot be allocated locally.
- ❑ The `stackseg` attribute must identify a valid memory segment.
- ❑ Task arguments passed to `TSK_create` cannot be greater than 32 bits in length; that is, 40-bit integers and Double or Long Double data types cannot be passed as arguments to the `TSK_create` function.
- ❑ You can reduce the size of your application program by creating objects with `Tconf` rather than using the `XXX_create` functions.

See Also

`MEM_alloc`
`SYS_error`
`TSK_delete`
`TSK_exit`

TSK_delete*Delete a task***C Interface**

Syntax	TSK_delete(task);
Parameters	TSK_Handle task; /* task object handle */
Return Value	Void

Description

TSK_delete removes the task from all internal queues and calls MEM_free to free the task object and stack. task should be in a state that does not violate any of the listed constraints.

If all remaining tasks have their exitflag attribute set to FALSE, DSP/BIOS terminates the program as a whole by calling SYS_exit with a status code of 0.

You can use Tconf to specify an application-wide Delete function that runs whenever a task is deleted. The default Delete function is a no-op function. The Delete function is called before the task object has been removed from any internal queues and its object and stack are freed. Any DSP/BIOS function can be called from the Delete function. DSP/BIOS passes the task handle of the task being deleted to your Delete function. Your Delete function declaration should be similar to the following:

```
Void myDeleteFxn(TSK_Handle task);
```

TSK_delete calls MEM_free to delete the TSK object. MEM_free must acquire a lock to the memory before proceeding. If another task already holds a lock to the memory, then there is a context switch.

Note:

Unless the mode of the deleted task is TSK_TERMINATED, TSK_delete should be called with care. For example, if the task has obtained exclusive access to a resource, deleting the task makes the resource unavailable.

Constraints and Calling Context

- The task cannot be the currently executing task (TSK_self).
- TSK_delete cannot be called from a SWI or HWI.
- No check is performed to prevent TSK_delete from being used on a statically-created object. If a program attempts to delete a task object that was created using Tconf, SYS_error is called.

See Also

MEM_free
TSK_create

TSK_deltatime*Update task statistics with time difference***C Interface**

Syntax	TSK_deltatime(task);
Parameters	TSK_Handle task; /* task object handle */
Return Value	Void

Description

This function accumulates the time difference from when a task is made ready to the time TSK_deltatime is called. These time differences are accumulated in the task's internal STS object and can be used to determine whether or not a task misses real-time deadlines.

If TSK_deltatime is not called by a task, its STS object is never updated in the Statistics View, even if TSK accumulators are enabled in the RTA Control Panel.

TSK statistics are handled differently than other statistics because TSK functions typically run an infinite loop that blocks when waiting for other threads. In contrast, HWI and SWI functions run to completion without blocking. Because of this difference, DSP/BIOS allows programs to identify the "beginning" of a TSK function's processing loop by calling TSK_settime and the "end" of the loop by calling TSK_deltatime.

For example, if a task waits for data and then processes the data, you want to ensure that the time from when the data is made available until the processing is complete is always less than a certain value. A loop within the task can look something like the following:

```
Void task
{
    'do some startup work'

    /* Initialize time in task's
       STS object to current time */
    TSK_settime(TSK_self());

    for (;;) {
        /* Get data */
        SIO_get(...);

        'process data'
```

```
        /* Get time difference and
           add it to task's STS object */
        TSK_deltatime(TSK_self());
    }
}
```

In the example above, the task blocks on SIO_get and the device driver posts a semaphore that readies the task. DSP/BIOS sets the task's statistics object with the current time when the semaphore becomes available and the task is made ready to run. Thus, the call to TSK_deltatime effectively measures the processing time of the task.

**Constraints and
Calling Context**

- ❑ The results of calls to TSK_deltatime and TSK_settime are displayed in the Statistics View only if Enable TSK accumulators is selected in the RTA Control Panel.

See Also

TSK_getsts
TSK_settime

TSK_disable*Disable DSP/BIOS task scheduler***C Interface****Syntax** TSK_disable();**Parameters** Void**Return Value** Void

Description TSK_disable disables the DSP/BIOS task scheduler. The current task continues to execute (even if a higher priority task can become ready to run) until TSK_enable is called.

TSK_disable does not disable interrupts, but is instead used before disabling interrupts to make sure a context switch to another task does not occur when interrupts are disabled.

TSK_disable maintains a count which allows nested calls to TSK_disable. Task switching is not reenabled until TSK_enable has been called as many times as TSK_disable. Calls to TSK_disable can be nested.

Since TSK_disable can prohibit ready tasks of higher priority from running it should not be used as a general means of mutual exclusion. SEM Module semaphores should be used for mutual exclusion when possible.

Constraints and Calling Context

- ❑ Do not call any function that can cause the current task to block within a TSK_disable/TSK_enable block. For example, SEM_pend (if timeout is non-zero), TSK_sleep, TSK_yield, and MEM_alloc can all cause blocking. For a complete list, see Section A.1, *Function Callability Table*, page A-2.
- ❑ TSK_disable cannot be called from a SWI or HWI.
- ❑ TSK_disable cannot be called from the program's main() function.
- ❑ Do not call TSK_enable when TSKs are already enabled. If you do so, the subsequent call to TSK_disable will not disable TSK processing.

See Also SEM Module
TSK_enable

TSK_enable*Enable DSP/BIOS task scheduler***C Interface****Syntax** TSK_enable();**Parameters** Void**Return Value** Void**Description**

TSK_enable is used to reenble the DSP/BIOS task scheduler after TSK_disable has been called. Since TSK_disable calls can be nested, the task scheduler is not enabled until TSK_enable is called the same number of times as TSK_disable.

A task switch occurs when calling TSK_enable only if there exists a TSK_READY task whose priority is greater than the currently executing task.

Constraints and Calling Context

- ❑ Do not call any function that can cause the current task to block within a TSK_disable/TSK_enable block. For example, SEM_pend (if timeout is non-zero), TSK_sleep, TSK_yield, and MEM_alloc can all cause blocking. For a complete list, see Section A.1, *Function Callability Table*, page A-2.
- ❑ TSK_enable cannot be called from a SWI or HWI.
- ❑ TSK_enable cannot be called from the program's main() function.
- ❑ Do not call TSK_enable when TSKs are already enabled. If you do so, the subsequent call to TSK_disable will not disable TSK processing.

See AlsoSEM Module
TSK_disable

TSK_exit*Terminate execution of the current task***C Interface****Syntax** TSK_exit();**Parameters** Void**Return Value** Void**Description**

TSK_exit terminates execution of the current task, changing its mode from TSK_RUNNING to TSK_TERMINATED. If all tasks have been terminated, or if all remaining tasks have their exitflag attribute set to FALSE, then DSP/BIOS terminates the program as a whole by calling the function SYS_exit with a status code of 0.

TSK_exit is automatically called whenever a task returns from its top-level function.

You can use Tconf to specify an application-wide Exit function that runs whenever a task is terminated. The default Exit function is a no-op function. The Exit function is called before the task has been blocked and marked TSK_TERMINATED. Any DSP/BIOS function can be called from an Exit function. Calling TSK_self within an Exit function returns the task being exited. Your Exit function declaration should be similar to the following:

```
Void myExitFxn(Void);
```

A task switch occurs when calling TSK_exit unless the program as a whole is terminated.

Constraints and Calling Context

- ❑ TSK_exit cannot be called from a SWI or HWI.
- ❑ TSK_exit cannot be called from the program's main() function.

See Also

MEM_free
 TSK_create
 TSK_delete

TSK_getenv*Get task environment pointer***C Interface**

Syntax `environ = TSK_getenv(task);`

Parameters `TSK_Handle task; /* task object handle */`

Return Value `Ptr environ; /* task environment pointer */`

Description

TSK_getenv returns the environment pointer of the specified task. The environment pointer, environ, references an arbitrary application-defined data structure.

If your program uses multiple HOOK objects, HOOK_getenv allows you to get environment pointers you have set for a particular HOOK and TSK object combination.

See Also

HOOK_getenv
HOOK_setenv
TSK_setenv
TSK_seterr
TSK_setpri

TSK_geterr*Get task error number***C Interface**

Syntax `errno = TSK_geterr(task);`

Parameters `TSK_Handle task; /* task object handle */`

Return Value `Int errno; /* error number */`

Description Each task carries a task-specific error number. This number is initially `SYS_OK`, but it can be changed by `TSK_seterr`. `TSK_geterr` returns the current value of this number.

See Also `SYS_error`
`TSK_setenv`
`TSK_seterr`
`TSK_setpri`

TSK_getname*Get task name***C Interface****Syntax** name = TSK_getname(task);**Parameters** TSK_Handle task; /* task object handle */**Return Value** String name; /* task name */**Description** TSK_getname returns the task's name.

For tasks created with Tconf, the name is available to this function only if the "Allocate Task Name on Target" property is set to true for this task. For tasks created with TSK_create, TSK_getname returns the attrs.name field value, or an empty string if this attribute was not specified.

See Also TSK_setenv
 TSK_seterr
 TSK_setpri

TSK_getpri*Get task priority***C Interface**

Syntax `priority = TSK_getpri(task);`

Parameters `TSK_Handle task; /* task object handle */`

Return Value `Int priority; /* task priority */`

Description `TSK_getpri` returns the priority of task.

See Also `TSK_setenv`
`TSK_seterr`
`TSK_setpri`

TSK_getsts*Get the handle of the task's STS object***C Interface**

Syntax `sts = TSK_getsts(task);`

Parameters `TSK_Handle task; /* task object handle */`

Return Value `STS_Handle sts; /* statistics object handle */`

Description

This function provides access to the task's internal STS object. For example, you can want the program to check the maximum value to see if it has exceeded some value.

See Also

`TSK_deltatime`
`TSK_settime`

TSK_isTSK

Check to see if called in the context of a TSK

C Interface

Syntax `result = TSK_isTSK(Void);`

Parameters `Void`

Return Value `Bool result; /* TRUE if in TSK context, FALSE otherwise */`

Reentrant `yes`

Description This macro returns TRUE when it is called within the context of a TSK or IDL function. It returns FALSE in all other contexts.

TSK_isTSK() API returns TRUE when the current thread is neither a HWI nor a SWI. Thus, TSK_isTSK() returns TRUE when it is invoked within a task thread, main(), or a task switch hook.

In previous versions of DSP/BIOS, calling the context checking functions from main() resulted in TRUE for HWI_isHWI(). And, calling the context checking functions from a task switch hook resulted in TRUE for SWI_isSWI(). This is no longer the case; they are identified as part of the TSK context.

In applications that contain no task threads, TSK_isTSK() now returns TRUE from main() and from the IDL threads.

See Also HWI_isHWI
 SWI_isSWI

TSK_itick*Advance the system alarm clock (interrupt use only)***C Interface****Syntax** TSK_itick();**Parameters** Void**Return Value** Void**Description**

TSK_itick increments the system alarm clock, and readies any tasks blocked on TSK_sleep or SEM_pend whose timeout intervals have expired.

Constraints and Calling Context

- ❑ TSK_itick cannot be called by a TSK object.
- ❑ TSK_itick cannot be called from the program's main() function.
- ❑ When called within an HWI, the code sequence calling TSK_itick must be either wrapped within an HWI_enter/HWI_exit pair or invoked by the HWI dispatcher.

See Also

SEM_pend
TSK_sleep
TSK_tick

TSK_self*Returns handle to the currently executing task***C Interface****Syntax**`curtask = TSK_self();`**Parameters**

Void

Return Value

TSK_Handle curtask; /* handle for current task object */

Description

TSK_self returns the object handle for the currently executing task. This function is useful when inspecting the object or when the current task changes its own priority through TSK_setpri.

No task switch occurs when calling TSK_self.

See Also

TSK_setpri

TSK_setenv*Set task environment***C Interface**

Syntax TSK_setenv(task, environ);

Parameters TSK_Handle task; /* task object handle */
Ptr environ; /* task environment pointer */

Return Value Void

Description

TSK_setenv sets the task environment pointer to environ. The environment pointer, environ, references an arbitrary application-defined data structure.

If your program uses multiple HOOK objects, HOOK_setenv allows you to set individual environment pointers for each HOOK and TSK object combination.

See Also

HOOK_getenv
HOOK_setenv
TSK_getenv
TSK_geterr

TSK_seterr*Set task error number***C Interface****Syntax**

TSK_seterr(task, errno);

ParametersTSK_Handle task; /* task object handle */
Int errno; /* error number */**Return Value**

Void

Description

Each task carries a task-specific error number. This number is initially SYS_OK, but can be changed to errno by calling TSK_seterr. TSK_geterr returns the current value of this number.

See AlsoTSK_getenv
TSK_geterr

TSK_setpri*Set a task's execution priority***C Interface**

Syntax `oldpri = TSK_setpri(task, newpri);`

Parameters `TSK_Handle task; /* task object handle */`
`Int newpri; /* task's new priority */`

Return Value `Int oldpri; /* task's old priority */`

Description

TSK_setpri sets the execution priority of task to newpri, and returns that task's old priority value. Raising or lowering a task's priority does not necessarily force preemption and re-scheduling of the caller: tasks in the TSK_BLOCKED mode remain suspended despite a change in priority; and tasks in the TSK_READY mode gain control only if their (new) priority is greater than that of the currently executing task.

The maximum value of newpri is TSK_MAXPRI(15). If the minimum value of newpri is TSK_MINPRI(0). If newpri is less than 0, the task is barred from further execution until its priority is raised at a later time by another task; if newpri equals TSK_MAXPRI, execution of the task effectively locks out all other program activity, except for the handling of interrupts.

The current task can change its own priority (and possibly preempt its execution) by passing the output of TSK_self as the value of the task parameter.

A context switch occurs when calling TSK_setpri if a task makes its own priority lower than the priority of another currently ready task, or if the currently executing task makes a ready task's priority higher than its own priority. TSK_setpri can be used for mutual exclusion.

Constraints and Calling Context

- newpri must be less than or equal to TSK_MAXPRI.
- The task cannot be TSK_TERMINATED.
- The new priority should not be zero (0). This priority level is reserved for the TSK_idle task.

See Also

TSK_self
TSK_sleep

TSK_settime*Reset task statistics previous value to current time***C Interface**

Syntax	TSK_settime(task);
Parameters	TSK_Handle task; /* task object handle */
Return Value	Void

Description

Your application can call TSK_settime before a task enters its processing loop in order to ensure your first call to TSK_deltatime is as accurate as possible and doesn't reflect the time difference since the time the task was created. However, it is only necessary to call TSK_settime once for initialization purposes. After initialization, DSP/BIOS sets the time value of the task's STS object every time the task is made ready to run.

TSK statistics are handled differently than other statistics because TSK functions typically run an infinite loop that blocks when waiting for other threads. In contrast, HWI and SWI functions run to completion without blocking. Because of this difference, DSP/BIOS allows programs to identify the "beginning" of a TSK function's processing loop by calling TSK_settime and the "end" of the loop by calling TSK_deltatime.

For example, a loop within the task can look something like the following:

```
Void task
{
    'do some startup work'

    /* Initialize task's STS object to current time */
    TSK_settime(TSK_self());

    for (;;) {
        /* Get data */
        SIO_get(...);

        'process data'

        /* Get time difference and
           add it to task's STS object */
        TSK_deltatime(TSK_self());
    }
}
```

In the previous example, the task blocks on SIO_get and the device driver posts a semaphore that readies the task. DSP/BIOS sets the task's statistics object with the current time when the semaphore becomes available and the task is made ready to run. Thus, the call to TSK_deltatime effectively measures the processing time of the task.

**Constraints and
Calling Context**

- ❑ TSK_settime cannot be called from the program's main() function.
- ❑ The results of calls to TSK_deltatime and TSK_settime are displayed in the Statistics View only if Enable TSK accumulators is selected within the RTA Control Panel.

See Also

TSK_deltatime
TSK_getsts

TSK_sleep*Delay execution of the current task***C Interface**

Syntax	TSK_sleep(nticks);
Parameters	Uns nticks; /* number of system clock ticks to sleep */
Return Value	Void

Description

TSK_sleep changes the current task's mode from TSK_RUNNING to TSK_BLOCKED, and delays its execution for nticks increments of the system clock. The actual time delayed can be up to 1 system clock tick less than timeout due to granularity in system timekeeping.

After the specified period of time has elapsed, the task reverts to the TSK_READY mode and is scheduled for execution.

A task switch always occurs when calling TSK_sleep if nticks > 0.

Constraints and Calling Context

- ❑ TSK_sleep cannot be called from a SWI or HWI, or within a TSK_disable / TSK_enable block.
- ❑ TSK_sleep cannot be called from the program's main() function.
- ❑ TSK_sleep should not be called from within an IDL function. Doing so prevents analysis tools from gathering run-time information.
- ❑ nticks cannot be SYS_FOREVER.

TSK_stat*Retrieve the status of a task***C Interface**

Syntax TSK_stat(task, statbuf);

Parameters TSK_Handle task; /* task object handle */
TSK_Stat *statbuf; /* pointer to task status structure */

Return Value Void

Description

TSK_stat retrieves attribute values and status information about a task.

Status information is returned through statbuf, which references a structure of type TSK_Stat defined as follows:

```
struct TSK_Stat {      /* task status structure */
    TSK_Attrs  attrs; /* task attributes */
    TSK_Mode   mode; /* task execution mode */
    Ptr        sp;   /* task stack pointer */
    size_t     used; /* task stack used */
};
```

When a task is preempted by a software or hardware interrupt, the task execution mode returned for that task by TSK_stat is still TSK_RUNNING because the task runs when the preemption ends.

The current task can inquire about itself by passing the output of TSK_self as the first argument to TSK_stat. However, the task stack pointer (sp) in the TSK_Stat structure is the value from the previous context switch.

TSK_stat has a non-deterministic execution time. As such, it is not recommended to call this API from SWIs or HWIs.

Constraints and Calling Context

❑ statbuf cannot be NULL.

See Also

TSK_create

TSK_tick*Advance the system alarm clock***C Interface****Syntax** TSK_tick();**Parameters** Void**Return Value** Void**Description**

TSK_tick increments the system clock, and readies any tasks blocked on TSK_sleep or SEM_pend whose timeout intervals have expired. TSK_tick can be invoked by an HWI or by the currently executing task. The latter is particularly useful for testing timeouts in a controlled environment.

A task switch occurs when calling TSK_tick if the priority of any of the readied tasks is greater than the priority of the currently executing task.

Constraints and Calling Context

- ❑ When called within an HWI, the code sequence calling TSK_tick must be either wrapped within an HWI_enter/HWI_exit pair or invoked by the HWI dispatcher.

See Also

CLK Module
SEM_pend
TSK_itick
TSK_sleep

TSK_time*Return current value of system clock***C Interface**

Syntax `curtime = TSK_time();`

Parameters Void

Return Value Uns `curtime; /* current time */`

Description

TSK_time returns the current value of the system alarm clock.

Note that since the system clock is usually updated asynchronously via TSK_itick or TSK_tick, curtime can lag behind the actual system time. This lag can be even greater if a higher priority task preempts the current task between the call to TSK_time and when its return value is used. Nevertheless, TSK_time is useful for getting a rough idea of the current system time.

TSK_yield*Yield processor to equal priority task***C Interface****Syntax** TSK_yield();**Parameters** Void**Return Value** Void**Description**

TSK_yield yields the processor to another task of equal priority.

A task switch occurs when you call TSK_yield if there is an equal priority task ready to run.

Tasks of higher priority preempt the currently running task without the need for a call to TSK_yield. If only lower-priority tasks are ready to run when you call TSK_yield, the current task continues to run. Control does not pass to a lower-priority task.

Constraints and Calling Context

- ❑ When called within an HWI, the code sequence calling TSK_yield must be either wrapped within an HWI_enter/HWI_exit pair or invoked by the HWI dispatcher.
- ❑ TSK_yield cannot be called from the program's main() function.

See Also

TSK_sleep

2.32 std.h and stdlib.h functions

This section contains descriptions of special utility macros found in std.h and DSP/BIOS standard library functions found in stdlib.h.

Macros

- ❑ **ArgToInt.** Cast an Arg type parameter as an integer type.
- ❑ **ArgToPtr.** Cast an Arg type parameter as a pointer type.

Functions

- ❑ **atexit.** Register an exit function.
- ❑ ***calloc.** Allocate and clear memory.
- ❑ **exit.** Call the exit functions registered by atexit.
- ❑ **free.** Free memory.
- ❑ ***getenv.** Get environmental variable.
- ❑ ***malloc.** Allocate memory.
- ❑ ***realloc.** Reallocate a memory packet.

Syntax

```
#include <std.h>
ArgToInt (arg)
ArgToPtr (arg)
```

```
#include <stdlib.h>
int atexit(void (*fcn) (void));
void *calloc(size_t nobj, size_t size);
void exit(int status);
void free(void *p);
char *getenv(char *name);
void *malloc(size_t size);
void *realloc(void *p, size_t size);
```

Description

The DSP/BIOS library contains some C standard library functions which supersede the library functions bundled with the C compiler. These functions follow the ANSI C specification for parameters and return values. Consult Kernighan and Ritchie for a complete description of these functions.

The functions calloc, free, malloc, and realloc use MEM_alloc and MEM_free (with segid = Segment for malloc/free) to allocate and free memory.

getenv uses the _environ variable defined and initialized in the boot file to search for a matching environment string.

exit calls the exit functions registered by atexit before calling SYS_exit.

Note: RTS Functions Callable from TSK Threads Only

Many runtime support (RTS) functions use lock and unlock functions to prevent reentrancy. However, DSP/BIOS SWI and HWI threads cannot call LCK_pend and LCK_post. As a result, RTS functions that call LCK_pend or LCK_post *must not be called in the context of a SWI or HWI thread*. For a list of RTS functions that should not be called from a SWI or an HWI function, see “LCK_pend” on page 2-213.

To determine whether a particular RTS function uses LCK_pend, refer to the source code for that function shipped with Code Composer Studio. The following table shows some of the RTS functions that call LCK_pend in certain versions of Code Composer Studio:

fprintf	printf	vfprintf	sprintf
vprintf	vsprintf	clock	strftime
memset	malloc	realloc	free
calloc	rand	srand	getenv

The C++ new operator calls malloc, which in turn calls LCK_pend. As a result, the new operator cannot be used in the context of a SWI or HWI thread.



Function Callability and Error Tables

This appendix provides tables describing TMS320C6000 errors and function callability.

Topic	Page
A.1 Function Callability Table	A-2
A.2 DSP/BIOS Error Codes	A-11

A.1 Function Callability Table

The following table indicates what types of threads can call each of the DSP/BIOS functions. The Possible Context Switch column indicates whether another thread may be run as a result of this function. For example, the function may block on a resource or it may make another thread ready to run. The Possible Context Switch column does not indicate whether the function disables interrupts that might schedule higher-priority threads.

Table A-1 Function Callability

Function	Callable by TSKs?	Callable by SWIs?	Callable by HWIs?	Possible Context Switch?	Callable from main()?
ATM_andi	Yes	Yes	Yes	No	Yes
ATM_andu	Yes	Yes	Yes	No	Yes
ATM_cleari	Yes	Yes	Yes	No	Yes
ATM_clearu	Yes	Yes	Yes	No	Yes
ATM_decu	Yes	Yes	Yes	No	Yes
ATM_decu	Yes	Yes	Yes	No	Yes
ATM_inci	Yes	Yes	Yes	No	Yes
ATM_incu	Yes	Yes	Yes	No	Yes
ATM_ori	Yes	Yes	Yes	No	Yes
ATM_oru	Yes	Yes	Yes	No	Yes
ATM_seti	Yes	Yes	Yes	No	Yes
ATM_setu	Yes	Yes	Yes	No	Yes
BCACHE_getMar	Yes	Yes	Yes	No	Yes
BCACHE_getMode	Yes	Yes	Yes	No	Yes
BCACHE_getSize	Yes	Yes	Yes	No	Yes
BCACHE_inv	Yes	Yes	Yes	No	Yes
BCACHE_invL1pAll	Yes	Yes	Yes	No	Yes
BCACHE_setMar	Yes	Yes	Yes	No	Yes
BCACHE_setMode	Yes	Yes	Yes	No	Yes
BCACHE_setSize	Yes	Yes	Yes	No	Yes
BCACHE_wait	Yes	Yes	Yes	No	Yes
BCACHE_wb	Yes	Yes	Yes	No	Yes
BCACHE_wbAll	Yes	Yes	Yes	No	Yes
BCACHE_wbInv	Yes	Yes	Yes	No	Yes
BCACHE_wbInvAll	Yes	Yes	Yes	No	Yes
BUF_alloc	Yes	Yes	Yes	No	Yes

Function	Callable by TSKs?	Callable by SWIs?	Callable by HWIs?	Possible Context Switch?	Callable from main()?
BUF_create	Yes	No	No	Yes	Yes
BUF_delete	Yes	No	No	Yes	Yes
BUF_free	Yes	Yes	Yes	No	Yes
BUF_maxbuff	Yes	No	No	No	Yes
BUF_stat	Yes	Yes	Yes	No	Yes
C62_disableIER	Yes	Yes	Yes	No	Yes
C62_enableIER	Yes	Yes	Yes	No	Yes
C62_plug	Yes	Yes	Yes	No	Yes
C64_disableIER	Yes	Yes	Yes	No	Yes
C64_enableIER	Yes	Yes	Yes	No	Yes
C64_plug	Yes	Yes	Yes	No	Yes
CLK_countspms	Yes	Yes	Yes	No	Yes
CLK_cpuCyclesPerHtime	Yes	Yes	Yes	No	Yes
CLK_cpuCyclesPerLtime	Yes	Yes	Yes	No	Yes
CLK_gethtime	Yes	Yes	Yes	No	No
CLK_getltime	Yes	Yes	Yes	No	No
CLK_getprd	Yes	Yes	Yes	No	Yes
CLK_reconfig	Yes	Yes	Yes	No	Yes
CLK_start	Yes	Yes	Yes	No	No
CLK_stop	Yes	Yes	Yes	No	No
DEV_createDevice	Yes	No	No	Yes*	Yes
DEV_deleteDevice	Yes	No	No	Yes*	Yes
DEV_match	Yes	Yes	Yes	No	Yes
ECM_disableEvent	Yes	Yes	Yes	No	Yes
ECM_dispatch	No	No	Yes	No	No
ECM_dispatchPlug	Yes	Yes	Yes	No	Yes
ECM_enableEvent	Yes	Yes	Yes	No	Yes
EXC_clearLastStatus	Yes	Yes	Yes*	No	Yes
EXC_dispatch	No	No	Yes	No	No
EXC_exceptionHandler	No	No	No*	No	No
EXC_exceptionHook	No	No	No*	No	No
EXC_external	No	No	No*	No	No
EXC_externalHook	No	No	No*	No	No
EXC_evtEvtClear	Yes	Yes	Yes	No	Yes
EXC_evtExpEnable	Yes	Yes	Yes	No	Yes

Function	Callable by TSKs?	Callable by SWIs?	Callable by HWIs?	Possible Context Switch?	Callable from main()?
EXC_getLastStatus	Yes	Yes	Yes*	No	Yes
EXC_internal	No	No	No*	No	No
EXC_internalHook	No	No	No*	No	No
EXC_nmi	No	No	No*	No	No
EXC_nmiHook	No	No	No*	No	No
GBL_getCkIn	Yes	Yes	Yes	No	Yes
GBL_getFrequency	Yes	Yes	Yes	No	Yes
GBL_getProclD	Yes	Yes	Yes	No	Yes
GBL_getVersion	Yes	Yes	Yes	No	Yes
GBL_setFrequency	No	No	No	No	Yes
GBL_setProclD	No	No	No	No	No*
GIO_abort	Yes	No*	No*	Yes	No
GIO_control	Yes	No*	No*	Yes	Yes
GIO_create	Yes	No	No	No	Yes
GIO_delete	Yes	No	No	Yes	Yes
GIO_flush	Yes	No*	No*	Yes	No
GIO_new	Yes	Yes	Yes	No	Yes
GIO_read	Yes	No*	No*	Yes	Yes*
GIO_submit	Yes	Yes*	Yes*	Yes	Yes*
GIO_write	Yes	No*	No*	Yes	Yes*
HOOK_getenv	Yes	Yes	Yes	No	Yes
HOOK_setenv	Yes	Yes	Yes	No	Yes
HST_getpipe	Yes	Yes	Yes	No	Yes
HWI_applyWugenMasks	Yes	Yes	Yes	No	Yes
HWI_disable	Yes	Yes	Yes	No	Yes
HWI_disableWugen	Yes	Yes	Yes	No	Yes
HWI_dispatchPlug	Yes	Yes	Yes	No	Yes
HWI_enable	Yes	Yes	Yes	Yes*	No
HWI_enableWugen	Yes	Yes	Yes	No	Yes
HWI_enter	No	No	Yes	No	No
HWI_eventMap	Yes	Yes	Yes	No	Yes
HWI_exit	No	No	Yes	Yes	No
HWI_getWugenMasks	Yes	Yes	Yes	No	Yes
HWI_ierToWugenMasks	Yes	Yes	Yes	No	Yes
HWI_isHWI	Yes	Yes	Yes	No	Yes

Function	Callable by TSKs?	Callable by SWIs?	Callable by HWIs?	Possible Context Switch?	Callable from main()?
HWI_restore	Yes	Yes	Yes	Yes*	Yes
IDL_run	Yes	No	No	No	No
LCK_create	Yes	No	No	Yes*	Yes
LCK_delete	Yes	No	No	Yes*	No
LCK_pend	Yes	No	No	Yes*	No
LCK_post	Yes	No	No	Yes*	No
LOG_disable	Yes	Yes	Yes	No	Yes
LOG_enable	Yes	Yes	Yes	No	Yes
LOG_error	Yes	Yes	Yes	No	Yes
LOG_event	Yes	Yes	Yes	No	Yes
LOG_event5	Yes	Yes	Yes	No	Yes
LOG_message	Yes	Yes	Yes	No	Yes
LOG_printf	Yes	Yes	Yes	No	Yes
LOG_printf4	Yes	Yes	Yes	No	Yes
LOG_reset	Yes	Yes	Yes	No	Yes
MBX_create	Yes	No	No	Yes*	Yes
MBX_delete	Yes	No	No	Yes*	No
MBX_pend	Yes	Yes*	Yes*	Yes*	No
MBX_post	Yes	Yes*	Yes*	Yes*	Yes*
MEM_alloc	Yes	No	No	Yes*	Yes
MEM_calloc	Yes	No	No	Yes*	Yes
MEM_define	Yes	No	No	Yes*	Yes
MEM_free	Yes	No	No	Yes*	Yes
MEM_getBaseAddress	Yes	Yes	Yes	No	Yes
MEM_increaseTableSize	Yes	No	No	Yes*	Yes
MEM_redefine	Yes	No	No	Yes*	Yes
MEM_stat	Yes	No	No	Yes*	Yes
MEM_undefine	Yes	No	No	Yes*	Yes
MEM_valloc	Yes	No	No	Yes*	Yes
MPC_getPA	Yes	Yes	Yes	No	Yes
MPC_getPageSize	Yes	Yes	Yes	No	Yes
MPC_getPrivMode	Yes	Yes	Yes	No	Yes
MPC_setBufferPA	Yes	Yes	Yes	No	Yes
MPC_setPA	Yes	Yes	Yes	No	Yes
MPC_setPrivMode	Yes	Yes	Yes	No	Yes

Function	Callable by TSKs?	Callable by SWIs?	Callable by HWIs?	Possible Context Switch?	Callable from main()?
_MPC_getLastMPFAR	No	No	No*	No	No
_MPC_getLastMPFSR	No	No	No*	No	No
_MPC_exceptionHandler	No	No	No*	No	No
_MPC_externalHandler	No	No	No*	No	No
_MPC_internalHandler	No	No	No*	No	No
_MPC_userHook	No	No	No*	No	No
MSGQ_alloc	Yes	Yes	Yes	No	Yes
MSGQ_close	Yes	Yes	Yes	No	Yes
MSGQ_count	Yes	Yes*	Yes*	No	No
MSGQ_free	Yes	Yes	Yes	No	Yes
MSGQ_get	Yes	Yes*	Yes*	Yes*	No
MSGQ_getAttrs	Yes	Yes	Yes	No	Yes
MSGQ_getDstQueue	Yes	Yes	Yes	No	No
MSGQ_getMsgId	Yes	Yes	Yes	No	Yes
MSGQ_getMsgSize	Yes	Yes	Yes	No	Yes
MSGQ_getSrcQueue	Yes	Yes	Yes	No	No
MSGQ_isLocalQueue	Yes	Yes	Yes	No	Yes
MSGQ_locate	Yes	No	No	Yes	No
MSGQ_locateAsync	Yes	Yes	Yes	No	No
MSGQ_open	Yes	Yes*	Yes*	Yes*	Yes
MSGQ_put	Yes	Yes	Yes	No	No
MSGQ_release	Yes	Yes	Yes	No	No
MSGQ_setErrorHandler	Yes	Yes	Yes	No	Yes
MSGQ_setMsgId	Yes	Yes	Yes	No	Yes
MSGQ_setSrcQueue	Yes	Yes	Yes	No	Yes
PIP_alloc	Yes	Yes	Yes	Yes	Yes
PIP_free	Yes	Yes	Yes	Yes	Yes
PIP_get	Yes	Yes	Yes	Yes	Yes
PIP_getReaderAddr	Yes	Yes	Yes	No	Yes
PIP_getReaderNumFrames	Yes	Yes	Yes	No	Yes
PIP_getReaderSize	Yes	Yes	Yes	No	Yes
PIP_getWriterAddr	Yes	Yes	Yes	No	Yes
PIP_getWriterNumFrames	Yes	Yes	Yes	No	Yes
PIP_getWriterSize	Yes	Yes	Yes	No	Yes
PIP_peek	Yes	Yes	Yes	No	Yes

Function	Callable by TSKs?	Callable by SWIs?	Callable by HWIs?	Possible Context Switch?	Callable from main()?
PIP_put	Yes	Yes	Yes	Yes	Yes
PIP_reset	Yes	Yes	Yes	Yes	Yes
PIP_setWriterSize	Yes	Yes	Yes	No	Yes
PRD_getticks	Yes	Yes	Yes	No	Yes
PRD_start	Yes	Yes	Yes	No	Yes
PRD_stop	Yes	Yes	Yes	No	Yes
PRD_tick	Yes	Yes	Yes	Yes	No
QUE_create	Yes	No	No	Yes*	Yes
QUE_delete	Yes	No	No	Yes*	Yes
QUE_dequeue	Yes	Yes	Yes	No	Yes
QUE_empty	Yes	Yes	Yes	No	Yes
QUE_enqueue	Yes	Yes	Yes	No	Yes
QUE_get	Yes	Yes	Yes	No	Yes
QUE_head	Yes	Yes	Yes	No	Yes
QUE_insert	Yes	Yes	Yes	No	Yes
QUE_new	Yes	Yes	Yes	No	Yes
QUE_next	Yes	Yes	Yes	No	Yes
QUE_prev	Yes	Yes	Yes	No	Yes
QUE_put	Yes	Yes	Yes	No	Yes
QUE_remove	Yes	Yes	Yes	No	Yes
RTDX_channelBusy	Yes	Yes	No	No	Yes
RTDX_CreateInputChannel	Yes	Yes	No	No	Yes
RTDX_CreateOutputChannel	Yes	Yes	No	No	Yes
RTDX_disableInput	Yes	Yes	No	No	Yes
RTDX_disableOutput	Yes	Yes	No	No	Yes
RTDX_enableInput	Yes	Yes	No	No	Yes
RTDX_enableOutput	Yes	Yes	No	No	Yes
RTDX_isInputEnabled	Yes	Yes	No	No	Yes
RTDX_isOutputEnabled	Yes	Yes	No	No	Yes
RTDX_read	Yes	Yes	No	No	No
RTDX_readNB	Yes	Yes	No	No	No
RTDX_sizeofInput	Yes	Yes	No	No	Yes
RTDX_write	Yes	Yes	No	No	No
SEM_count	Yes	Yes	Yes	No	Yes
SEM_create	Yes	No	No	Yes*	Yes

Function	Callable by TSKs?	Callable by SWIs?	Callable by HWIs?	Possible Context Switch?	Callable from main()?
SEM_delete	Yes	Yes*	No	Yes*	No
SEM_new	Yes	Yes	Yes	No	Yes
SEM_pend	Yes	Yes*	Yes*	Yes*	No
SEM_pendBinary	Yes	Yes*	Yes*	Yes*	No
SEM_post	Yes	Yes	Yes	Yes*	Yes
SEM_postBinary	Yes	Yes	Yes	Yes*	Yes
SEM_reset	Yes	No	No	No	Yes
SIO_bufsize	Yes	Yes	Yes	No	Yes
SIO_create	Yes	No	No	Yes*	Yes
SIO_ctrl	Yes	Yes	No	No	Yes
SIO_delete	Yes	No	No	Yes*	Yes
SIO_flush	Yes	Yes*	No	No	No
SIO_get	Yes	No	No	Yes*	Yes*
SIO_idle	Yes	Yes*	No	Yes*	No
SIO_issue	Yes	Yes	No	No	Yes
SIO_put	Yes	No	No	Yes*	Yes*
SIO_ready	Yes	Yes	Yes	No	No
SIO_reclaim	Yes	Yes*	No	Yes*	Yes*
SIO_reclaimx	Yes	Yes*	No	Yes*	Yes*
SIO_segid	Yes	Yes	Yes	No	Yes
SIO_select	Yes	Yes*	No	Yes*	No
SIO_staticbuf	Yes	Yes	No	No	Yes
STS_add	Yes	Yes	Yes	No	Yes
STS_delta	Yes	Yes	Yes	No	Yes
STS_reset	Yes	Yes	Yes	No	Yes
STS_set	Yes	Yes	Yes	No	Yes
SWI_andn	Yes	Yes	Yes	Yes*	No
SWI_andnHook	Yes	Yes	Yes	Yes*	No
SWI_create	Yes	No	No	Yes*	Yes
SWI_dec	Yes	Yes	Yes	Yes*	No
SWI_delete	Yes	No	No	Yes*	Yes
SWI_disable	Yes	Yes	No	No	No
SWI_enable	Yes	Yes	No	Yes*	No
SWI_getattrs	Yes	Yes	Yes	No	Yes
SWI_getmbox	No	Yes	No	No	No

Function	Callable by TSKs?	Callable by SWIs?	Callable by HWIs?	Possible Context Switch?	Callable from main()?
SWI_getpri	Yes	Yes	Yes	No	Yes
SWI_inc	Yes	Yes	Yes	Yes*	No
SWI_isSWI	Yes	Yes	Yes	No	Yes
SWI_or	Yes	Yes	Yes	Yes*	No
SWI_orHook	Yes	Yes	Yes	Yes*	No
SWI_post	Yes	Yes	Yes	Yes*	No
SWI_raisepri	No	Yes	No	No	No
SWI_restorepri	No	Yes	No	Yes	No
SWI_self	No	Yes	No	No	No
SWI_setattr	Yes	Yes	Yes	No	Yes
SYS_abort	Yes	Yes	Yes	No	Yes
SYS_atexit	Yes	Yes	Yes	No	Yes
SYS_error	Yes	Yes	Yes	No	Yes
SYS_exit	Yes	Yes	Yes	No	Yes
SYS_printf	Yes	Yes	Yes	No	Yes
SYS_putchar	Yes	Yes	Yes	No	Yes
SYS_sprintf	Yes	Yes	Yes	No	Yes
SYS_vprintf	Yes	Yes	Yes	No	Yes
SYS_vsprintf	Yes	Yes	Yes	No	Yes
TRC_disable	Yes	Yes	Yes	No	Yes
TRC_enable	Yes	Yes	Yes	No	Yes
TRC_query	Yes	Yes	Yes	No	Yes
TSK_checkstacks	Yes	No	No	No	No
TSK_create	Yes	No	No	Yes*	Yes
TSK_delete	Yes	No	No	Yes*	No
TSK_deltatime	Yes	Yes	Yes	No	No
TSK_disable	Yes	No	No	No	No
TSK_enable	Yes	No	No	Yes*	No
TSK_exit	Yes	No	No	Yes*	No
TSK_getenv	Yes	Yes	Yes	No	Yes
TSK_geterr	Yes	Yes	Yes	No	Yes
TSK_getname	Yes	Yes	Yes	No	Yes
TSK_getpri	Yes	Yes	Yes	No	Yes
TSK_getsts	Yes	Yes	Yes	No	Yes
TSK_isTSK	Yes	Yes	Yes	No	Yes

Function	Callable by TSKs?	Callable by SWIs?	Callable by HWIs?	Possible Context Switch?	Callable from main()?
TSK_itick	No	Yes	Yes	Yes	No
TSK_self	Yes	Yes	Yes	No	No
TSK_setenv	Yes	Yes	Yes	No	Yes
TSK_seterr	Yes	Yes	Yes	No	Yes
TSK_setpri	Yes	Yes	Yes	Yes*	Yes
TSK_settime	Yes	Yes	Yes	No	No
TSK_sleep	Yes	No	No	Yes*	No
TSK_stat	Yes	Yes*	Yes*	No	Yes
TSK_tick	Yes	Yes	Yes	Yes*	No
TSK_time	Yes	Yes	Yes	No	No
TSK_yield	Yes	Yes	Yes	Yes*	No

Note: *See the appropriate API reference page for more information.

Table A-2 RTS Function Calls

Function	Callable by TSKs?	Callable by SWIs?	Callable by HWIs?	Possible Context Switch?
calloc	Yes	No	No	Yes*
clock	Yes	No	No	Yes*
fprintf	Yes	No	No	Yes*
free	Yes	No	No	Yes*
getenv	Yes	No	No	Yes*
malloc	Yes	No	No	Yes*
minit	Yes	No	No	Yes*
printf	Yes	No	No	Yes*
rand	Yes	No	No	Yes*
realloc	Yes	No	No	Yes*
sprintf	Yes	No	No	Yes*
srand	Yes	No	No	Yes*
strftime	Yes	No	No	Yes*
vfprintf	Yes	No	No	Yes*
vprintf	Yes	No	No	Yes*
vsprintf	Yes	No	No	Yes*

Note: *See section 2.32, *std.h* and *stdlib.h* functions, page 2-516 for more information.

A.2 DSP/BIOS Error Codes

Table A-3 Error Codes

Name	Value	SYS_Errors[Value]
SYS_OK	0	"(SYS_OK)"
SYS_EALLOC	1	"(SYS_EALLOC): segid = %d, size = %u, align = %u" Memory allocation error.
SYS_EFREE	2	"(SYS_EFREE): segid = %d, ptr = 0x%x, size = %u" The memory free function associated with the indicated memory segment was unable to free the indicated size of memory at the address indicated by ptr.
SYS_ENODEV	3	"(SYS_ENODEV): device not found" The device being opened is not configured into the system.
SYS_EBUSY	4	"(SYS_EBUSY): device in use" The device is already opened by the maximum number of users.
SYS_EINVAL	5	"(SYS_EINVAL): invalid parameter" An invalid parameter was passed.
SYS_EBADIO	6	"(SYS_EBADIO): device failure" The device was unable to support the I/O operation.
SYS_EMODE	7	"(SYS_EMODE): invalid mode" An attempt was made to open a device in an improper mode; e.g., an attempt to open an input device for output.
SYS_EDOMAIN	8	"(SYS_EDOMAIN): domain error" Used by SPOX-MATH when type of operation does not match vector or filter type.
SYS_ETIMEOUT	9	"(SYS_ETIMEOUT): timeout error" Used by device drivers to indicate that reclaim timed out.
SYS_EEOF	10	"(SYS_EEOF): end-of-file error" Used by device drivers to indicate the end of a file.
SYS_EDEAD	11	"(SYS_EDEAD): previously deleted object" An attempt was made to use an object that has been deleted.
SYS_EBADOBJ	12	"(SYS_EBADOBJ): invalid object" An attempt was made to use an object that does not exist.
SYS_ENOTIMPL	13	"(SYS_ENOTIMPL): action not implemented" An attempt was made to use an action that is not implemented.
SYS_ENOTFOUND	14	"(SYS_ENOTFOUND): resource not found" An attempt was made to use a resource that could not be found.
SYS_EUSER	>=256	"(SYS_EUSER): <user-defined string>" User-defined error.



C6000 DSP/BIOS Register Usage

This appendix provides tables describing the TMS320C6000™ register conventions in terms of preservation across multi-threaded context switching and preconditions.

Topic	Page
B.1 Overview.....	B-2
B.2 Register Conventions.....	B-2

B.1 Overview

In a multi-threaded application using DSP/BIOS, it is necessary to know which registers can or cannot be modified. Furthermore, users need to understand which registers need to be saved/restored across a function call or an interrupt.

The following definitions describe the various possible register handling behaviors:

- ❑ **Scratch register.** These registers are saved/restored by the HWI dispatcher or HWI_enter/HWI_exit with temporary register bit masks.
- ❑ **Preserved register.** These registers are saved/restored during a TSK context switch.
- ❑ **Initialized register.** These registers are set to a particular value during HWI processing and restored to their incoming value upon exiting to the interrupt routine.
- ❑ **Read-Only register.** These registers may be read but must not be modified.
- ❑ **Global register.** These registers are shared across all threads in the system. To make a temporary change, save the register, make the change, and then restore it.
- ❑ **Other.** These registers do not fit into one of the categories above.

B.2 Register Conventions

Table B-1 Register and Status Bit Handling

Register	Status Bit	Register or Status Bit Name	Type	Notes
A0-A9, B0-B9		General purpose registers	Scratch	
A10-A12, A14-A15, B10-B13		General purpose registers	Preserved	
A13		Frame pointer	Preserved	
B14		Data page pointer	Initialized	HWI sets to bss before calling ISR
B15		Stack pointer	Initialized	HWI sets to HWI stack before calling ISR

Register	Status Bit	Register or Status Bit Name	Type	Notes
A16-A31**, B16-B31**		General purpose registers	Scratch	
AMR		Addressing mode register	Initialized	HWI sets to 0 before calling ISR
CSR	GIE	Global interrupt enable	Global	
	PGIE	Previous global interrupt enable	Global	
	DCC	Data cache control mode	Preserved	
	PCC	Program cache control mode	Preserved	
	EN	Endian bit	Read-Only	
	SAT	Saturation bit	Scratch	
	PWRD	Control power-down modes	Global	
	Revision ID	Revision ID	Read-Only	
	CPU ID	CPU ID	Read-Only	
IFR		Interrupt flag register	Read-Only	
ISR		Interrupt set register	Other	Cannot be read
ICR		Interrupt clear register	Other	Cannot be read
IER		Interrupt enable register	Read-Only	
ISTP		Interrupt service table pointer	Read-Only	
IRP		Interrupt return pointer	Global	Can be modified with interrupts disabled.
NRP		Non-maskable interrupt return pointer	Read-Only	
PCE1		Program counter, E1 phase	Read-Only	
FADCR*	Rmode	Rounding mode	Global	Currently DSP/BIOS does not deal with this register.
	UNDER	Underflow status bit		
	INEX	Exponent status bit		
	OVER	Overflow status bit		
	INFO	Signed infinity status bit		
	INVAL	INVAL status bit		

Register	Status Bit	Register or Status Bit Name	Type	Notes
	DEN2	Denormalized number		
	DEN1	Denormalized number		
	NAN2	NaN number		
	NAN1	NaN number		
FAUCR*	DIV0	DIV0 status bit	Global	Currently DSP/BIOS does not deal with this register.
	UNORD	UNORD status bit		
	UNDER	Underflow status bit		
	INEX	Exponent status bit		
	OVER	Overflow status bit		
	INFO	Signed infinity status bit		
	INVAL	INVAL status bit		
	DEN2	Denormalized number		
	DEN1	Denormalized number		
	NAN2	NaN number		
	NAN1	NaN number		
FMCRC*	Rmode	Rounding mode	Global	Currently DSP/BIOS does not deal with this register.
	UNDER	Underflow status bit		
	INEX	Exponent status bit		
	OVER	Overflow status bit		
	INFO	Signed infinity status bit		
	INVAL	INVAL status bit		
	DEN2	Denormalized number		
	DEN1	Denormalized number		
	NAN2	NaN number		
	NAN1	NaN number		
GFPGFR**		Galois Field Polynomial Generator	Global	Currently DSP/BIOS does not deal with this register.

Register	Status Bit	Register or Status Bit Name	Type	Notes
TSR+	GIE	Global interrupt enable	Global	DSP/BIOS does not maintain this C64x+ status bit. Since DSP/BIOS does not do a "return from interrupt" for certain task switches, your application should not expect this bit to correctly indicate whether an interrupt is currently being processed.
	SGIE	Saved global interrupt enable	Global	
	GEE	Global exception enable	Read-Only	
	XEN	Maskable exception enable	Read-Only	
	DBGM	Emulator debug mask	Read-Only	
	CXM	Current execution mode	Read-Only	
	INT	Interrupt processing	Read-Only / Other	
	EXC	Exception processing	Read-Only	
	SPLX	SPLOOP executing	Read-Only	
	IB	Interrupt blocked	Read-Only	
ITSR+		Interrupt task state register	Global	
NTSR+		NMI/Exception task state register	Global	
EFR+		Exception flag register	Read-Only	
ECR+		Exception clear register	Read-Only	
IERR+		Internal exception cause register	Read-Only	
SSR+		Saturation status register	Global	
ILC+		Inner loop SPL buffer count	Global	
RILC+		Reload inner loop SPL buffer count	Global	
GPLYA+		GMPY polynomial for A side	Scratch, Preserve	
GPLYB+		GMPY polynomial for B side	Scratch, Preserve	

Register	Status Bit	Register or Status Bit Name	Type	Notes
TSCL+		Low half of 64-bit time stamp counter	Read-Only	
TSCH+		High half of 64-bit time stamp counter	Read-Only	
DNUM+		DSP number	Read-Only	
DIER+		Debug interrupt enable register	Global	

Notes:

* — Denotes registers available on the 'C67x, 'C67x+ to support floating point operations.

** — Denotes registers available on the 'C64x, 'C67x+ only.

+ — Denotes registers available on the 'C64x+ only.

The General purpose registers follow the 'C' compiler conventions. IRP can be used as a scratch register only when interrupts are disabled. ITSR and NTSR are identical copies of TSR, see TSR for details on each individual status bit.

For the 'C67x FADCR, FAUCR, and FMCR registers, the compiler assumes the nearest rounding mode is used. This is assumed to be the default mode at power-up. The compiler does not actually do anything to set it up that way, nor does it ever write or read these registers. These registers are completely under user control. Code may generate slightly different results if you change these registers.

C64x+ Exception Support

This appendix provides describes support for C64x+ exception handling.

Topic	Page
C.1 C64x+ Exception Support	C-2
C.2 Using the DSP/BIOS EXC Module	C-3
C.3 Data Types and Macros	C-6
C.4 EXC Module	C-7
C.5 _MPC Module	C-16

C.1 C64x+ Exception Support

DSP/BIOS provides exception support for the C64x+ family of DSPs through the EXC module. This module provides various handler functions that print exception data to the system log. The handler functions also call "user hook functions" at key locations. You can write hook functions to extend the behavior of the EXC module. The EXC module also records exception information for later retrieval by user code.

You can use DSP/BIOS exception support as-is; it provides useful diagnostic information. You can also extend it or replace it altogether.

A key point is that an exception indicates a fatal error. Exception processing should not attempt to return to the code that was interrupted. Exception processing is essentially a dead-end for the system, and should be limited to retrieving diagnostic information and/or shutting down the system. DSP/BIOS exception support is based on this idea. As soon as an exception is called, the "context" of HWI, SWI, and task threads no longer exists. (If you want to extend exception handling to include recovering from exceptions, you can write your own version of EXC_dispatch and use the HWI dispatcher or HWI_enter/HWI_exit to maintain "context" within exception handling.)

C.1.1 About C64x+ Exceptions

Exceptions are situations that trigger the NMI interrupt. The types of exceptions are:

- ❑ **Software-generated exceptions.** System calls that generate a SWE instruction are treated as exceptions. EXC_dispatch calls an internal function to handle SWE exceptions.
- ❑ **External exceptions.** The C64x+ has a set of 128 system events. These events can be routed to interrupts and handled by the DSP/BIOS HWI and ECM modules. Alternatively, system events can be routed to the exception combiner (whose output goes only to the NMI pin). To cause an event to generate an exception, you must enable it—for example, by calling EXC_evtExpEnable. The EXC module doesn't enable exception generation for any individual system event.

The EXC module handles external exceptions by routing them to EXC_exceptionHandler, which calls the EXC_external API. This API simply reports that an external exception occurred unless you write a hook function to provides more detail about an exception type.

- ❑ **Internal exceptions.** These are handled directly by the CPU. They are not related to events as are external exceptions. There is a CPU register (IERR) to report information about them. These exceptions

are routed to `EXC_exceptionHandler`, which calls the `EXC_internal` API to handle them.

- ❑ **Legacy NMI.** These are routed to `EXC_exceptionHandler`, which calls the `EXC_nmi` API to handle them.

C.2 Using the DSP/BIOS EXC Module

This section provides a general description and general usage guidelines for DSP/BIOS C64x+ exception support. For further details, see Section C.4, *EXC Module*.

Source code for the EXC module is provided in the `src/exc` subdirectory of the DSP/BIOS installation.

The EXC module initializes DSP/BIOS to respond to C64x+ exceptions. It does this by enabling the GEE and XEN bits in the TSR register, and then installing an exception handler in the NMI vector. Once enabled, GEE cannot be disabled without resetting the CPU. This initialization allows internal exceptions to be recognized and routed to the NMI handler and then processed by `EXC_exceptionHandler`.

See the *TMS320C64x+ DSP Megamodule Reference Guide* (SPRU871) for information about exception-related registers.

C.2.1 Enabling and Disabling EXC Support

By default, the EXC module is enabled. To disable it, set the “Enable EXC module exception processing” field in the HWI Manager Properties to false. You can also disable the EXC module in a `Tconf` script with the following statement:

```
bios.HWI.ENABLEEXC = false;
```

Note that the EXC module does not have its own “module” in the configuration tools. It is, however, a module in the DSP/BIOS kernel. The HWI module is simply used as a container for the single EXC configuration property.

When enabled, EXC support configures the `HWI_NMI` object to run the `EXC_dispatch` function. You may alternately choose to configure your own function instead using the configuration tool. Source code for `EXC_dispatch` is provided in the `src/exc` subdirectory of the DSP/BIOS installation; you can use this as a starting point or an example.

If you use any EXC module APIs in your application source code, add the following line to your source file:

```
#include <exc.h>
```

C.2.2 Out-of-the-Box EXC Behavior

The EXC module prints messages to the system log named LOG_system. This log's output can be observed in CCStudio in a LOG window named "Execution Graph Details". These messages are intermixed with details of standard DSP/BIOS scheduling events and are flagged in the Execution Graph itself with a blue box.

After all processing is finished, EXC calls SYS_abort to terminate the system. In general, when an application lands in SYS_abort, you should look in the "Execution Graph Details" window for a message related to the abort.

By default, EXC processes only internal exceptions and legacy NMI occurrences. It also prints and records general exception information, such as the NRP (which points to the area where the exception occurred). If you enable any external events to generate exceptions, EXC doesn't report those exceptions. You will need to create a hook function that reports details about particular external events you enable.

C.2.3 Extending EXC Exception Processing

There are four EXC function hooks you can use to gain processing control during exception processing. These hooks are:

- ❑ EXC_exceptionHook
- ❑ EXC_externalHook
- ❑ EXC_internalHook
- ❑ EXC_nmiHook

See Section C.4, *EXC Module* for details.

In addition, the _MPC APIs provide a _MPC_userHook hook.

If you want to further customize EXC module behavior, source code for EXC_dispatch is provided in the exc_asm.s64P file in the src/exc subdirectory of the DSP/BIOS installation. Source code for other EXC functions is in the exc.c file in the same subdirectory.

C.2.4 Interactions with the MPC Module

The DSP/BIOS MPC Module supports the C64x+ Memory Protection Controllers. The MPC hardware generates exceptions when an access that violates permissions occurs. The DSP/BIOS MPC module contains code that reports permission violations.

See section 2.18, *MPC Module*, page 2-263 for information about enabling the MPC module and using its APIs.

When enabled, the MPC module assigns its exception handling functions (with a prefix of “_MPC”) to the EXC exception handling hooks.

The MPC module enables and handles only MPC-related events. Specifically, enabling the MPC module causes the Program Memory Controller (PMC), Data Memory Controller (DMC), and Unified Memory Controller (UMC) CPU events to be enabled to generate exceptions. The corresponding DMA events are not enabled.

If you want other exceptions to be generated, you need to enable those system events and write functions to handle them. To support this, the EXC module provides the APIs described in this appendix. Since the MPC module takes control of the EXC function hooks, the MPC module also provides a function hook that you can assign to handle additional exception processing (see `_MPC_userHook`).

C.2.5 Retrieving General Exception Information

The following support routines gather information about the most recent exception or MPC violation:

- ❑ `EXC_getLastStatus`
- ❑ `_MPC_getLastMPFAR`
- ❑ `_MPC_getLastMPFSR`

See Section C.4, *EXC Module* and Section C.5, *_MPC Module* for details.

C.3 Data Types and Macros

The following types and macros are defined in `exc.h`, which your application should include if you call EXC APIs.

```
typedef struct EXC_Status {
    Uint32 efr;      /* copy of exception flag register (EFR) */
    Uint32 nrp;      /* copy of NMI return pointer (NRP) */
    Uint32 ntsr;     /* copy of TSR used by NMI processing (NTSR) */
    Uint32 ierr;     /* copy of internal exception report register (IERR) */
} EXC_Status;

/* EFR (Exception Flag Register) bits */
#define EXC_EFRSXF      0x00000001
#define EXC_EFRIXF      0x00000002
#define EXC_EFREXF      0x40000000
#define EXC_EFRNXF      0x80000000

/* ECR (Exception Clear Register) bits */
#define EXC_ECRSXF      EXC_EFRSXF
#define EXC_ECRIXF      EXC_EFRIXF
#define EXC_ECREXF      EXC_EFREXF
#define EXC_ECRNXF      EXC_EFRNXF

/* TSR exception enable bits */
#define EXC_TSRGEE      0x00000004
#define EXC_TSRXEN      0x00000008

/* TSR Privilege Mode bits */
#define EXC_TSRCXMSV    0x00000000
#define EXC_TSRCXMUS    0x00000040

/* IERR (Internal Exception Report Register) bits */
#define EXC_IERRIFX     0x00000001
#define EXC_IERRFPX     0x00000002
#define EXC_IERREPX     0x00000004
#define EXC_IERROPX     0x00000008
#define EXC_IERRRCX     0x00000010
#define EXC_IERRRAX     0x00000020
#define EXC_IERRPRX     0x00000040
#define EXC_IERRLBX     0x00000080
#define EXC_IERRMS      0x00000100

/* MPC CPU Access Memory Protection Fault Events */
#define EXC_EVTPMCCMPA  120 /* PMC CPU fault */
#define EXC_EVTDMCCMPA  122 /* DMC CPU fault */
#define EXC_EVTUMCCMPA  124 /* UMC CPU fault */
#define EXC_EVTEMCCMPA  126 /* EMC CPU fault */
```

C.4 EXC Module

The EXC module supplies the following APIs:

- ❑ `EXC_clearLastStatus`. Clears latest exception status values.
- ❑ `EXC_dispatch`. Function run by `HWI_NMI`.
- ❑ `EXC_evtEvtClear`. Clears an event from the event flag register.
- ❑ `EXC_evtExpEnable`. Enables an event to generate an exception.
- ❑ `EXC_exceptionHandler`. Services non-software exceptions.
- ❑ `EXC_exceptionHook`. Hook fxn called by `EXC_exceptionHandler`.
- ❑ `EXC_external`. Handles exceptions external to the CPU.
- ❑ `EXC_externalHook`. Hook fxn called by `EXC_external`.
- ❑ `EXC_getLastStatus`. Gets latest exception status values.
- ❑ `EXC_internal`. Handles exceptions internal to the CPU.
- ❑ `EXC_internalHook`. Hook fxn called by `EXC_internal`.
- ❑ `EXC_nmi`. Handles legacy NMI exceptions.
- ❑ `EXC_nmiHook`. Hook fxn called by `EXC_nmi`.

C.4.1 EXC_dispatch

Syntax	Void EXC_dispatch(Void);
Parameters	None
Return	None
Description	When you enable EXC support, the DSP/BIOS HWI_NMI object is configured to run the EXC_dispatch function. This function then handles all types of NMIs (non-maskable interrupts). Its actions are determined by the type of NMI that occurs. The types of NMIs are:

- ❑ **Software-generated exceptions.** System calls that generate a SWE instruction are treated as exceptions. EXC_dispatch calls a function to handle SWE exceptions. Currently, the only case supported is a system call made by MPC_setPrivMode. The source for this function is provided with the EXC_dispatch source code; you can modify it to handle additional SWE instructions.
- ❑ **Internal exceptions.** These are routed to EXC_exceptionHandler, which calls the EXC_internal API.
- ❑ **External exceptions.** These are MPC violations. These are routed to EXC_exceptionHandler, which calls the EXC_external API. If both the MPC and EXC modules are enabled, the _MPC hook function for external exceptions reports MPC violations.
- ❑ **Legacy NMI.** These are routed to EXC_exceptionHandler, which calls the EXC_nmi API.

Note that EXC_dispatch is not run by the HWI dispatcher and does not use HWI_enter/HWI_exit. DSP/BIOS treats exceptions as “dead-end” situations. You can customize the EXC_exceptionHandler and EXC_dispatch functions to allow for recovery from exceptions.

Source code for EXC_dispatch is provided in the exc_asm.s64P file in the src/exc subdirectory of the DSP/BIOS installation. Source code for other EXC functions is in the exc.c file in the same subdirectory.

Constraints and Calling Context

- ❑ This function should only be called as the function for the DSP/BIOS HWI_NMI object.

C.4.2 EXC_exceptionHandler

Syntax	Void EXC_exceptionHandler(Void);
Parameters	None
Return	None
Description	<p>EXC_exceptionHandler is called by EXC_dispatch to service exceptions that aren't software induced. It performs the following actions:</p> <ol style="list-style-type: none"> 1) Reads the EFR (Exception Flag Register) to determine which type of exception to service (internal, external, or legacy NMI). 2) Prints the following information about the exception using LOG_error (whose output goes to the "Execution Graph Details" window): <ul style="list-style-type: none"> ■ EFR value ■ NRP value ■ privilege mode (user/supervisor) 3) Records the following information in the EXC_Status structure for later retrieval through a call to EXC_getLastStatus: <ul style="list-style-type: none"> ■ EXC_Status.efr ■ EXC_Status.nrp ■ EXC_Status.ntsrf (contains user/supervisor mode) 4) Calls the hook function pointed to by the EXC_exceptionHook pointer. This hook function must conform to the following prototype: <pre>Void (*EXC_exceptionHook)(Void)</pre> 5) Calls the default handler for the type of interrupt. This will be either EXC_internal, EXC_external, or EXC_nmi. 6) Terminates the system by calling SYS_abort.
Constraints and Calling Context	<ul style="list-style-type: none"> □ This function should only be called in the context of exception handling.

C.4.3 EXC_exceptionHook

Syntax Void (*EXC_exceptionHook)(Void);

Parameters None

Return None

Description If EXC_exceptionHook points to a function, that function is called by EXC_exceptionHandler after it prints the pertinent exception information and before it calls the default handling function for the NMI type. See EXC_exceptionHandler for further details.

For the MPC module, the default EXC_exceptionHook function is _MPC_exceptionHandler.

Constraints and Calling Context

- This function should only be called in the context of exception handling.

C.4.4 EXC_internal

Syntax Void EXC_internal(Void);

Parameters None

Return None

Description EXC_internal handles exceptions that are internal to the CPU. That is, they are neither SWE, nor external to the CPU, nor legacy NMI.

This function is called by EXC_exceptionHandler. It performs the following actions:

- 1) Decodes the IERR register and prints the information contained therein using LOG_error.
- 2) Calls the hook function pointed to by the EXC_internalHook pointer. This hook function must conform to the following prototype:

```
Void (*EXC_internalHook) (Void)
```
- 3) Records the EXC_Status.ierr value for later retrieval and inspection by the user (with a call to EXC_getLastStatus).
- 4) Clears the IERR and returns.

Constraints and Calling Context

- This function should only be called in the context of exception handling.

C.4.5 EXC_internalHook

Syntax	Void (*EXC_internalHook)(Void);
Parameters	None
Return	None
Description	<p>If EXC_internalHook points to a function, that function is called by EXC_internal after it prints information from the IERR register. See EXC_internal for further details.</p> <p>For the MPC module, the default EXC_internalHook function is _MPC_internalHandler.</p>
Constraints and Calling Context	<ul style="list-style-type: none"> ❑ This function should only be called in the context of exception handling.

C.4.6 EXC_external

Syntax	Void EXC_external(Void);
Parameters	None
Return	None
Description	<p>EXC_external handles exceptions that are external to the CPU. That is, they are neither SWE, nor internal to the CPU, nor legacy NMI.</p> <p>This function is called by EXC_exceptionHandler. It performs the following actions:</p> <ol style="list-style-type: none"> 1) Prints a message using LOG_error that indicates an external exception occurred. 2) Calls the hook function pointed to by the EXC_externalHook pointer. This hook function must conform to the following prototype: <pre>Void (*EXC_externalHook) (Void)</pre>
Constraints and Calling Context	<ul style="list-style-type: none"> ❑ This function should only be called in the context of exception handling.

C.4.7 EXC_externalHook

Syntax Void (*EXC_externalHook)(Void);

Parameters None

Return None

Description If EXC_externalHook points to a function, that function is called by EXC_external after it prints information to indicate that an exception occurred. See EXC_external for further details.

For the MPC module, the default EXC_externalHook function is _MPC_externalHandler.

**Constraints and
Calling Context**

- ❑ This function should only be called in the context of exception handling.

C.4.8 EXC_nmi

Syntax Void EXC_nmi(Void);

Parameters None

Return None

Description EXC_nmi handles legacy NMI exceptions. That is, they are neither SWE, nor internal or external to the CPU.

This function is called by EXC_exceptionHandler. It performs the following actions:

- 1) Prints a message using LOG_error that indicates a legacy NMI occurred.
- 2) Calls the hook function pointed to by the EXC_nmiHook pointer. This hook function must conform to the following prototype:

```
Void (*EXC_nmiHook)(Void)
```

**Constraints and
Calling Context**

- ❑ This function should only be called in the context of exception handling.

C.4.9 EXC_nmiHook

Syntax Void (*EXC_nmiHook)(Void);

Parameters None

Return None

Description If EXC_nmiHook points to a function, that function is called by EXC_nmi after it prints information to indicate that an exception occurred. See EXC_nmi for further details.

For the MPC module, the default EXC_nmiHook function is FXN_F_nop, which does nothing.

Constraints and Calling Context This function should only be called in the context of exception handling.

C.4.10 EXC_getLastStatus

Syntax EXC_Status EXC_getLastStatus(Void);

Parameters None

Return EXC_Status status; /* contains last values of exception registers */

Description EXC_getLastStatus retrieves the last recorded values of the exception registers that correspond to the members of the EXC_Status data type. These values are overwritten when the next exception is processed. You can clear the EXC_status fields by calling EXC_clearLastStatus.

The EXC_Status data type is as follows:

```
typedef struct EXC_Status {
    Uint32 efr; /* copy of exception flag register (EFR) */
    Uint32 nrp; /* copy of NMI return pointer (NRP) */
    Uint32 ntsr; /* copy of TSR used by NMI processing (NTSR) */
    Uint32 ierr; /* copy of internal exception report register (IERR) */
} EXC_Status;
```

Constraints and Calling Context This function is usually called in the context of exception handling. If you extend exception handling support to include recovering from exceptions, this function may be called outside the context of exception handling.

C.4.11 EXC_clearLastStatus

Syntax	Void EXC_clearLastStatus(Void);
Parameters	None
Return	None
Description	EXC_clearLastStatus clears the last recorded values of exception registers that correspond to the members of the EXC_Status data type.

These values will be set to new values when the next exception is processed. They may be retrieved by way of the API EXC_getLastStatus.

You can use this API along with EXC_getLastStatus to determine whether a new exception has occurred since the time EXC_clearLastStatus was called.

Constraints and Calling Context

- ❑ This function is usually called in the context of exception handling. If you extend exception handling support to include recovering from exceptions, this function may be called outside the context of exception handling.

C.4.12 EXC_evtExpEnable

Syntax	Void EXC_evtExpEnable(Uns event);
Parameters	Uns event /* event number */
Return	None
Description	EXC_evtExpEnable enables the specified event type to generate the EXCEP hardware exception (which is routed to NMI). You must call this function in order for a particular type of event to be recognized by the exception framework.

The EXC module provides constants for the following event types. See the “System Event Mapping” table in the *TMS320C64x+ DSP Megamodule Reference Guide* (SPRU871) for a list of event numbers.

```
/* MPC CPU Access Memory Protection Fault Events */
#define EXC_EVTPMCCMPA 120 /* PMC CPU fault */
#define EXC_EVTDMCCMPA 122 /* DMC CPU fault */
#define EXC_EVTUMCCMPA 124 /* UMC CPU fault */
#define EXC_EVTEMCCMPA 126 /* EMC CPU fault */
```

The MPC module enables the first three types of CPU faults as hardware exceptions, but does not enable the EXC_EVTEMCCMPA fault.

Constraints and Calling Context

- ❑ none

C.4.13 EXC_evtEvtClear

Syntax Void EXC_evtEvtClear(Uns event);

Parameters Uns event /* event number */

Return None

Description EXC_evtEvtClear clears the specified event from the event flag register (EVTFLAGx). It must be called in order for that event to generate a new exception.

This function is for external exceptions only. You may want to use it if you write your own EXC_externalHook function. It is called by _MPC_externalHandler.

**Constraints and
Calling Context**

- This function is usually called in the context of exception handling. If you extend exception handling support to include recovering from exceptions, this function may be called outside the context of exception handling.

C.5 _MPC Module

The MPC module provides the following handlers, hooks, and functions:

- ❑ `_MPC_exceptionHandler`. Assigned to `EXC_exceptionHook`.
- ❑ `_MPC_getLastMPFAR`. Gets MPFAR for a memory controller.
- ❑ `_MPC_getLastMPFSR`. Gets MPFSR for a memory controller.
- ❑ `_MPC_externalHandler`. Assigned to `EXC_externalHook`.
- ❑ `_MPC_internalHandler`. Assigned to `EXC_internalHook`.
- ❑ `_MPC_userHook`. Hook for user-defined function.

C.5.1 _MPC_exceptionHandler

Syntax

`Void _MPC_exceptionHandler(Void);`

Parameters

None

Return

None

Description

`_MPC_exceptionHandler` is assigned to the `EXC_exceptionHook` function pointer when you enable the MPC module. It performs the following actions:

- 1) Records exception status (using `EXC_getLastStatus`) in the structure `_MPC_excStatus`, which is of type `EXC_Status`.
- 2) Calls the user-settable hook function pointer (`_MPC_userHook`).

Constraints and Calling Context

- ❑ This function should only be called in the context of exception handling.

C.5.2 _MPC_internalHandler

Syntax

`Void _MPC_internalHandler(Void);`

Parameters

None

Return

None

Description

`_MPC_internalHandler` is assigned to the `EXC_internalHook` function pointer when you enable the MPC module. It is a minimal function that only records exception status using `EXC_getLastStatus`.

Typically the MPC module doesn't cause any internal exceptions, but certain MPC exceptions can get flagged as an internal exception when they are caught early by the CPU instead of by an MPC module.

Constraints and Calling Context

- ❑ This function should only be called in the context of exception handling.

C.5.3 `_MPC_externalHandler`

Syntax	<code>Void _MPC_externalHandler(Void);</code>
Parameters	None
Return	None
Description	<p><code>_MPC_externalHandler</code> is assigned to the <code>EXC_externalHook</code> function pointer when you enable the MPC module. This is where the bulk of MPC exception processing occurs. This function performs the following actions:</p> <ol style="list-style-type: none">1) Inspects all known MPC controllers for violations and prints any violations using <code>LOG_error</code>.2) Records all pertinent information regarding the violation for later retrieval with the <code>_MPC_getLastMPFAR</code> and <code>_MPC_getLastMPFSR</code> APIs.3) Clears the event that caused the exception using <code>EXC_evtEvtClear</code> and returns.
Constraints and Calling Context	<ul style="list-style-type: none"><input type="checkbox"/> This function should only be called in the context of exception handling.

C.5.4 `_MPC_userHook`

Syntax	<code>Void (*_MPC_userHook)(Void);</code>
Parameters	None
Return	None
Description	<p><code>_MPC_userHook</code> is called by <code>_MPC_exceptionHandler</code>. This is a user-settable hook function, so you can replace it with your own function if you like. See <code>_MPC_exceptionHandler</code> for further details.</p> <p>This hook function is called prior to handling the actual MPC violation. If you want the default <code>_MPC_exceptionHandler</code> to handle the violation, don't perturb the existing violation information in the MPC hardware registers.</p> <p>The default <code>_MPC_userHook</code> function is <code>FXN_F_nop</code>, which does nothing.</p>
Constraints and Calling Context	<ul style="list-style-type: none"><input type="checkbox"/> This function should only be called in the context of exception handling.

C.5.5 `_MPC_getLastMPFAR`

Syntax `UInt32 _MPC_getLastMPFAR(Uns id);`

Parameters `Uns id /* _MPC_PMC, _MPC_DMC, or _MPC_UMC */`

Return `UInt32 mpfarReg /* Last observed MPFAR register for controller */`

Description `_MPC_getLastMPFAR` returns the latest observed copy of the MPC register MPFAR (Memory Protection Fault Address Register). This register's value is recorded by `_MPC_externalHandler`.

Each peripheral that generates memory protection faults provides an MPFAR register. The `id` parameter indicates whether to get the MPFAR for the Program Memory Controller (PMC), Data Memory Controller (DMC), or Unified Memory Controller (UMC). The `_mpc.h` file defines the following constants for use with the `id` parameter:

```
_MPC_DMC
_MPC_PMC
_MPC_UMC
```

Constraints and Calling Context

- ❑ This function is usually called during exception handling. If you extend exception handling to include recovering from exceptions, this function may be called outside the context of exception handling.

C.5.6 `_MPC_getLastMPFSR`

Syntax `UInt32 _MPC_getLastMPFSR(Uns id);`

Parameters `Uns id /* _MPC_PMC, _MPC_DMC, or _MPC_UMC */`

Return `UInt32 mpfsrReg /* Last observed MPFSR register for controller */`

Description `_MPC_getLastMPFSR` returns the latest observed copy of the MPC register MPFSR (Memory Protection Fault Status Register). This register's value is recorded by `_MPC_externalHandler`.

Each peripheral that generates memory protection faults provides an MPFSR register. The `id` parameter indicates whether to get the MPFSR for the Program Memory Controller (PMC), Data Memory Controller (DMC), or Unified Memory Controller (UMC). The `_mpc.h` file defines the following constants for use with the `id` parameter:

```
_MPC_DMC
_MPC_PMC
_MPC_UMC
```

Constraints and Calling Context

- ❑ This function is usually called during exception handling. If you extend exception handling to include recovering from exceptions, this function may be called outside the context of exception handling.

64Plus cache support 2-138

A

A registers, conventions for B-2
abort function 2-459
aborting program 2-460
allocators
 for messages sent by MSGQ module 2-276
 interface for 2-329
AMR register, conventions for B-3
AND operation
 signed integers 2-3
 unsigned integers 2-4
Arg data type 1-5
ArgToInt macro 2-516
ArgToPtr macro 2-516
arguments for functions 1-5
assembly language
 callable functions (DSP/BIOS) A-2
 calling C functions from 1-4
atexit function 2-516
ATM module 2-2
 function callability A-2
 functions in, list of 1-6, 2-2
ATM_andi function 2-3
ATM_andu function 2-4
ATM_cleari function 2-5
ATM_clearu function 2-6
ATM_deci function 2-7
ATM_decu function 2-8
ATM_inci function 2-9
ATM_incu function 2-10
ATM_ori function 2-11
ATM_oru function 2-12
ATM_seti function 2-13
ATM_setu function 2-14
atomic queue manager 2-342
average statistics for data series 2-419

B

B registers, conventions for B-2
BCACHE module 2-15

 functions in, list of 1-6, 2-15
BCACHE_getMar function 2-17
BCACHE_getMode function 2-18
BCACHE_getSize function 2-19
BCACHE_inv function 2-20
BCACHE_invL1pAll function 2-21
BCACHE_setMar function 2-22
BCACHE_setMode function 2-24
BCACHE_setSize function 2-25
BCACHE_wait function 2-26
BCACHE_wb function 2-27
BCACHE_wbAll function 2-28
BCACHE_wbInv function 2-29
BCACHE_wbInvAll function 2-30
BIOS library
 instrumented or non-instrumented 2-135
board clock frequency 2-133
board input clock 2-140
board name 2-133
Bool data type 1-5
Boolean values 1-5
BUF module 2-31
 configuration properties 2-31
 function callability A-2
 functions in, list of 1-7, 2-31
 global properties 2-33
 object properties 2-33
BUF_alloc function 2-35
BUF_create function 2-36
BUF_delete function 2-38
BUF_free function 2-39
BUF_maxbuff function 2-40
BUF_stat function 2-41
buffer pool
 allocating fixed-size buffer 2-35
 creating 2-36
 deleting 2-38
 fixed-size buffers 2-31
 freeing fixed-size buffer 2-39
 maximum number of buffers 2-40
 status of 2-41
buffered pipe manager 2-309
buffers, splitting 2-117
bypass mode 2-18

C

C functions
 calling from assembly language 1-4
 C_library_stdlib 2-516
 C62 module 2-42
 function callability A-3
 functions in, list of 1-7
 C62_disableIER function 2-43
 C62_enableIER function 2-45
 C62_plug function 2-49
 C64 module 2-42
 function callability A-3
 C64_disableIER function 2-44
 C64_enableIER function 2-47
 C64_plug function 2-50
 C64x+ interrupt controller 2-122
 c6711 boards
 memory segments 2-251
 c6x EVM boards
 memory segments 2-251
 cache
 invalidate 2-20, 2-21, 2-29, 2-30
 operations 2-16
 size 2-19, 2-25
 writeback 2-27, 2-28, 2-29, 2-30
 cache mode 2-135
 cache support
 64Plus 2-138
 cache, L1 and L2 2-15
 callability of functions A-2
 calling context (see context)
 calloc function 2-516
 not callable from SWI or HWI A-10
 channels (see communication channels; data channels; host channels)
 character, outputting 2-472
 class driver 2-74
 CLK module 2-51
 checking calling context 2-203
 configuration properties 2-51
 function callability 2-179, A-3
 functions in, list of 1-7, 2-51
 global properties 2-55
 object properties 2-59
 timer for, driving PRD ticks 2-335, 2-336
 trace types for 2-473
 CLK_countspms function 2-61
 CLK_cpuCyclesPerHtime function 2-62
 CLK_cpuCyclesPerLtime function 2-63
 CLK_F_isr function 2-55
 CLK_gethtime function 2-64
 CLK_getltime function 2-65
 CLK_getprd function 2-66
 CLK_reconfig function 2-67

CLK_start function 2-69
 CLK_stop function 2-70
 clock function
 not callable from SWI or HWI A-10
 clocks (see clock domains; real-time clock; system clock; timer)
 communication channels
 closing 2-155
 control call on 2-152
 opening 2-153, 2-157
 consumer, of data pipe 2-311
 context
 CLK, checking for 2-203
 HWI, checking for 2-203
 SWI, checking for 2-448
 switching, functions allowing A-2
 switching, register usage and 1-4
 conversion specifications for formatted data 2-464, 2-466, 2-468, 2-470
 count statistics for data series 2-419
 counts per millisecond, timer 2-61
 CPU clock domains (see clock domains)
 CPU cycles
 converting high-resolution time to 2-62
 converting low-resolution time to 2-63
 CPU frequency 2-141, 2-144
 CSR register, conventions for B-3

D

data channels
 busy status, checking 2-362
 initializing 2-363
 initializing for output 2-364
 input, disabling 2-365
 input, enabling 2-367
 input, number of MADUs read from 2-373
 input, reading from 2-371, 2-372
 input, status of 2-369
 output, disabling 2-366
 output, enabling 2-368
 output, status of 2-370
 output, writing to 2-374
 data pipes 2-309
 allocating empty frame from 2-315
 getting frame from 2-318
 number of frames available to read 2-320
 number of frames available to write 2-323
 number of words written, setting 2-328
 putting frame in 2-326
 recycling frame that has been read to 2-317
 writerAddr point of, getting 2-322
 data types 1-5
 Arg 1-5

- Bool 1-5
 - EnumInt 1-5
 - EnumString 1-5
 - Extern 1-5
 - Int16 1-5
 - Int32 1-5
 - Numeric 1-5
 - Reference 1-5
 - String 1-5
 - default values
 - for properties 1-5
 - DEV module 2-71
 - configuration properties 2-74
 - function callability A-3
 - functions in, list of 1-8, 2-71
 - object properties 2-75
 - properties 2-74
 - DEV_createDevice function 2-77
 - DEV_deleteDevice function 2-80
 - DEV_match function 2-82
 - device
 - closing 2-83
 - control operation of 2-84
 - creating 2-77
 - deleting 2-80
 - idling 2-85
 - initializing 2-86
 - matching with driver 2-82
 - opening 2-89
 - readiness of, checking 2-90
 - retrieving buffer from 2-91
 - sending buffer to 2-87
 - device drivers 2-71
 - DGN driver 2-93
 - DGS driver 2-98
 - DHL driver 2-102
 - DIO adapter 2-106
 - DNL driver 2-109
 - DOV driver 2-110
 - DPI driver 2-113
 - DST driver 2-117
 - DTR driver 2-119
 - list of 2-74
 - matching device with 2-82
 - device table 2-82
 - device-dependent control operations, performing 2-398
 - DGN driver 2-74, 2-93
 - object properties 2-94
 - DGS driver 2-75, 2-98
 - dgs.h file 2-99
 - DGS_Params structure 2-98
 - DHL driver 2-74, 2-102
 - global properties 2-104
 - object properties 2-104
 - DIER register, conventions for B-6
 - DIO adapter 2-74, 2-106
 - configuration properties for 2-106
 - global properties 2-107
 - object properties 2-108
 - DMA channel 2-49
 - DNL driver 2-75, 2-109
 - DNUM register, conventions for B-6
 - DOV driver 2-75, 2-110
 - DPI driver 2-75, 2-113
 - object properties 2-115
 - drivers (see device drivers)
 - DSP Endian Mode 2-134
 - DSP speed 2-133
 - DSP/BIOS functions, list of 1-6
 - DSP/BIOS modules, list of 1-2
 - DSP/BIOS version 2-143
 - DST driver 2-75, 2-117
 - DTR driver 2-75, 2-119
 - dtr.h file 2-120
 - DTR_multiply function 2-119
 - DTR_multiplyInt16 function 2-119
 - DTR_Params structure 2-120
 - Dxx_close function 2-83
 - Dxx_ctrl function 2-84
 - Dxx_idle function 2-85
 - Dxx_init function 2-86
 - Dxx_issue function 2-87
 - Dxx_open function 2-89
 - Dxx_ready function 2-90
 - Dxx_reclaim function 2-91
- ## E
- ECM module 2-122
 - configuration properties 2-122
 - functions in, list of 1-9, 2-122
 - global properties 2-124
 - object properties 2-124
 - ECM_disableEvent function 2-126
 - ECM_dispatch function 2-127
 - ECM_dispatchPlub function 2-129
 - ECM_enableEvent function 2-130
 - ECR register, conventions for B-5
 - EFR register, conventions for B-5
 - empty devices 2-109
 - endian mode 2-134
 - enumerated integers 1-5
 - enumerated strings 1-5
 - EnumInt data type 1-5
 - EnumString data type 1-5
 - environment for HOOK and TSK objects 2-169
 - environment pointer for HOOK and TSK objects 2-170

- error condition
 - flagging 2-462
 - error function 2-459
 - error handling
 - error codes A-11
 - MSGQ module 2-304
 - error message, writing to system log 2-222
 - error number for tasks 2-499
 - event combiner 2-122
 - configuring 2-129
 - handling functions 2-127
 - events
 - mapping 2-198
 - scheduling functions based on 2-335
 - tracing 2-473
 - EXC module C-2, C-7
 - functions in, list of 1-9
 - EXC_clearLastStatus function C-14
 - EXC_dispatch function C-8
 - EXC_evtEvtClear function C-15
 - EXC_evtExpEnable function C-14
 - EXC_exceptionHandler function C-9
 - EXC_exceptionHook function C-10
 - EXC_external function C-11
 - EXC_externalHook function C-12
 - EXC_getLastStatus function C-13
 - EXC_internal function C-10
 - EXC_internalHook function C-11
 - EXC_nmi function C-12
 - EXC_nmiHook function C-13
 - exception handling C-2
 - exit function 2-459, 2-516
 - exit handler
 - stacking 2-461
 - Extern data type 1-5
- F**
- f32toi16 function 2-100
 - FADCR register, conventions for B-3
 - false/true values 1-5
 - fatal error C-2
 - FAUCR register, conventions for B-4
 - fixed-size buffers
 - allocating 2-35
 - freeing 2-39
 - maximum number of 2-40
 - pools of 2-31
 - FMCR register, conventions for B-4
 - formatted data, outputting 2-464, 2-466, 2-468, 2-470
 - fprintf function
 - not callable from SWI or HWI A-10
 - frame
 - available to read to, getting number of 2-320
 - available to write, getting number of 2-323
 - getting from pipe 2-318
 - number of words in, getting 2-321
 - number of words that can be written to 2-324
 - putting in pipe 2-326
 - recycling 2-317
 - size and address of, determining 2-325
 - free function 2-516
 - not callable from SWI or HWI A-10
 - freeze mode 2-18
 - functions
 - arguments for 1-5
 - callability of A-2
 - calling conventions for 1-4
 - external 1-5
 - list of 1-6
 - naming conventions for 1-4
- G**
- gather/scatter driver 2-98
 - GBL module 2-131
 - configuration properties 2-131
 - function callability A-4
 - functions in, list of 1-9, 2-131
 - global properties 2-133
 - GBL_getClkin function 2-140
 - GBL_getFrequency function 2-141
 - GBL_getProclD function 2-142
 - GBL_getVersion function 2-143
 - GBL_setFrequency function 2-144
 - GBL_setProclD function 2-145
 - Gconf
 - underscore preceding C function names 1-4, 2-60, 2-207, 2-432
 - generators 2-93
 - getenv function 2-516
 - not callable from SWI or HWI A-10
 - GFPGFR register, conventions for B-4
 - GIO module 2-146
 - configuration properties 2-148
 - function callability A-4
 - functions in, list of 1-10, 2-146
 - global properties 2-149
 - object properties 2-150
 - GIO_abort function 2-151
 - GIO_control function 2-152
 - GIO_create function 2-153
 - GIO_delete function 2-155
 - GIO_flush function 2-156
 - GIO_new function 2-157
 - GIO_read function 2-159
 - GIO_submit function 2-161

GIO_write function 2-163
 global settings 2-131
 GPLYA register, conventions for B-5
 GPLYB register, conventions for B-5

H

hardware interrupts 2-176
 callable functions A-2
 context of, determining if in 2-203
 disabled, manipulating variables while 2-2
 disabling 2-188
 enabling 2-193
 plugging dispatcher 2-190
 restoring context before interrupt 2-199
 restoring global interrupt enable state 2-204
 saving context of 2-195
 saving or restoring registers across B-2
 target-specific, disabling 2-43, 2-44
 target-specific, enabling 2-45, 2-47
 target-specific, enabling and disabling 2-42
 hardware registers
 MEM module and 2-242
 hardware timer counter register ticks 2-51
 heap, address 2-257
 high-resolution time 2-51, 2-52, 2-54
 converting to CPU cycles 2-62
 getting 2-64
 hook functions 2-165
 HOOK module 2-165
 configuration properties 2-165
 function callability A-4
 functions in, list of 1-10, 2-165
 object properties 2-167
 properties 2-167
 HOOK_getenv function 2-169
 HOOK_setenv function 2-170
 host channel manager 2-171
 host link driver 2-74, 2-102
 HST module 2-171
 configuration properties 2-171
 function callability A-4
 functions in, list of 1-10, 2-171
 global properties 2-172
 object properties 2-173
 HST object 2-102
 HST_getpipe function 2-175
 HWI module 2-176
 configuration properties 2-176
 function callability A-4
 functions in, list of 1-11, 2-176
 global properties 2-181
 object properties 2-182
 statistics units for 2-419

HWI_applyWugenMasks function 2-187
 HWI_disable function 2-188
 HWI_disableWugen function 2-189
 HWI_dispatchplug function 2-190
 HWI_enable function 2-193
 HWI_enableWugen function 2-194
 HWI_enter function 2-179, 2-195
 HWI_eventMap function 2-198
 HWI_exit function 2-179, 2-199
 HWI_getWugenMasks function 2-201
 HWI_ierToWugenMasks function 2-202
 HWI_isHWI function 2-203
 HWI_NMI object C-8
 HWI_restore function 2-204

I

I/O availability, scheduling functions based on 2-335
 i16tof32 function 2-100
 i16toi32 function 2-100
 i16tou8 function 2-100
 i32toi16 function 2-100
 ICR register, conventions for B-3
 IDL module 2-205
 configuration properties 2-205
 function callability A-5
 functions in, list of 1-11, 2-205
 global properties 2-206
 object properties 2-207
 IDL_run function 2-208
 idle functions, running 2-208
 idle thread manager 2-205
 IER (Interrupt Enable Register)
 disable interrupts using 2-43, 2-44
 enable interrupts using 2-45
 IER register, conventions for B-3
 IERR register C-2
 IERR register, conventions for B-5
 IFR register, conventions for B-3
 ILC register, conventions for B-5
 initialization 2-165
 input channels
 declaring 2-363
 disabling 2-365
 enabling 2-367
 number of MADUs read from 2-373
 reading from 2-371, 2-372
 status of, determining 2-369
 input streams 2-388
 Input/Output
 aborting 2-151
 closing communication channel 2-155
 control call on communication channel 2-152
 flushing input and output channels 2-156

- opening communication channel 2-153, 2-157
- submitting GIO packet 2-161
- synchronous read 2-159
- synchronous write 2-163
- INT status bit B-5
- Int16 data type 1-5
- Int32 data type 1-5
- integers
 - enumerated 1-5
 - unsigned 1-5
- interface for allocators 2-329
- interrupt controller 2-122
- Interrupt Enable Register
 - disable interrupts using 2-43, 2-44
 - enable interrupts using 2-45
- interrupt selection number 2-123
- interrupt selector 2-122
- Interrupt Service Fetch Packet 2-49, 2-50
- interrupt service routines (see hardware interrupts)
- Interrupt Service Table 2-49, 2-50
- interrupt threads 2-431
- interrupt vector, plugging 2-42, 2-49, 2-50
- invalidate cache 2-16
- IOM model for device drivers 2-71
- IRP register, conventions for B-3
- ISFP (Interrupt Service Fetch Packet) 2-49, 2-50
- ISR epilog 2-199
- ISR prolog 2-195
- ISR register, conventions for B-3
- ISRs
 - disabling 2-126
 - enabling 2-130
 - handling 2-127
- IST (Interrupt Service Table) 2-49, 2-50
- ISTP register, conventions for B-3
- ITSR register, conventions for B-5

L

- L1 cache 2-15
- L1D cache 2-16, 2-138
- L1P cache 2-16, 2-138
- L2 cache 2-15, 2-16, 2-138
- L2 cache mode 2-136
- L2 memory settings 2-135, 2-136
- L2 priority queues 2-137
- L2 requestor priority 2-137
- L2 transfer requests 2-137
- L2ALLOC queues 2-137
- LCK module 2-209
 - configuration properties 2-209
 - function callability A-5
 - functions in, list of 1-11, 2-209
 - global properties 2-209

- object properties 2-210
- LCK_create function 2-211
- LCK_delete function 2-212
- LCK_pend function 2-213
 - thread restrictions for 2-517
- LCK_post function 2-215
 - thread restrictions for 2-517
- load addresses 2-247
- localcopy function 2-100
- LOG module 2-216
 - configuration properties 2-216
 - function callability A-5
 - functions in, list of 1-12, 2-216
 - global properties 2-217
 - object properties 2-218
- LOG_disable function 2-220
- LOG_enable function 2-221
- LOG_error function 2-222
- LOG_event function 2-223
- LOG_event5 function 2-224
- LOG_message function 2-226
- LOG_printf function 2-227
- LOG_printf4 function 2-230
- LOG_reset function 2-232
- low-resolution time 2-51, 2-52, 2-53
 - converting to CPU cycles 2-63
 - getting 2-65
 - restarting 2-69
 - stopping 2-70

M

- MADUs 2-241
- mailbox
 - clear bits from 2-434, 2-436
 - creating 2-235
 - decrementing 2-439
 - deleting 2-236
 - get value of 2-445
 - incrementing 2-447
 - OR mask with value in 2-449, 2-450
 - posting message to 2-238
 - waiting for message from 2-237
- mailbox manager 2-233
- main function
 - calling context 2-203
- malloc function 2-516
 - not callable from SWI or HWI A-10
- MAR register
 - getting 2-17, 2-22
- MAR registers 2-136, 2-138
- maskable CPU interrupts 2-122
- maximum statistics for data series 2-419
- MBX module 2-233

- configuration properties 2-233
- function callability A-5
- functions in, list of 1-12, 2-233
- global properties 2-234
- object properties 2-234
- MBX_create function 2-235
- MBX_delete function 2-236
- MBX_pend function 2-237
- MBX_post function 2-238
- MEM module 2-239
 - configuration properties 2-239
 - function callability A-5
 - functions in, list of 1-12, 2-239
 - global properties 2-242
 - object properties 2-249
- MEM_alloc function 2-252
- MEM_define function 2-254
- MEM_free function 2-256
- MEM_getBaseAddress function 2-257
- MEM_increaseTableSize function 2-258
- MEM_redefine function 2-259
- MEM_stat function 2-260
- MEM_undefine function 2-261
- MEM_valloc function 2-262
- memory block
 - freeing 2-256
 - increasing 2-258
- memory segment manager 2-239
- memory segments
 - allocating and initializing 2-262
 - allocating from 2-252
 - c6711 boards 2-251
 - c6x EVM boards 2-251
 - defining 2-254
 - existing, redefining 2-259
 - status of, returning 2-260
 - undefining 2-261
- message log 2-216
 - appending formatted message to 2-227, 2-230
 - disabling 2-220
 - enabling 2-221
 - resetting 2-232
 - writing unformatted message to 2-223, 2-224
- message queues 2-276
 - closing 2-284
 - determining destination queue for message 2-289
 - finding 2-296
 - number of messages in 2-285
 - open, finding 2-294
 - opening 2-298
 - placing message in 2-301
 - receiving message from 2-287
 - releasing 2-303
- messages
 - allocating 2-283
 - determining destination message queue of 2-289
 - freeing 2-286
 - ID for, setting 2-306
 - ID of, determining 2-290
 - number of, in message queue 2-285
 - placing in message queue 2-301
 - receiving from message queue 2-287
 - reply destination of, determining 2-292
 - reply destination of, setting 2-308
 - size of, determining 2-291
- messaging, multi-processor 2-273
- mini-drivers 2-106
 - deleting 2-155
- minit function
 - not callable from SWI or HWI A-10
- modules
 - _MPC module C-16
 - ATM module 2-2
 - BCACHE module 2-15
 - BUF module 2-31
 - C62 module 2-42
 - C64 module 2-42
 - CLK module 2-51
 - DEV module 2-71
 - ECM module 2-122
 - EXC module C-7
 - functions for, list of 1-6
 - GBL module 2-131
 - GIO module 2-146
 - HOOK module 2-165
 - HST module 2-171
 - HWI module 2-176
 - IDL module 2-205
 - LCK module 2-209
 - list of 1-2
 - LOG module 2-216
 - MBX module 2-233
 - MEM module 2-239
 - MPC module 2-263
 - MSGQ module 2-273
 - PIP module 2-309
 - POOL module 2-329
 - PRD module 2-334
 - QUE module 2-342
 - SEM module 2-375
 - SIO module 2-388
 - STS module 2-418
 - SWI module 2-428
 - SYS module 2-457
 - trace types for 2-473
 - TRC module 2-473
 - TSK module 2-478
 - _MPC module C-16
 - functions in, list of 1-13
 - MPC module 2-263

- configuration properties 2-263
- exception handling C-5
- functions in, list of 1-13, 2-263
- global properties 2-265
- `_MPC_exceptionHandler` function C-16
- `_MPC_externalHandler` function C-17
- `_MPC_getLastMPFAR` function C-18
- `_MPC_getLastMPFSR` function C-18
- `MPC_getPA` function 2-266
- `MPC_getPageSize` function 2-267
- `MPC_getPrivMode` function 2-268, 2-272
- `_MPC_internalHandler` function C-16
- `MPC_setBufferPA` function 2-269
- `MPC_setPA` function 2-271
- `_MPC_userHook` function C-17
- MSGQ API 2-276, 2-277
- MSGQ module 2-273
 - configuration properties 2-275
 - function callability A-6
 - functions in, list of 1-13, 2-273
 - global properties 2-282
 - internal errors, handling 2-304
 - static configuration 2-278
- `MSGQ_alloc` function 2-283
- `MSGQ_close` function 2-284
- `MSGQ_count` function 2-285
- `MSGQ_free` function 2-286
- `MSGQ_get` function 2-287
- `MSGQ_getAttrs` function 2-288
- `MSGQ_getDstQueue` function 2-289
- `MSGQ_getMsgId` function 2-290
- `MSGQ_getMsgSize` function 2-291
- `MSGQ_getSrcQueue` function 2-292
- `MSGQ_isLocalQueue` function 2-293
- `MSGQ_locate` function 2-294
- `MSGQ_locateAsync` function 2-296
- `MSGQ_open` function 2-298
- `MSGQ_put` function 2-301
- `MSGQ_release` function 2-303
- `MSGQ_setErrorHandler` function 2-304
- `MSGQ_setMsgId` function 2-306
- `MSGQ_setSrcQueue` function 2-308
- multiple processors 2-145
- multiprocessor application
 - converting single-processor application to 2-115
- multi-processor applications 2-145
- multi-processor messaging 2-273

N

- naming conventions
 - functions 1-4
 - properties 1-5
- NMI exceptions C-3

- NMI functions
 - calling HWI functions 2-179
- `notifyReader` function 2-311
 - PIP API calls and 2-180
- `notifyWriter` function 2-311
- NRP register, conventions for B-3
- NTSR register, conventions for B-5
- null driver 2-109
- Numeric data type 1-5

O

- object references
 - properties holding 1-5
- on-chip timer (see timer)
- operations (see functions)
- OR operation
 - signed integers 2-11
 - unsigned integers 2-12
- output channels
 - declaring 2-364
 - disabling 2-366
 - enabling 2-368
 - status of, determining 2-370
 - writing to 2-374
- output streams 2-388
- outputting formatted data 2-464, 2-466, 2-468, 2-470
- outputting single character 2-472
- overlap driver 2-110

P

- packing/unpacking ratio, DGS driver 2-98
- PCE1 register, conventions for B-3
- period register
 - value of 2-66
- periodic function
 - starting 2-339
 - stopping 2-340
- periodic function manager 2-334
- periodic rate 2-52
- PIP module 2-309
 - configuration properties 2-310
 - function callability A-6
 - functions in, list of 1-14, 2-309
 - global properties 2-312
 - object properties 2-312
 - statistics units for 2-419
 - trace types for 2-473
- `PIP_alloc` function 2-315
- `PIP_free` function 2-311, 2-317
- `PIP_get` function 2-318
- `PIP_getReaderAddr` function 2-319
- `PIP_getReaderNumFrames` function 2-320

PIP_getReaderSize function 2-321
 PIP_getWriterAddr function 2-322
 PIP_getWriterNumFrames function 2-323
 PIP_getWriterSize function 2-324
 PIP_peek function 2-325
 PIP_put function 2-311, 2-326
 PIP_setWriterSize function 2-328
 pipe driver 2-75, 2-113
 pipe manager, buffered 2-309
 pipe object 2-175
 pipes

- allocating empty frame from 2-315
- get readerAddr pointer of 2-319
- getting frame from 2-318
- number of frames available to read 2-320
- number of frames available to write 2-323
- number of words written, setting 2-328
- putting frame in 2-326
- recycling frame that has been read to 2-317
- writerAddr point of, getting 2-322

 POOL module 2-329

- configuration properties 2-329
- functions in, list of 2-329
- global properties 2-333

 PRD module 2-334

- configuration properties 2-334
- function callability A-7
- functions in, list of 1-15, 2-334
- global properties 2-335
- object properties 2-336
- statistics units for 2-419
- ticks driven by CLK timer 2-335, 2-336
- ticks, getting current count 2-338
- ticks, incrementing 2-341
- ticks, setting increments for 2-336
- trace types for 2-473

 PRD_getticks function 2-338
 PRD_start function 2-339
 PRD_stop function 2-340
 PRD_tick function 2-341
 prescaler register

- resetting 2-67

 printf function

- not callable from SWI or HWI A-10

 processor ID 2-133, 2-142, 2-145
 processors

- multiple 2-145

 PROCID 2-145
 producer, of data pipe 2-311
 program

- aborting 2-460
- terminating 2-463

 properties

- data types for 1-5
- default values for 1-5

ECM object 2-124
 GIO object 2-150
 HOOK module 2-167
 HOOK object 2-167
 MEM object 2-249
 naming conventions 1-5
 putc function 2-459

Q

QUE module 2-342

- configuration properties 2-342
- function callability A-7
- functions in, list of 1-15, 2-342
- global properties 2-343
- object properties 2-344

 QUE_create function 2-345
 QUE_delete function 2-346
 QUE_dequeue function 2-347
 QUE_empty function 2-348
 QUE_enqueue function 2-349
 QUE_get function 2-350
 QUE_head function 2-351
 QUE_insert function 2-352
 QUE_new function 2-353
 QUE_next function 2-354
 QUE_prev function 2-355
 QUE_put function 2-356
 QUE_remove function 2-357
 queue manager 2-342
 queues

- creating 2-345
- deleting 2-346
- emptying 2-353
- getting element from front of 2-350
- inserting element at end of 2-349
- inserting element in middle of 2-352
- putting element at end of 2-356
- removing element from front of 2-347
- removing element from middle of 2-357
- returning pointer to element at front of 2-351
- returning pointer to next element of 2-354
- returning pointer to previous element of 2-355
- testing if empty 2-348

R

rand function

- not callable from SWI or HWI A-10

 reader, of data pipe 2-311
 readers, MSGQ module 2-275, 2-277
 read-time data exchange settings 2-359
 realloc function 2-516

- not callable from SWI or HWI A-10

- real-time clock (see CLK module)
 - Reference data type 1-5
 - register conventions B-2
 - registers
 - modification in multi-threaded application B-2
 - saving or restoring across function calls or interrupts B-2
 - resource lock
 - acquiring ownership of 2-213
 - creating 2-211
 - deleting 2-212
 - relinquishing ownership of 2-215
 - resource lock manager 2-209
 - RILC register, conventions for B-5
 - RTDX module 2-359
 - configuration properties 2-359
 - function callability A-7
 - functions in, list of 1-16
 - object properties 2-361
 - target configuration properties 2-360
 - RTDX_channelBusy function 2-362
 - RTDX_CreateInputChannel 2-363
 - RTDX_CreateOutputChannel function 2-364
 - RTDX_disableInput function 2-365
 - RTDX_disableOutput function 2-366
 - RTDX_enableInput function 2-367
 - RTDX_enableOutput function 2-368
 - RTDX_isInputEnabled function 2-369
 - RTDX_isOutputEnabled function 2-370
 - RTDX_read function 2-371
 - RTDX_readNB function 2-372
 - RTDX_sizeofInput function 2-373
 - RTDX_write function 2-374
 - RTS functions
 - not calling in HWI or SWI threads 2-178, 2-517
 - RTS library 2-133
- S**
- scaling operation 2-119
 - SEM module 2-375
 - configuration properties 2-375
 - function callability A-7
 - functions in, list of 1-16, 2-375
 - global properties 2-377
 - object properties 2-377
 - SEM_count function 2-378
 - SEM_create function 2-379
 - SEM_delete function 2-380
 - SEM_new function 2-381
 - SEM_pend function 2-382
 - SEM_pendBinary function 2-383
 - SEM_post function 2-385
 - SEM_postBinary function 2-386
 - SEM_reset 2-387
 - semaphore manager 2-375
 - semaphores
 - binary, signaling 2-386
 - binary, waiting for 2-383
 - count of, determining 2-378
 - count of, resetting 2-387
 - creating 2-379
 - deleting 2-380
 - initializing 2-381
 - signaling 2-385
 - waiting for 2-382
 - signal generators 2-93
 - signed integers
 - AND operation 2-3
 - clearing 2-5
 - decrementing 2-7
 - incrementing 2-9
 - OR operation 2-11
 - setting 2-13
 - single-processor application
 - converting to multiprocessor application 2-115
 - SIO module 2-388
 - configuration properties 2-389
 - function callability A-8
 - functions in, list of 1-17
 - functions in, list of 2-388
 - global properties 2-390
 - object properties 2-390
 - SIO/DEV model for device drivers 2-72
 - SIO_bufsize function 2-394
 - SIO_create function 2-395
 - SIO_ctrl function 2-398
 - SIO_delete function 2-399
 - SIO_flush function 2-400
 - SIO_get function 2-401
 - SIO_idle function 2-403
 - SIO_issue function 2-404
 - SIO_ISSUERECLAIM streaming model
 - DPI and 2-114
 - SIO_put function 2-406
 - SIO_ready function 2-408
 - SIO_reclaim function 2-409
 - SIO_reclaimx function 2-412
 - SIO_segid function 2-413
 - SIO_select function 2-414
 - SIO_staticbuf function 2-416
 - sleep
 - for tasks 2-511
 - software generator driver 2-74
 - software interrupt manager 2-428
 - software interrupts
 - address of currently executing interrupt 2-454
 - attributes of, returning 2-443
 - attributes of, setting 2-455

- callable functions A-2
- checking to see if in context of 2-448
- clearing 2-437
- context of, determining if in 2-448
- deleting 2-440
- disabled, manipulating variables while 2-2
- enabling 2-442
- mailbox for, clearing bits 2-434, 2-436
- mailbox for, decrementing 2-439
- mailbox for, incrementing 2-447
- mailbox for, OR mask with value in 2-449, 2-450
- mailbox for, returning value of 2-445
- posting 2-449, 2-450, 2-451
- priority mask, returning 2-446
- raising priority of 2-452
- restoring priority of 2-452
- split driver 2-117
- sprintf function
 - not callable from SWI or HWI A-10
- srand function
 - not callable from SWI or HWI A-10
- SSR register, conventions for B-5
- stack
 - allocating for tasks 2-485
 - checking for overflow 2-488
- stack size for tasks 2-483, 2-485
- stackable gather/scatter driver 2-98
- stackable overlap driver 2-110
- stackable split driver 2-117
- stackable streaming transformer driver 2-119
- STATICPOOL allocator 2-331
- statistics
 - resetting values of 2-425
 - saving values for delta 2-426
 - tracing 2-473
 - updating 2-423
 - updating with delta 2-424
- statistics object manager 2-418
- status bit TSR.INT B-5
- std.h library
 - functions in 2-516
 - macros in, list of 1-20
- stdlib.h library
 - functions in 2-516
 - functions in, list of 1-20
- stream I/O manager 2-388
- streams
 - acquiring static buffer from 2-416
 - closing 2-399
 - device for, determining if ready 2-408
 - device for, selecting ready device 2-414
 - device-dependent control operation, issuing 2-398
 - flushing 2-400
 - getting buffer from 2-401
 - idling 2-403
 - memory segment used by, returning 2-413
 - opening 2-395
 - putting buffer to 2-406
 - requesting buffer from 2-409, 2-412
 - sending buffer to 2-404
 - size of buffers used by, determining 2-394
- strftime function
 - not callable from SWI or HWI A-10
- String data type 1-5
- strings 1-5
 - enumerated 1-5
- STS module 2-418
 - configuration properties 2-418
 - function callability A-8
 - functions in, list of 1-17, 2-418
 - global properties 2-421
 - object properties 2-421
- STS_add function 2-423
- STS_delta function 2-424
- STS_reset function 2-425
- STS_set function 2-426
- sum statistics for data series 2-419
- SWE instruction C-2
- SWI module 2-428
 - configuration properties 2-429
 - function callability A-8
 - functions in, list of 1-18, 2-428
 - global properties 2-432
 - object properties 2-432
 - statistics units for 2-419
 - trace types for 2-473
- SWI_andn function 2-434
- SWI_andnHook function 2-436
- SWI_create function 2-437
- SWI_dec function 2-439
- SWI_delete function 2-440
- SWI_enable function 2-442
- SWI_getattr function 2-443
- SWI_getmbox function 2-445
- SWI_getpri function 2-446
- SWI_inc function 2-447
- SWI_isSWI function 2-448
- SWI_or function 2-449
- SWI_orHook function 2-450
- SWI_post function 2-451
- SWI_raisepri function 2-452
- SWI_restorepri function 2-453
- SWI_self function 2-454
- SWI_setattr function 2-455
- synchronous read 2-159
- synchronous write 2-163
- SYS module 2-457
 - configuration properties 2-457
 - function callability A-9
 - functions in, list of 1-18, 2-457

- global properties 2-458
- object properties 2-459
- SYS_abort function 2-459, 2-460
- SYS_atexit function 2-461
- SYS_EALLOC status A-11
- SYS_EBADIO status A-11
- SYS_EBADOBJ status A-11
- SYS_EBUSY status A-11
- SYS_EDEAD status A-11
- SYS_EDOMAIN status A-11
- SYS_EEOF status A-11
- SYS_EFREE status A-11
- SYS_EINVAL status A-11
- SYS_EMODE status A-11
- SYS_ENODEV status A-11
- SYS_ENOTFOUND status A-11
- SYS_ENOTIMPL status A-11
- SYS_error function 2-459, 2-462
- SYS_ETIMEOUT status A-11
- SYS_EUSER status A-11
- SYS_exit function 2-459, 2-463
- SYS_OK status A-11
- SYS_printf function 2-459, 2-464
- SYS_putchar function 2-459, 2-472
- SYS_sprintf function 2-466
- SYS_vprintf function 2-459, 2-468
- SYS_vsprintf 2-470
- system clock 2-52
 - choosing module driving 2-484
 - incrementing in TSK module 2-504, 2-513
 - PRD module driving 2-484
 - returning current value of 2-514
- system clock manager 2-51
- system events
 - exceptions C-2
- system log 2-216
 - writing error message to 2-222
 - writing program-supplied message to 2-226
- system settings, managing 2-457

T

- target board name 2-133
- task environment
 - setting 2-506
- task manager 2-478
- task scheduler
 - disabling 2-495
 - enabling 2-496
- tasks
 - callable functions A-2
 - checking if in context of 2-503
 - creating 2-489
 - currently executing, handle of 2-505

- default priority of 2-483
- delaying execution of (sleeping) 2-511
- deleting 2-492
- environment pointer for, getting 2-498
- error number for, getting 2-499
- error number for, setting 2-507
- execution priority of, setting 2-508
- handle of STS object, getting 2-502
- incrementing system clock for 2-504, 2-513
- name of, getting 2-500
- not shutting down system during 2-487
- priority of 2-486, 2-501
- resetting time statistics for 2-509
- status of, retrieving 2-512
- terminating 2-497
- updating time statistics for 2-493
- yielding to task of equal priority 2-515
- Tconf
 - underscore preceding C function names 1-4, 2-60, 2-207, 2-432
- terminating program 2-463
- threads
 - idle thread manager 2-205
 - interrupt threads 2-431
 - register modification and B-2
 - RTS functions callable from 2-517
- tick count, determining 2-338
- tick counter (see PRD module, ticks)
- timer 2-51, 2-52
 - counts per millisecond 2-61
 - resetting 2-67
 - specifying 2-54
- timer counter 2-53
- timer mode 2-54
- timer period register
 - resetting 2-67
- timestamps 2-218
- trace buffer
 - memory segment for 2-458
 - size of 2-458
- trace manager 2-473
- tracing
 - disabling 2-475
 - enabling 2-476
 - querying enabled trace types 2-477
- transform function, DGS driver 2-98
- transformer driver 2-119
- transformers 2-119
- transports array 2-145, 2-280
- transports, MSGQ module 2-277
- TRC module 2-473
 - function callability A-9
 - functions in, list of 1-19, 2-473
- TRC_disable function 2-475
- TRC_enable function 2-476

TRC_query function 2-477
 true/false values 1-5
 TSCH register, conventions for B-6
 TSCL register, conventions for B-6
 TSK module 2-478
 configuration properties 2-479
 function callability A-9
 functions in, list of 1-19, 2-478
 global properties 2-483
 object properties 2-485
 statistics units for 2-419
 system clock driven by 2-484, 2-504, 2-513
 trace types for 2-473
 TSK_checkstacks function 2-488
 TSK_create function 2-489
 TSK_delete function 2-492
 TSK_deltatime function 2-493
 TSK_disable function 2-495
 TSK_enable function 2-496
 TSK_exit function 2-497
 TSK_getenv function 2-498
 TSK_geterr function 2-499
 TSK_getname function 2-500
 TSK_getpri function 2-501
 TSK_getsts function 2-502
 TSK_isTSK function 2-503
 TSK_itick function 2-504
 TSK_self function 2-505
 TSK_setenv function 2-506
 TSK_seterr function 2-507
 TSK_setpri function 2-508
 TSK_settime function 2-509
 TSK_sleep function 2-511
 TSK_stat function 2-512
 TSK_tick function 2-513
 TSK_time function 2-514
 TSK_yield function 2-515
 TSR register, conventions for B-5
 TSR.INT status bit B-5

U

u16tou32 function 2-100
 u32tou16 function 2-100
 u32tou8 function 2-100
 u8toi16 function 2-100
 u8tou32 function 2-100
 underscore
 preceding C function names 1-4, 2-60, 2-207, 2-432
 unsigned integers 1-5
 AND operation 2-4
 clearing 2-6
 decrementing 2-8
 incrementing 2-10
 OR operation 2-12
 setting 2-14

V

variables
 manipulating with interrupts disabled 2-2
 vectID parameter 2-198
 vfprintf function
 not callable from SWI or HWI A-10
 vprintf function
 not callable from SWI or HWI A-10
 vsprintf function
 not callable from SWI or HWI A-10

W

wait for cache operation 2-26
 writeback cache 2-16
 writer, of data pipe 2-311
 writers, MSGQ module 2-275, 2-278
 WUGEN registers 2-187, 2-189, 2-194, 2-201, 2-202